




Forest Service
U.S. DEPARTMENT OF AGRICULTURE

Forest Products Laboratory | General Technical Report FPL–GTR–299 | March 2025

Wood and Timber Condition Assessment Manual

Third Edition

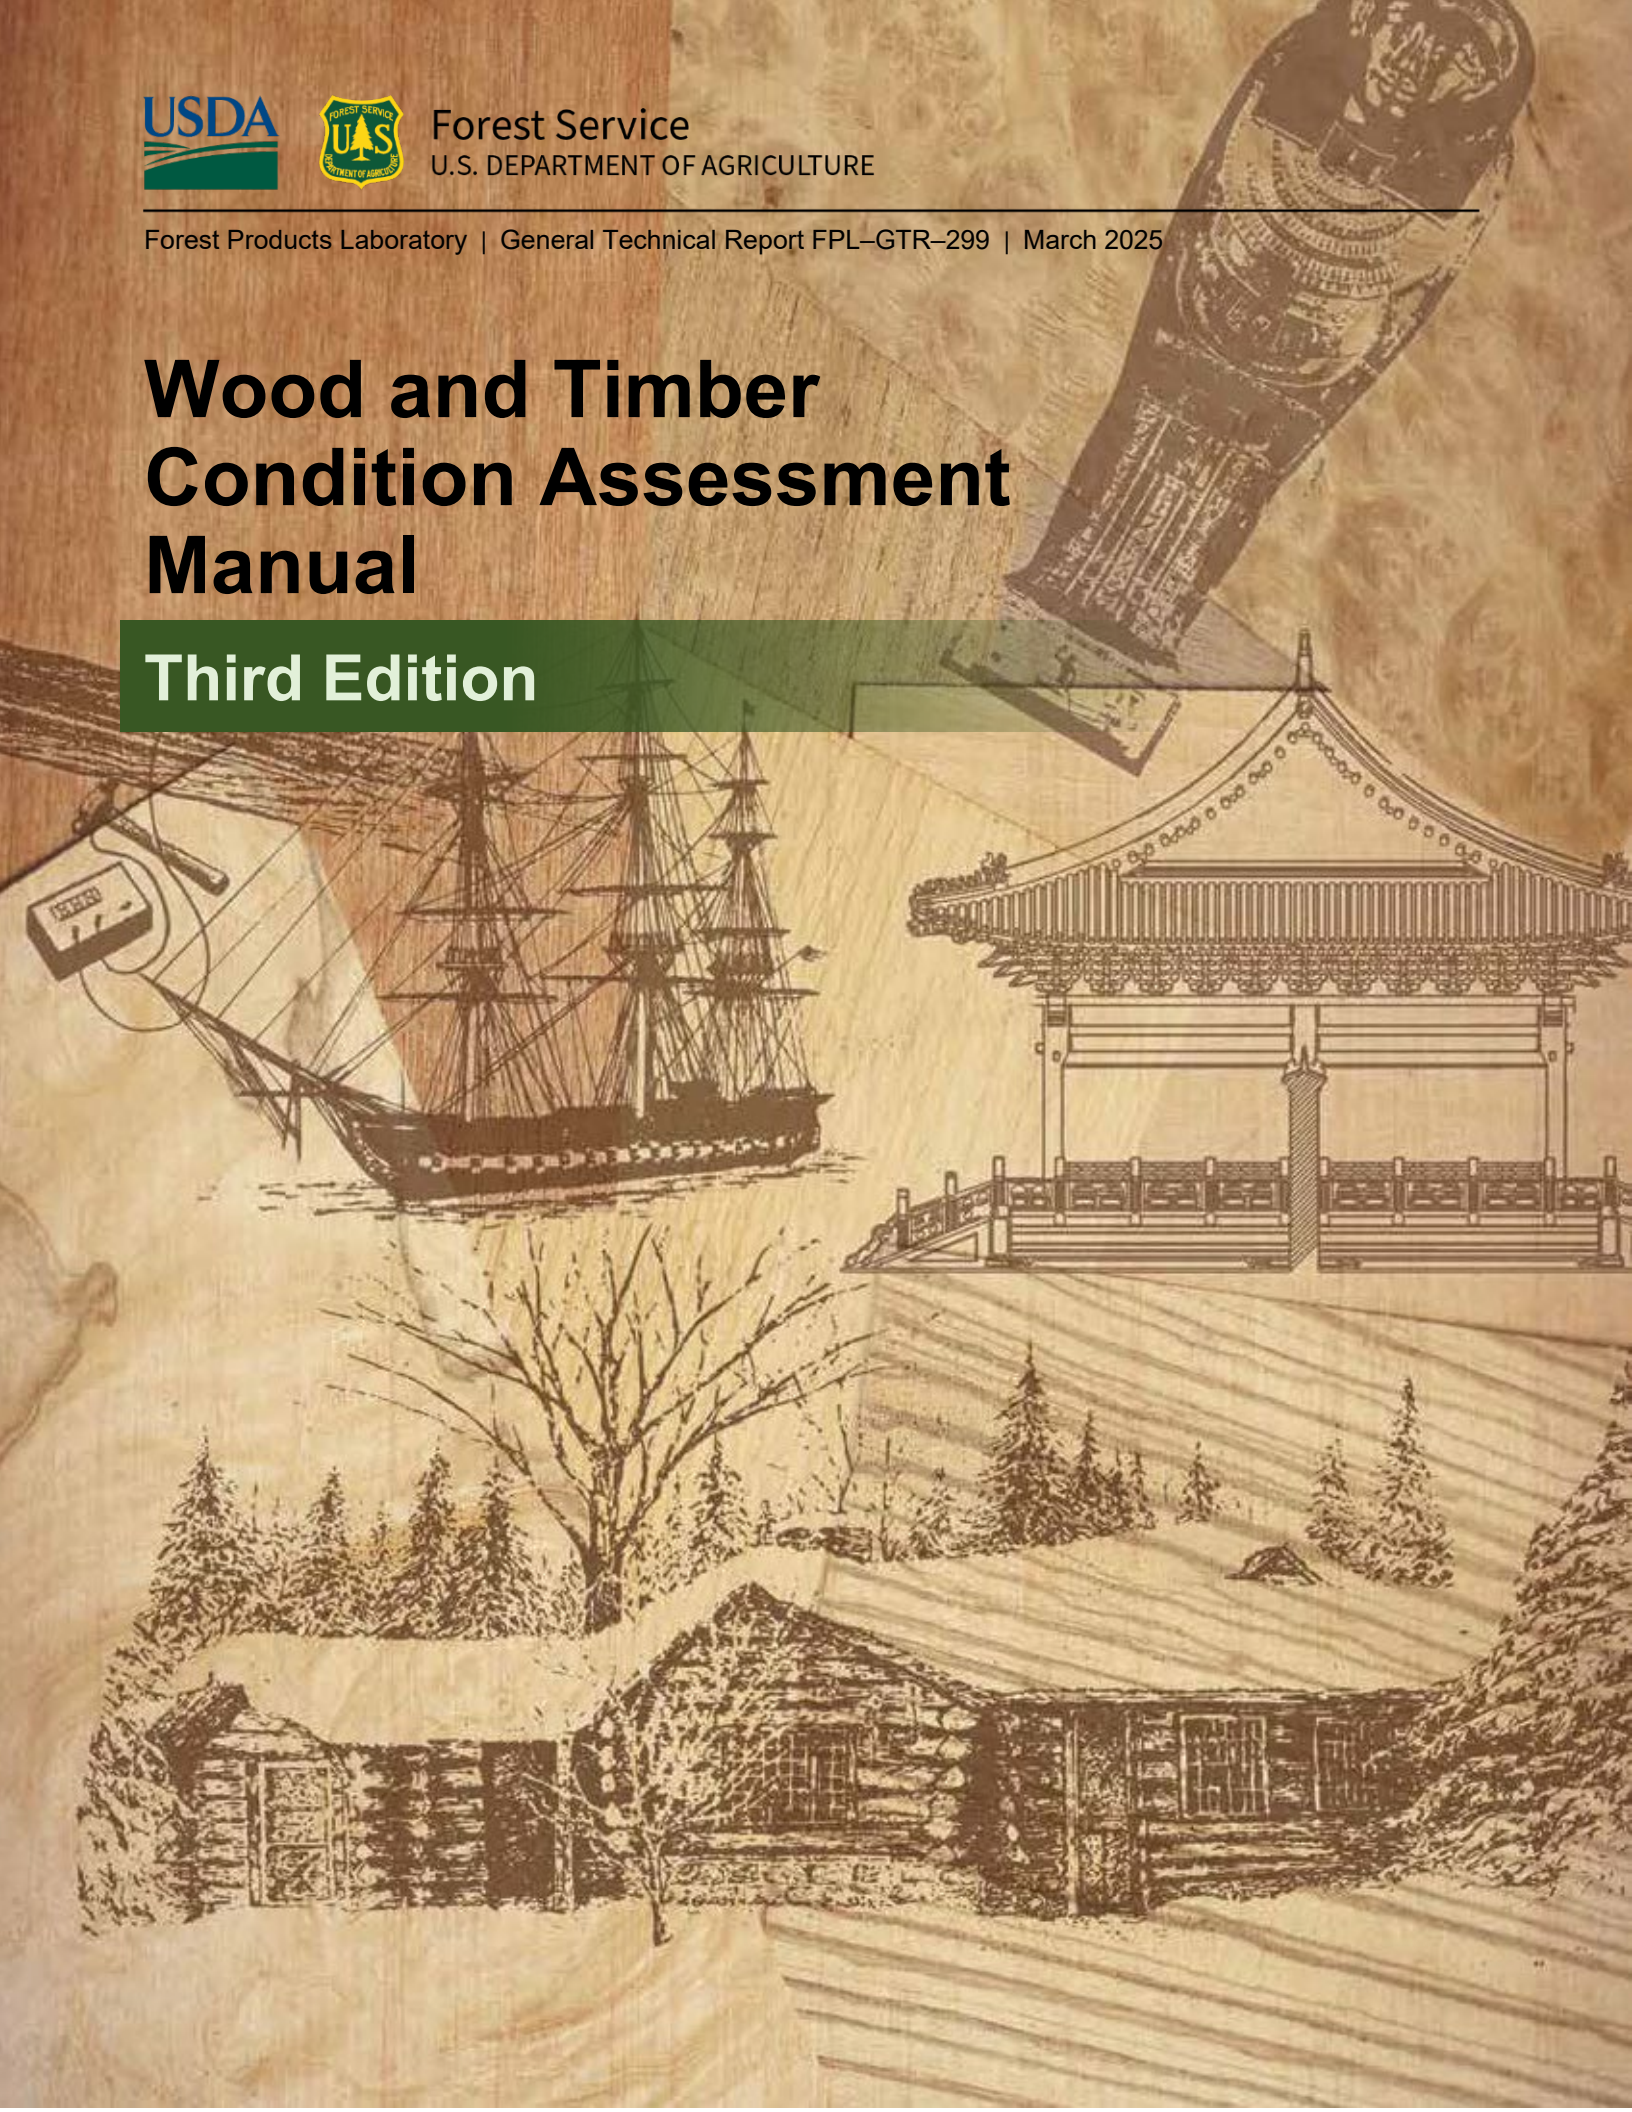

Abstract

This report summarizes information on condition assessment of in-service wood, including visual inspection of wood and timbers, use of ultrasound and probing/boring techniques for inspection, and assessment of wood and timbers that have been exposed to fire. The report also includes information on assigning allowable design values for in-service wood.

Keywords: Wood, timbers, condition assessment, visual, coring, probing, ultrasound, post-fire assessment

March 2025

Ross, Robert J.; Wang, Xiping (Eds). Wood and timber condition assessment manual: third edition. General Technical Report FPL-GTR-299. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 109 p. <https://doi.org/10.2737/FPL-GTR-299>

USDA Forest Service, Forest Products Laboratory
One Gifford Pinchot Drive, Madison, WI, USA 53726
(608) 231-9200
SM.FS.MailroomFPL@usda.gov

This and many other Forest Service research publications are available for download through TreeSearch at <https://research.fs.usda.gov/treesearch/>.

The Forest Products Laboratory is maintained in cooperation with the University of Wisconsin.

The use of trade or firm names in this publication is for reader information and does not imply endorsement by the United States Department of Agriculture (USDA) of any product or service.

In accordance with Federal civil rights law and U.S. Department of Agriculture (USDA) civil rights regulations and policies, the USDA, its Agencies, offices, and employees, and institutions participating in or administering USDA programs are prohibited from discriminating based on race, color, national origin, religion, sex, disability, age, marital status, family/parental status, income derived from a public assistance program, political beliefs, or reprisal or retaliation for prior civil rights activity, in any program or activity conducted or funded by USDA (not all bases apply to all programs). Remedies and complaint filing deadlines vary by program or incident.

Persons with disabilities who require alternative means of communication for program information (e.g., Braille, large print, audiotape, American Sign Language, etc.) should contact the responsible Agency or USDA's TARGET Center at (202) 720-2600 (voice and TTY) or contact USDA through the Federal Relay Service at (800) 877-8339. Additionally, program information may be made available in languages other than English.

To file a program discrimination complaint, complete the USDA Program Discrimination Complaint Form, AD-3027, found online at [How to File a Program Discrimination Complaint](#) and at any USDA office or write a letter addressed to USDA and provide in the letter all of the information requested in the form. To request a copy of the complaint form, call (866) 632-9992. Submit your completed form or letter to USDA by: (1) mail: U.S. Department of Agriculture, Office of the Assistant Secretary for Civil Rights, 1400 Independence Avenue, SW, Washington, D.C. 20250-9410; (2) fax: (202) 690-7442; or (3) email: program.intake@usda.gov.

USDA is an equal opportunity provider, employer, and lender.

Wood and Timber Condition Assessment Manual

Third Edition

Edited by

**Robert J. Ross
Xiping Wang**

**U.S. Department of Agriculture
Forest Service
Forest Products Laboratory
Madison, Wisconsin, USA**

Contents

Foreword iii

Contributors iv

Preface v

Chapter 1—Visual Inspection 1

Chapter 2—Sounding, Probing, Moisture Content, and Resistance
Drilling Techniques 7

Chapter 3—Inspection of Timber Structures Using Stress Wave Timing
Nondestructive Evaluation Tools 15

Chapter 4—Advanced Inspection Techniques 25

Chapter 5—Post-Fire Assessment of Structural Wood Members 35

Chapter 6—Estimation of Design Values for In-Service Solid Wood 49

Chapter 7—Estimating Residual Strength and Stiffness 81

Chapter 8—Condition Assessment Report 91

Chapter 9—Summaries from Actual Inspections 95

Foreword

The *Wood and Timber Condition Assessment Manual* is a very valuable resource for wood inspection and design professionals. The authors are leaders in this field.

I have used, and continue to use, the *Manual* in my teaching program for undergraduate and graduate students. It is an excellent source of solid scientific knowledge on nondestructive evaluation techniques and their application to wood and wood structures.

More importantly, I use information in the *Manual* in my university extension and outreach efforts. Beijing Forestry University frequently receives requests for technical assistance on assessing the condition and integrity of many historically significant structures in China, including those in UNESCO World Heritage sites. These efforts have greatly enhanced the conservation and preservation of China's cultural heritage and have resulted in standards that now guide all condition assessment work on historic timber structures in China.

This update of the *Manual* contains new information and useful updates regarding estimation of the strength of in-service wood.

Many thanks to the authors for their research efforts on this topic and for the preparation of this practical *Manual*.

Houjiang Zhang, PhD
Professor, Beijing Forestry University

Contributors

Brian Brashaw, Assistant Director, Wood Innovations, U.S. Department of Agriculture, Forest Service, Washington, D.C., USA, brian.k.brashaw@usda.gov

Zhiyong Cai, Supervisory Research Materials Engineer, U.S. Department of Agriculture, Forest Service, Forest Products Laboratory, Madison, Wisconsin, USA, zhiyong.cai@usda.gov

Laurice M. Spinelli Correa, Assistant Research Professor, Department of Sustainable Bioproducts, Mississippi State University, Starkville, Mississippi, USA, ls2090@msstate.edu

Laura E. Hasburgh, Research Materials Engineer, U.S. Department of Agriculture, Forest Service, Forest Products Laboratory, Madison, Wisconsin, USA, laura.e.hasburgh@usda.gov

Brian M. Kukay, Butte, Montana, USA

Brunela Pollastrelli Rodrigues, Assistant Professor of Wood Utilization and Biomaterials, Forestry and Environmental Conservation Department, Clemson University, Clemson, South Carolina, USA, brunelr@clemson.edu

Robert J. Ross, Supervisory Research General Engineer (retired), U.S. Department of Agriculture, Forest Service, Forest Products Laboratory, Madison, Wisconsin, USA, robert.j.ross@usda.gov

C. Adam Senalik, Research General Engineer, U.S. Department of Agriculture, Forest Service, Forest Products Laboratory, Madison, Wisconsin, USA, christopher.a.senalik@usda.gov

Rubin Shmulsky, Department Head and Warren S. Thompson Professor, Department of Sustainable Bioproducts, Mississippi State University, Starkville, Mississippi, USA, rs26@msstate.edu

Xiping Wang, Research Forest Products Technologist, U.S. Department of Agriculture, Forest Service, Forest Products Laboratory, Madison, Wisconsin, USA, xiping.wang@usda.gov

Preface

The *Wood and Timber Condition Assessment Manual* was first published in 2004 in response to a need for a practical, comprehensive manual on inspection of wood in service. The manual was based on research studies, inspections, and lectures by the authors. The 2004 *Wood and Timber Condition Assessment Manual* proved to be a widely used reference document and a primary technical source for inspection professionals worldwide. User feedback included many positive comments about description of the various inspection tools available and post-fire assessment of structural wood members. Users did express a strong desire to have information on the estimation of allowable design values for in-service wood in future editions.

We relied heavily on that feedback in preparation of the *Wood and Timber Condition Assessment Manual—Second Edition*. Specifically, a procedure for estimating allowable design values for in-service wood was developed and included in the 2014 edition.

In preparing this third edition of *Wood and Timber Condition Assessment Manual*, I had three objectives: (1) to update the existing chapters to reflect advancements in inspection methods; (2) to develop material that presents a wide range of advanced inspection techniques and technologies; and (3) to provide the necessary background information and practical application considerations for estimating the properties of in-service wood.

As with the earlier editions, I worked with well-respected technical authorities in preparing this edition. I thank the technical contributors to this edition of the manual: Brian Brashaw, Zhiyong Cai, Laura E. Hasburgh, C. Adam Senalik, Xiping Wang, Brian M. Kukay, Laurice M. Spinelli Correa, Brunela Pollastrelli Rodrigues, and Rubin Shmulsky.

Special thanks to my good friends and colleagues, Tom Williamson, PhD, P.E. and Professor Houjiang Zhang, PhD, Beijing Forestry University, for their in-depth technical reviews. I have relied heavily on both for their strong technical reviews numerous times; their technical knowledge, experience, and extraordinary level of professionalism have added much to many documents that are used around the world—thank you! A note of thanks to Greg Fehr, P.E. (deceased) for his reviews of previous editions.

I acknowledge the following for the excellent artwork on the cover—Beijing Research Institute of Architectural Heritage; Judy Hesterberg, Hancock, Michigan; and Tivoli Gough, USDA Forest Products Laboratory. Financial support for this third edition of *Wood and Timber Condition Assessment Manual* from the USDA Forest Service is gratefully acknowledged.

A special note of thanks to Jim Anderson and Barb Hogan for their endless patience with us in the preparation of this *Manual*. They are the best editors in the world, and great friends of mine!

This edition of the *Wood and Timber Condition Assessment Manual* is dedicated to our good friend and colleague, Professor Roy F. Pellerin. Roy led the nondestructive evaluation of wood research program at Washington State University for over 40 years. Roy was a well-respected scientist and engineer, worldwide, and he served the public in a professional manner for over 40 years. I had the pleasure of speaking with Roy recently. He remembered with pride the condition assessment he and his students completed of Washington State University's football stadium, noting it was "the highlight of my career." A summary of that assessment is included in Chapter 9. Roy's reputation is impeccable, and his voice still carries much weight in the nondestructive evaluation field.

The *Wood and Timber Condition Assessment Manual—Third Edition* is available in digital format from the USDA Forest Service Forest Products Laboratory website.

Robert J. Ross

Visual Inspection

Robert J. Ross
Rubin Shmulsky

The simplest method for locating deterioration is visual inspection—observing the structure for signs of actual or potential deterioration, noting areas that require further investigation. When assessing the condition of a structure, visual inspection should never be the sole method used. Visual inspection requires strong light and generally is useful for detecting intermediate or advanced surface decay, water damage, insects, corrosion, mechanical damage, or failed members.

Whether investigating one small member or multiple members in a complex structure, note-taking and record-keeping are important. Photographs, sketches, reference numbers, and detailed notes can help in subsequent reporting and provide important context for future inspections over the course of the service life of a member, subassembly, or structure.

Visual inspection cannot always detect early-stage decay, when remedial treatment is most effective. In some cases, not all members or all sides or faces of a given member are accessible. Accessibility to each member, or lack thereof, can be important components of an inspection report. During an inspection, the following signs of deterioration should be investigated.

Fruiting Bodies

Although they do not indicate the amount or extent of decay, fruiting bodies provide a positive indication of advanced fungal attack. Some fungi produce fruiting bodies after small amounts of decay have occurred; others develop only after decay is extensive. When fruiting bodies are present, they indicate the possibility of a serious decay problem.

Figures 1.1 and 1.2 show fruiting bodies that were observed during inspection of Washington State University's football stadium. Figure 1.2 shows the extent of deterioration inside the beam. Note that in Figure 1.1, the fruiting body is located where two timber beams (placed end-to-end) rest on a column. This situation allows for moisture accumulation and subsequent absorption by the timbers. Figure 1.3 illustrates the potential extent of deterioration in both beams.



Figure 1.1—Fruiting body between two beams.



Figure 1.2—Fruiting bodies can indicate extensive damage inside the beam.

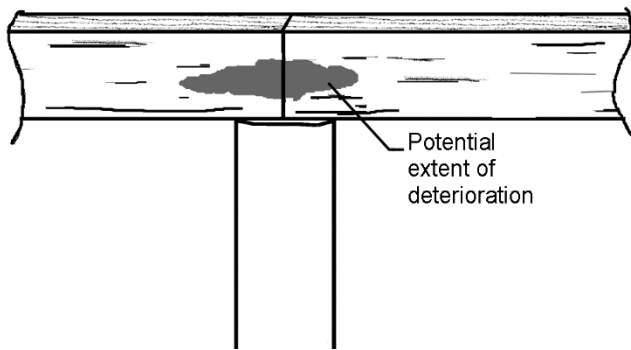


Figure 1.3—Potential deterioration in both beams.



Figure 1.4—The timber beam's outer shell buckled as a result of interior deterioration.

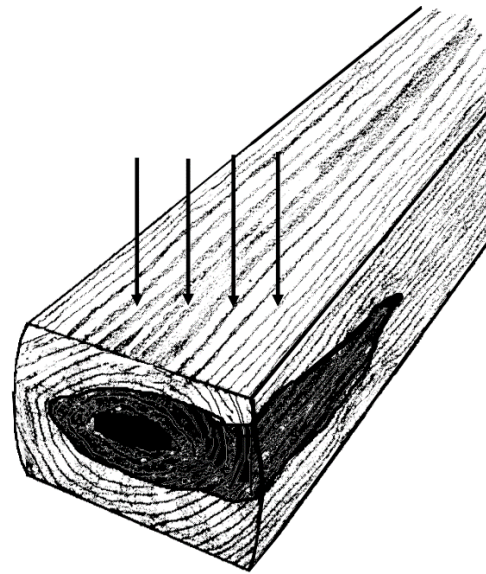


Figure 1.5—Because of interior deterioration, the outer shell can collapse when the timber is stressed in bearing.



Figure 1.6—The ceiling panels were stained and discolored.

Sunken Faces or Localized Collapse

Sunken faces or localized surface depressions can indicate underlying decay. Decay voids or pockets may develop close to the surface of the member, leaving a thin, depressed layer of intact or partially intact wood at the surface. Crushed wood can also be an indicator of decay.

Figure 1.4 shows a timber beam that failed in bearing (compression perpendicular to grain). Such collapse indicates that the inner portion of the timber is severely deteriorated. Figure 1.5 illustrates that when the inner portion of the timber is severely deteriorated, the outer shell can collapse when the timber is stressed in bearing.

Staining or Discoloration

Staining or discoloration of wood indicates that it has been subjected to water and potentially has a high moisture content suitable to support decay. Rust stains from connection hardware also are a good indication of wetting.

Inspection of the Red Cliff Recreation Hall near Bayfield, Wisconsin, revealed severe staining and discoloration of the fiberboard product used in the ceiling (Figs. 1.6 and 1.7). Discoloration and mold indicated that the structure had been exposed to moisture and the wood could possibly be deteriorated. Removal of several ceiling panels revealed that the fiberglass insulation above them was saturated with water (Fig. 1.8). This moisture provided an ideal environment for the growth of mold and decay fungi. As a consequence of this moisture exposure, wood members in the roof and walls also contained areas of deterioration (Fig. 1.9).

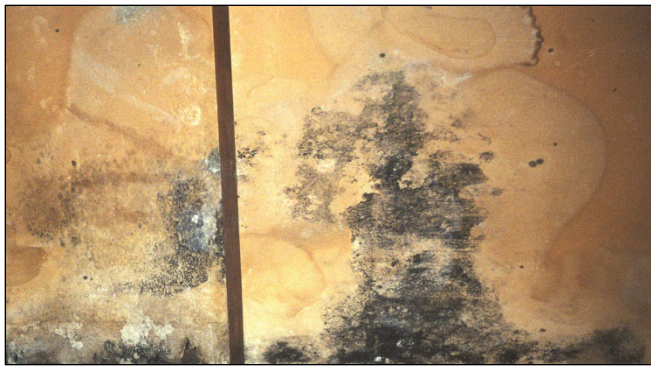


Figure 1.7—Close-up of the severely stained and discolored ceiling panels.



Figure 1.8—Removing the ceiling panels revealed that the fiberglass insulation was saturated with water.



Figure 1.9—As a consequence of the moisture exposure, wood members in the roof and walls also contained areas of deterioration.



Figure 1.10—Beetle damaged section of a board. Note many of the holes show fungal staining about their perimeter. Also note, many of the holes / tunnels are not perpendicular to the surface of the board which indicates the holes were present in the log at the time the board was milled therefrom.

Figure 1.10 shows a piece of lumber with numerous remnant beetle galleries and holes. Many of the holes show fungal staining. Holes that are generally all round and perpendicular to the face or edge of a board indicate that the board was infected, the beetles matured therein, and exited through the surface. Holes that are not perpendicular to the face of a board often indicate that the board was sawn from an infected log and that the galleries were present at the time the board was sawn from the log, as appears to be the case in Figure 1.10.

Insect Activity

Insect activity is visually characterized by holes, frass, and powder posting. The presence of insects may also indicate the presence of decay. In some cases, insects carry fungal spores along with them as they bore into wood, which can cause subsequent discoloration around their remnant holes. In other cases, insects may favor wet or partially decayed wood.

Figure 1.11 is a piling from a bridge. Initially deteriorated by decay, carpenter ants were attracted to the softened wood and continued to destroy the piling. Once the flashing was removed, the severe deterioration could be readily observed.

Plant or Moss Growth

Plant or moss growth in splits and cracks, or soil accumulation on the structure, indicates that adjacent wood has been at a relatively high moisture content for a sustained period and may sustain growth of decay fungi. Figure 1.12 shows a stack of timber mats with plants and a small hardwood sapling growing out the top. These mats are destined to be stripped of their metal hardware, chipped, and mulched or used for boiler fuel.



Figure 1.11—Damage to a bridge piling.



Figure 1.12—Flora, including a hardwood sapling, growing from the surface of a stack of wet timber mats. These mats are evidently decayed and ready to be stripped of their metal hardware, chipped, and used for mulch or boiler fuel.



Figure 1.13—Metal plate connectors were cut and bent so that the webs could be removed. This should *never* be done.

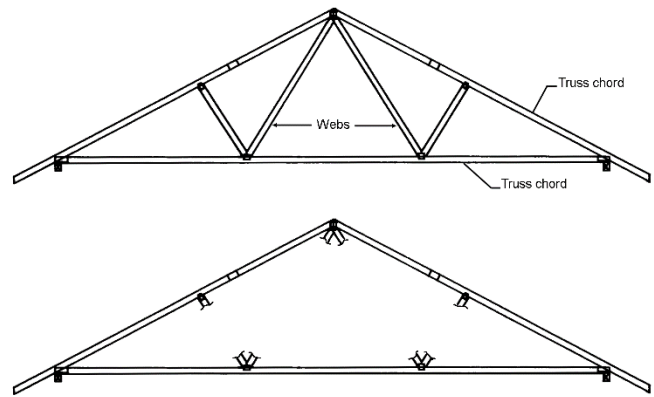


Figure 1.14—The homeowner removed the webs from the truss leaving only the chords to support the roof. This should *never* be done.



Figure 1.15—Only the outer portion of this timber contains preservatives.

Missing Members

Frequently, it is observed that entire structural members have been removed. Figures 1.13 and 1.14 show an in-service wood truss that had its webs removed by the homeowner with the intent of creating living space in the attic. This should *never* be done and *must* be noted in any inspection report. Any change to web or chord members *must* be reported. In some cases, entire assemblies are missing. For example, instances have occurred where truss spacing was specified on blueprints at 16 in. on center but due to miscommunication were installed at 24 in. on center. In such cases, routine snow loading can cause collapse.

Check and Splits

Checks and splits in members can indicate a weakened member. The large timber shown in Figure 1.15 was treated with preservatives. Note that only the outer portion of the timber contains preservatives. (Depth of preservative



Figure 1.16—A floor joist was cut to make room for plumbing. This should *never* be done.

treatment depends on species of wood and characteristics of treatment.) If a check or split develops in the timber that is of sufficient depth, the inner untreated wood is susceptible to moisture and decay fungi. Checks are normally superficial and do not affect structural performance. The effects checks and splits have on structural performance are discussed in detail in Chapter 6.

Alterations

Alterations can weaken members. Figure 1.16 shows a floor joist found during an inspection of the Red Cliff Recreation Hall. A section of the bottom, or tension, side of the joist was removed to facilitate plumbing. This type of modification can severely weaken the joist. This should *never* be done and *must* be noted in any inspection report. This type of modification, and the drilling of holes in wood framing members for plumbing or ductwork, can severely weaken the joist.

Sounding, Probing, Moisture Content, and Resistance Drilling Techniques

Laurice M. Spinelli Correa
Brian Brashaw

Simple mechanical tests are frequently used for in-service inspection of wood elements in timber structures. For example, hammer sounding and probing are used in combination with visual inspection to conduct an initial assessment of the condition of a member. The underlying premise for such tests is that degraded wood is relatively soft and might sound hollow, with low resistance to penetration.

Sounding and Probing

One of the most commonly used techniques for detecting deterioration is to hit the surface of a member with a hammer or other object. Based on the sound quality or surface condition, an inspector can identify areas of concern for further investigation using advanced tools like a stress wave timer or resistance microdrill. Deteriorated areas typically have a hollow or dull sound that may indicate internal decay. A pick hammer commonly used by geologists is recommended for use in timber structures because it allows inspectors to combine the use of sound and the pick end to probe the element (Fig. 2.1).

Probing with a moderately pointed tool, such as an awl or knife, locates decay near the wood surface as indicated by excessive softness or a lack of resistance to probe penetration and the breakage pattern of the splinters. A brash break indicates decayed wood, whereas a splintered break indicates sound wood. Although probing is a simple inspection method, experience is required to interpret results. Care must be taken to differentiate between decay and water-softened wood, which may be sound but somewhat softer than dry wood. Assessing damage in soft-textured woods, such as western redcedar, is sometimes difficult. Figure 2.2 shows an awl probe inserted into a split to assess depth and presence of decay.

Probes can also be used to assess the depth of splits and checks in timber members. Flat-bladed probes, such as pocket knives or feeler gauges, are recommended for use in this process. This is also important to understanding the effect of checks and cracks in other advanced techniques



Figure 2.1—A hammer pick is an effective tool for initial assessments of timber bridge elements.



Figure 2.2—An awl is used to assess depth and presence of decay in a horizontal split.



Figure 2.3—Probes are used to assess depth of cracks, checks, and through splits in timber bridge elements.

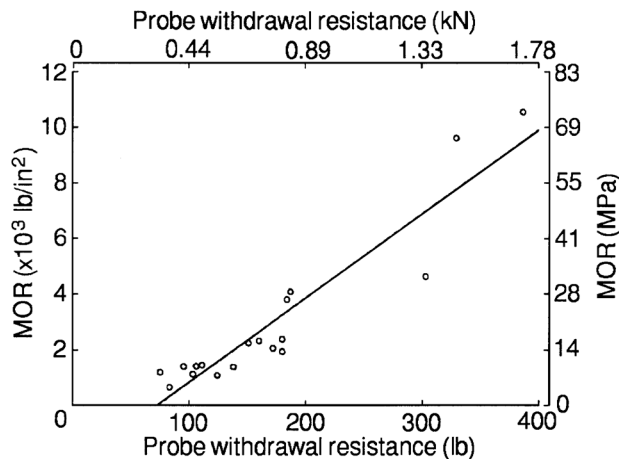


Figure 2.4—Relationship between withdrawal resistance and residual strength. MOR, modulus of rupture.

such as stress wave inspection. Figure 2.3 shows the use of probes to assess the depth of checks and cracks in timber bridge elements.

Screw Withdrawal Testing

Screw withdrawal testing has been used as an indicator of biological deterioration in timber members. Additional research has correlated screw withdrawal resistance to physical and mechanical properties such as density, modulus of elasticity, modulus of rupture, and shear modulus. These tests are typically conducted by extracting a screw inserted at an angle perpendicular to the surface of the timber specimen. Although these tests are dependent on local material condition, information from both deteriorated and good material locations can be helpful during wood structure evaluations.

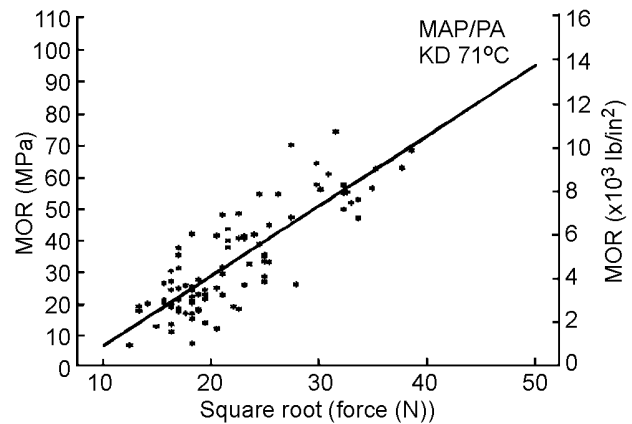


Figure 2.5—Relationship of screw-withdrawal force to bending strength for 12-mm- (1/2-in.-) thick plywood. MAP, mono-ammonium phosphate; PA, phosphoric acid; KD, dry-kiln drying temperature; and MOR, modulus of rupture.

A quantitative test based on the premise that underlies mechanical probing tests (relative softness of degraded wood and consequent low resistance to probe penetration) was developed by Talbot (1982). His test differed from the probing-type test in that instead of evaluating penetration resistance of a probe, it examined withdrawal resistance of a threaded probe, similar to a wood screw, inserted into a member. Talbot believed that a correlative relationship between withdrawal resistance and residual strength should exist and would be relatively easy to determine. He conducted an experiment using several small Douglas-fir beams in various stages of degradation as a result of exposure to decay fungi. Prior to testing the wood to failure in bending, probe withdrawal resistance was measured at the neutral axis of the beams. Bending strength and corresponding probe resistance values were then compared. The results revealed a relationship between withdrawal resistance and residual strength (Fig. 2.4). Talbot used this test in conjunction with stress wave techniques to assess the extent of damage to solid-sawn timbers in the football stadium at Washington State University.

A modification to Talbot's technique was developed for use in evaluating in-service strength of fire-retardant-treated (FRT) plywood in the early 1990s. A portable screw withdrawal system was utilized to inspect FRT plywood and identify substantial degrade. An extensive research effort was devoted to the use of Talbot's test for assessing residual strength of in-service panel products treated with fire retardant. Winandy et al. (1998) designed and conducted tests on a large sample of plywood specimens that were treated with fire-retardant chemicals and subsequently exposed to elevated temperatures. Screw withdrawal loads were determined for each specimen prior to static bending tests. Correlative relationships were then established between screw withdrawal strength and static bending properties (Fig. 2.5). More recent evaluations were

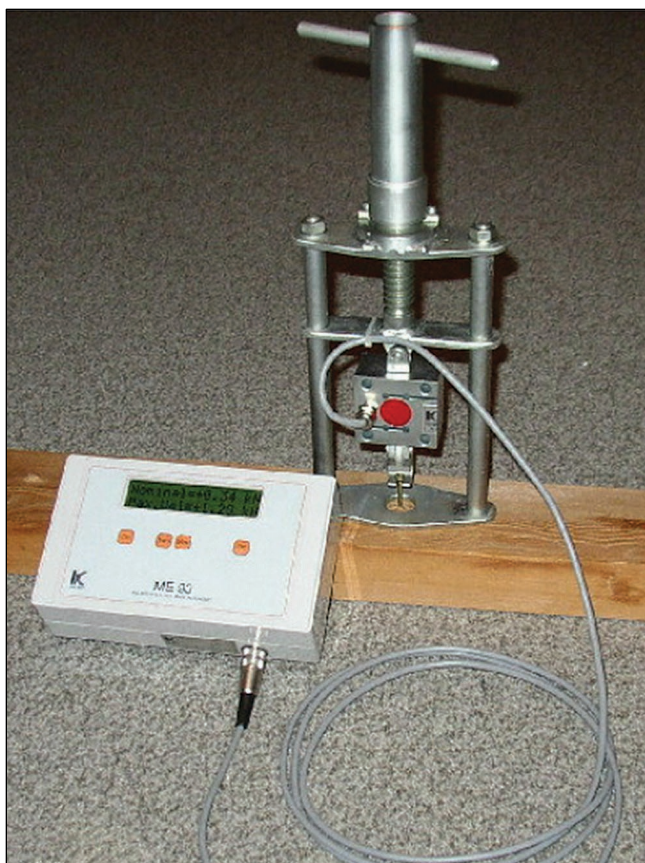


Figure 2.6—Screw withdrawal resistance meter that can be used to assess local wood quality.



Figure 2.7—A pin-style moisture meter is used to determine moisture content of timber elements.

completed by other researchers and commercial companies (Cai et al. 2002, Fakopp 2014). Figure 2.6 shows one commercial screw withdrawal resistance unit.

Moisture Content Inspection

Moisture meters can be used effectively in inspecting timber elements. The presence of moisture is required for decay to occur in timber. Typically, moisture conditions in timber of less than 20% will not allow decay to occur; as moisture increases above 20%, the potential for decay increases.

Serious decay occurs only when the moisture content of the wood is above 28% to 30%. This occurs when dry wood is exposed to direct wetting through rain, moisture infiltration, or contact with ground water or bodies of water. Wood decay fungi will not affect wood that is fully saturated with water and without oxygen. Timber members (such as bridge piling) should be carefully inspected near the water line because rivers and streams have varying water levels through the year and from year to year. Figure 2.7 shows the use of moisture meters with long pins (up to 3 in. (75 mm) long) to assess moisture content of timber abutment caps. Pin-style moisture meters measure electrical resistance between two metal pins that are driven into the member and use this measurement to determine moisture content.

Drilling

Drilling and coring are the most common methods used to detect internal deterioration in wood members. Both techniques are used to detect the presence of voids and to determine the thickness of the residual shell when voids are present. Drilling utilizes an electric power drill or hand-crank drill equipped with a 3/8- to 3/4-in.- (9.5- to 19-mm-) diameter bit. Power drilling is faster, but hand drilling allows the inspector to monitor drilling resistance and may be more beneficial in detecting pockets of deterioration. In general, the inspector drills into the member in question, noting zones where drilling becomes easier and observing drill shavings for evidence of decay. The presence of common wood defects, such as knots, resin pockets, and abnormal grain, should be anticipated while drilling and should not be confused with decay. If decay is detected, remedial treatment, such as copper naphthenate, can be added to the wood through the inspection hole. The inspection hole is probed with a bent wire or a thickness gauge to measure shell thickness. Because these holes are typically of 3/8 to 3/4 in. diameter, they should be filled with a wood dowel section that has been soaked in a preservative.

Coring

Coring with an increment borer (often used for determining the age of a tree) also provides information on the presence of decay pockets and other voids. The resultant solid wood core can be carefully examined for evidence of decay. In addition, the core can be used to obtain an accurate measure of the depth of preservative penetration and retention.



Figure 2.8—An increment core can be used to conduct inspections of timber bridge elements. This image shows an extracted core from an in-service timber pile ready for examination.

Figure 2.8 shows an increment core tool and the extracted core. The core can also be used to determine the wood species. To prevent moisture and insect entry, a bored-out core hole should be filled with a wood plug treated with copper naphthenate.

Resistance Drilling

Another commercially developed drilling technique is the resistance drill system. Developed in the late 1980s, this system was originally developed for use by arborists and tree care professionals to assess tree rings, evaluate the condition of urban trees, and locate voids and decay. This technology is now being utilized to identify and quantify decay, voids, and termite galleries in wood beams, columns, poles, and piles. This technique is the preferred drilling and coring technique for timber elements. Figure 2.9 shows a resistance microdrill being used to assess the level of decay in a timber bridge pile.

Several machine types are available from different manufacturers. They operate under the same general principle of measuring electrical power consumption of a needle rotation motor. This value is proportional to mechanical torque at the needle and primarily depends on wood density (Rinn 2013). The purpose of the equipment is to identify areas in timber elements that have low density, indicating decay or deterioration.

Resistance drill equipment measures the resistance of wood members to a 0.6-in.- (1.5-mm-) diameter drill bit with a 0.18-in. (3.0-mm) head. This flat tipped drill bit travels through the member at a defined movement rate and generates information that allows an inspector to determine the exact location and extent of any damaged area. Figure 2.10 shows several drill bit ends that are used in resistance drills. Although the unit is usually drilled into a member in a direction perpendicular to the surface, it is also possible to drill into members at an angle (Fig. 2.11).



Figure 2.9—A resistance microdrill used for inspection of a historic Civilian Conservation Corps log cabin.

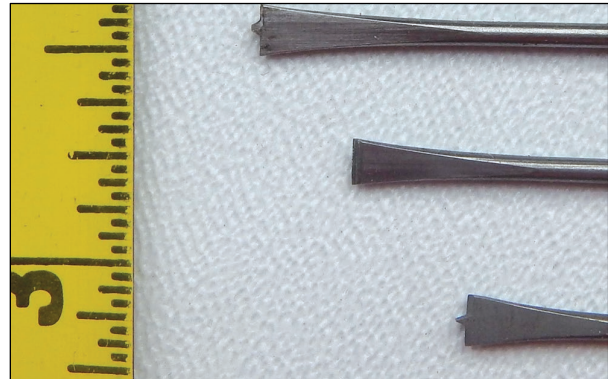


Figure 2.10—Flat-tipped resistance drill bits used to inspect timber materials.

Resistance drills collect data electronically and can produce a chart showing relative resistance over the drilling path. Modern tools have the ability to view the data on a tablet computer or mobile phone. Areas of sound wood have various levels of resistance, depending on the density of the species; voids show no resistance. The inspector can determine areas of low, mild, and high levels of decay with this tool and quantify the level of decay in the cross section. Figure 2.12 shows a timber abutment cap being assessed with a resistance microdrill and the resulting chart image, which shows minimal drilling resistance and indicates that the majority of the cap is decayed. Figure 2.13 shows a commercial model with an electronic display that allows data to be reviewed in the field and then further processed using a computer in the office. All holes should be filled after drilling, especially if no decay is present. For the microdrill, this can be accomplished by injecting a small amount of silicone sealant or marine adhesive into the small opening (Fig. 2.14).



Figure 2.11—Drilling can take place at an angle to assess the area below ground line.

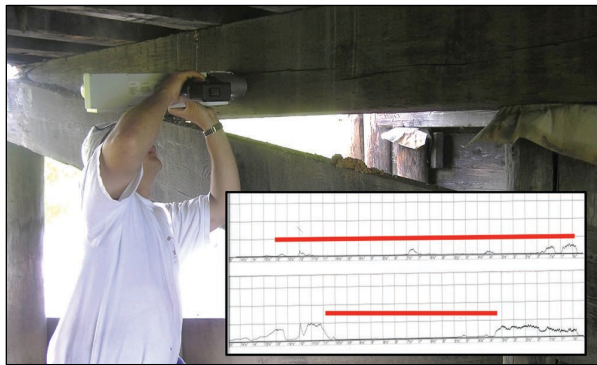


Figure 2.12—Resistance microdrilling showing significant decay in the bridge pile cap. The inset shows the paper chart readout from a commercial drilling unit.



Figure 2.13—Electronic display on a resistance drill.

Interpreting Drilling Data Charts

Charts should be reviewed in the field and notes taken to ensure understanding of the testing location. Notes should be taken on a graphical data chart. Care should be exercised to ensure that low density profiles from intact but soft wood



Figure 2.14—Silicone is used to fill the small drilling hole.

Table 2.1—General assessment of resistance drilling data for Douglas-fir and southern yellow pine bridge members

Drilling resistance (%)	Decay level	Comments
0	Severe	Decay resulting in an internal void
5–15	Moderate	Often adjacent to the internal void areas
20+	Low to none	Sound material often has resistance that is consistent across the full width

Note: These data must be carefully interpreted because of differences between commercial equipment.

(such as conifers) not be misinterpreted as decay. The very center of softwood species near the pith will have low resistance and lack the defined growth rings visible in the outer sections. It is important to understand the type of wood that is being drilled. Sound wood from many hardwood species may have high levels of resistance (over 50%), whereas sound wood from softwood conifers may have low levels of resistance (in the range of 15% to 50+%, depending on its inherent density). It is important to evaluate the levels of decay across the full dimension because some species have low resistance values but are not decayed. Further, each piece of commercial equipment provides different scales and may indicate different resistance levels. Table 2.1 shows a general assessment rating index that can provide support for the bridge inspector in evaluating resistance data collected during testing. Example electronic drilling charts for a southern yellow pine pile and a Douglas-fir pile cap are shown in Figures 2.15 and 2.16, respectively.

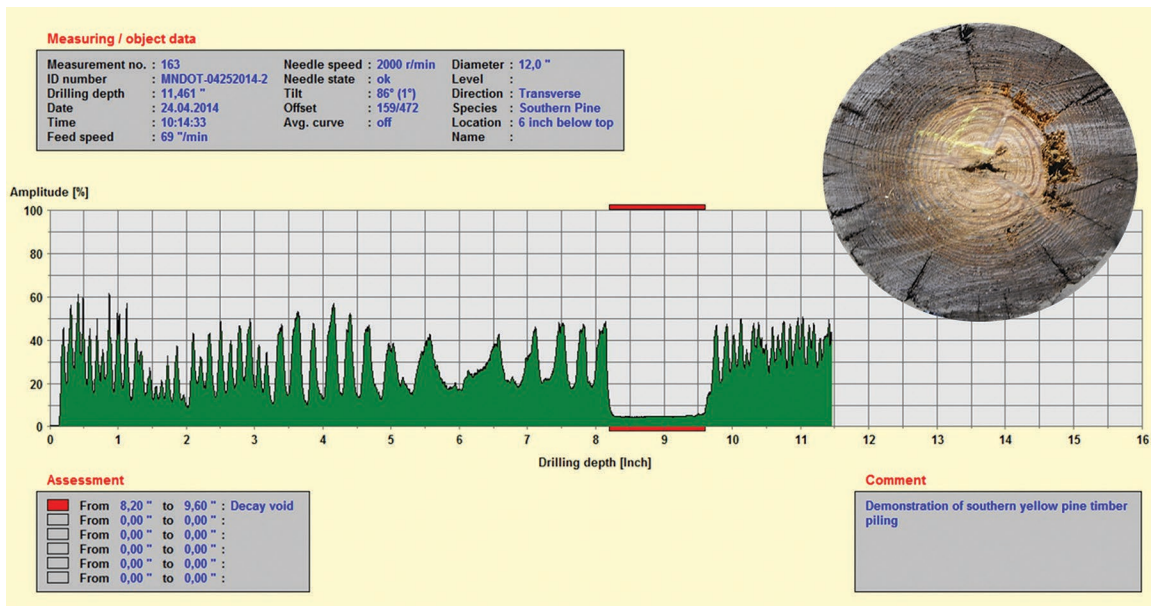


Figure 2.15—Electronic view of a southern yellow pine timber piling showing a decay pocket between 8 and 10 in. of the drilling profile.

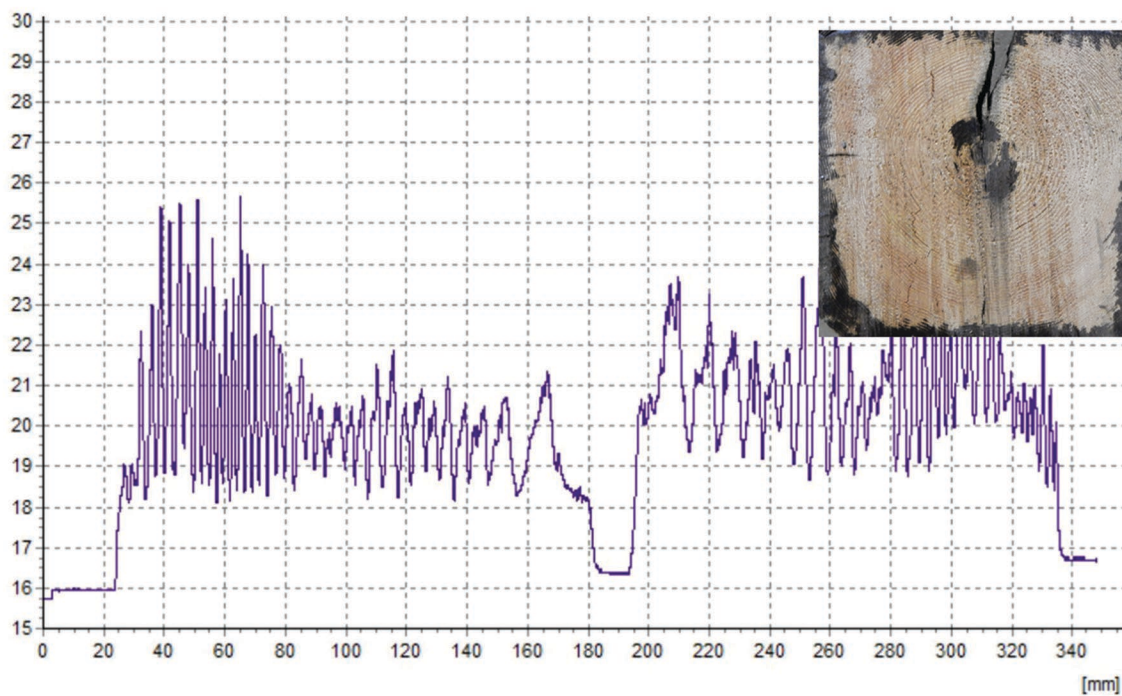


Figure 2.16—Electronic resistance chart of a Douglas-fir pile cap showing a large crack between 180 and 200 mm along the drilling path.

Commercial Equipment

Several companies produce equipment that is suitable for inspecting timber structures based on these concepts. Resistance microdrills and screw withdrawal resistance meters are specialized equipment offered by few manufacturers. In contrast, increment borers are a common forestry tool and available from many vendors. Contact information for some of these companies follows.

Increment Borers

Forestry Suppliers Inc.

Telephone: (800) 647-5368

Website: <https://www.forestry-suppliers.com/>

Pacforest Supply Company

Telephone: (877) 736-5995

Website: <https://pacforest.com>

Resistance Microdrills

IML-RESI PD- and F-Series

IML North America, LLC

Telephone: 603-253-4600

Website: <https://iml-na.com/>

Resistograph

RINNTECH, Inc.

Telephone: (630) 377-2477

FAX: (630) 485-6133

Website: <https://www.rinntech.com/>

Screw Withdrawal Force Meter and Microsecond Timer

FAKOPP Enterprise

Telephone: +36 (303) 949 562

Website: <https://fakopp.com/en/>

Literature Cited

Cai, Z.; Hunt, M.; Ross, R.J.; Soltis, L.A. 2002. Screw withdrawal—a means to evaluate densities of in-situ wood members. In: Proceedings, 13th international symposium on nondestructive testing of wood. Madison, WI: Forest Products Society: 277–281.

Fakopp. 2014. User's guide: screw withdrawal resistance meter. Agfalva, Hungary: Fakopp Enterprise. https://fakopp.com/docs/products/withdrawal/withdrawal_guide.pdf. (Accessed June 25, 2024.)

Rinn, F. 2013. From damage maps to condition inventories: a proven concept for documentation of results of inspection of timber bridges and other timber structures. International Conference on Timber Bridges; Las Vegas, NV.

Talbot, J. 1982. Unpublished research. Pullman, WA: Wood Materials and Engineering Laboratory, Washington State University.

Winandy, J.E.; Lebow, P.K.; Nelson, W. 1998. Predicting bending strength of fire-retardant-treated plywood from screw withdrawal tests. Research Paper FPL–RP–568. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.

Inspection of Timber Structures Using Stress Wave Timing Nondestructive Evaluation Tools

Laurice M. Spinelli Correa
Robert J. Ross

This chapter provides guidelines on the application and use of the stress wave timing inspection method in locating and defining areas of decay in timber structures. Practical procedures for field testing, workable forms for gathering evaluation data, and guidelines for interpreting data are provided. This information was derived from research that quantified the capacity of stress wave timers to detect decay in wood, from laboratory and field studies of deteriorated timber bridges, and most importantly from the experience of timber bridge inspectors familiar with the use of commercially available devices. A table that lists current manufactures of these devices is included. Properties of wood and important aspects of wood deterioration are reviewed to provide those who are unfamiliar with wood the basic information necessary to detect decay.

Principles of Stress Wave Nondestructive Testing for Condition Assessment

A schematic of the stress wave concept for detecting decay within a rectangular wood member is shown in Figure 3.1. A stress wave is induced by striking the specimen with an impact device that is instrumented with an accelerometer that emits a start signal to a timer. A second accelerometer, which is held in contact with the other side of the specimen, senses the leading edge of the propagating stress wave and sends a stop signal to the timer. The elapsed time for the stress wave to propagate between the accelerometers is displayed on the timer.

The velocity at which a stress wave travels in a member is dependent only upon the properties of the member. The terms ultrasonic and sonic should not introduce any confusion—they refer only to the frequency of excitation used to impart a wave into the member. All commercially available timing units, if calibrated and operated according to the manufacturer's recommendations, yield comparable results.

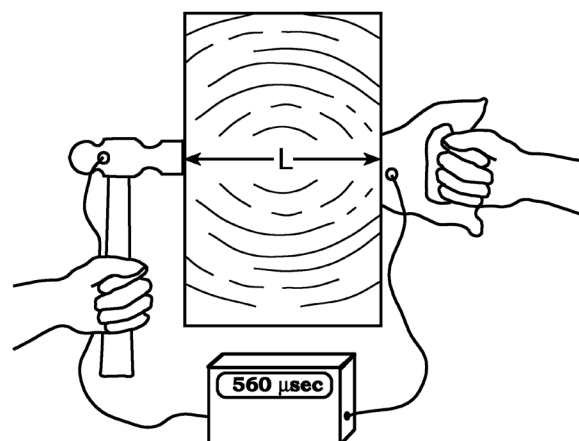


Figure 3.1—Stress wave timer.

The use of stress wave velocity to detect wood decay in timber bridges and other structures is limited only by access to the structural members under consideration. It is especially useful on thick timbers or glulam timbers ≥ 89 mm (≥ 3.5 in.) where hammer sounding is not effective. Access to both sides of the member is required.

Because wood is an organic substance, material properties and strength vary in accordance with the direction wood is hammered compared with the cell structure orientation. Hammering the end grain of a beam or post will cause a primarily longitudinal shock wave along the length of the cell structure in the timber. Hammering the side or top of the beam will cause a wave across or transverse to the wood cells. Cells are arranged in rings around the center of the tree.

The velocity at which a stress wave propagates in wood is a function of the angle at which the fibers of wood are aligned (which is also a determinant of other physical and mechanical properties). For most structural members, fibers of the wood align more or less with the longitudinal axis of the member (Fig. 3.2).

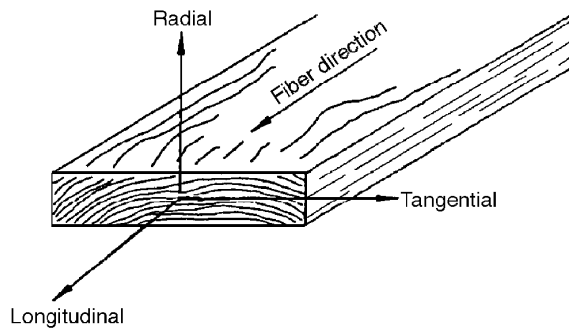


Figure 3.2—Three principal axes of wood with respect to grain direction and growth rings.

Stress wave transmission times on a per length basis for various wood species are summarized in Table 3.1. Stress wave transmission times are shortest along the grain (with the fiber) and longest across the grain (perpendicular to fiber). For Douglas-fir and Southern Pine, stress wave transmission times parallel-to-the-fiber are approximately 200 $\mu\text{s}/\text{m}$ (60 $\mu\text{s}/\text{ft}$). Stress wave transmission times perpendicular to the fiber range from 850 to 1,000 $\mu\text{s}/\text{m}$ (259 to 305 $\mu\text{s}/\text{ft}$).

Effect of Ring Orientation

Researchers have determined that the longest transverse-to-grain transmission times are found at a 45° orientation to the annual rings. The shortest is about 30% faster in a path that

is radial (Fig. 3.3). Table 3.2 and Figure 3.4 show stress wave transmission time for wood of good quality at 12% moisture content. These values can vary $\pm 10\%$ for species variation. These times are based on an assumed stress wave transmission time of 668 $\mu\text{s}/\text{m}$ radially, 800 $\mu\text{s}/\text{m}$ tangentially, and 995 $\mu\text{s}/\text{m}$ at 45° to grain.

Effect of Decay

The presence of decay greatly affects stress wave transmission time in wood. Table 3.3 summarizes stress wave transmission values obtained from field investigations of various wood members subjected to degradation from decay. Stress wave transmission times perpendicular to the grain are drastically increased when the member is degraded. Transmission times for nondegraded Douglas-fir are approximately 800 $\mu\text{s}/\text{m}$ (244 $\mu\text{s}/\text{ft}$), whereas severely degraded members exhibit values as high as 3,200 $\mu\text{s}/\text{m}$ (975 $\mu\text{s}/\text{ft}$) or greater.

A 30% increase in stress wave transmission times implies a 50% loss in strength. A 50% increase indicates severely decayed wood (Fig. 3.5). Transverse travel paths are best for finding decay. Parallel-to-grain travel paths can bypass regions of decay.

Weight loss is not a good indicator of decay because considerable strength loss can occur without significant weight loss.

Table 3.1—Summary of research on stress wave transmission times for various species of nondegraded wood

Reference	Species	Moisture content (% OD) ^a	Stress wave transmission time ($\mu\text{s}/\text{m}$ ($\mu\text{s}/\text{ft}$))	
			Parallel to grain	Perpendicular to grain
Smulski 1991	Sugar maple	12	256 to 194 (78 to 59)	—
	Yellow birch	11	230 to 180 (70 to 55)	—
	White ash	12	252 to 197 (77 to 60)	—
	Red oak	11	262 to 200 (80 to 61)	—
Armstrong et al. 1991	Birch	4 to 6	213 to 174 (65 to 53)	715 to 676 (218 to 206)
	Yellow-poplar	4 to 6	194 to 174 (59 to 53)	715 to 676 (218 to 206)
	Black cherry	4 to 6	207 to 184 (63 to 56)	689 to 620 (210 to 189)
	Red oak	4 to 6	226 to 177 (69 to 54)	646 to 571 (197 to 174)
Elvery and Nwokoye 1970	Several	11	203 to 167 (62 to 51)	—
Jung 1979	Red oak	12	302 to 226 (92 to 69)	—
Ihlseng 1878, 1879	Several	—	272 to 190 (83 to 58)	—
Gerhards 1978	Sitka spruce	10	170 (52)	—
	Southern pine	9	197 (60)	—
Gerhards 1980	Douglas-fir	10	203 (62)	—
Gerhards 1982	Southern pine	10	197 to 194 (60 to 59)	—
Rutherford 1987	Douglas-fir	12	—	1,092 to 623 (333 to 190)
Ross 1982	Douglas-fir	11	—	850 to 597 (259 to 182)
Hoyle and Pellerin 1978	Douglas-fir	—	—	1,073 (327)
Pellerin et al. 1985	Southern pine	9	200 to 170 (61 to 52)	—
Soltis et al. 1992	Live oak	12	—	613 to 1,594 (187 to 486)
Ross et al. 1994	Northern red and white oak	green	—	795 (242)

^a OD, oven-dry.

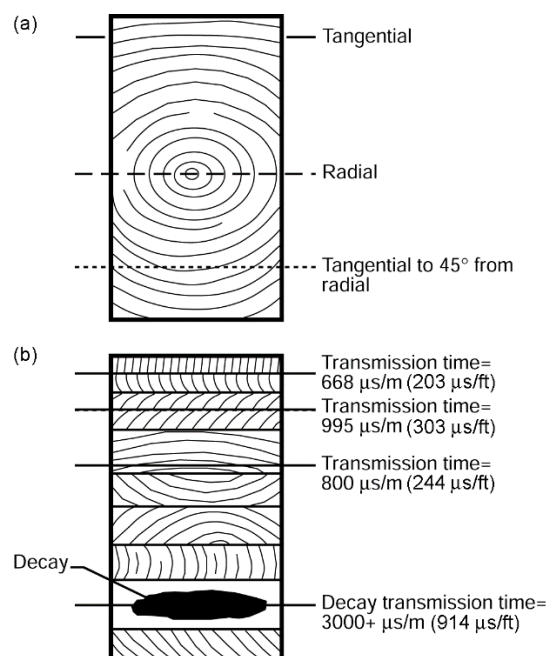


Figure 3.3—Transverse stress wave paths and transmission times: (a) timber, (b) glulam beam.

Table 3.2—Typical stress wave transmission times for nondecayed Douglas-fir at 12% moisture content

Path length (mm (in.))	Stress wave transmission time (μs)		
	Radial	Tangential	45° to grain
64 (2.5)	43	51	64
89 (3.5)	60	71	88
140 (5.5)	94	112	139
184 (7.25)	123	147	183
235 (9.25)	157	188	234
292 (11.5)	195	234	290
342 (13.5)	229	274	340
394 (15.5)	264	315	392
444 (17.5)	297	355	442
495 (19.5)	331	396	492

Effect of Moisture Content

Considerable research has shown the effect of moisture in wood on stress wave transmission time. Several studies have revealed that stress wave transmission times perpendicular to the grain of wood follow a relationship (Fig. 3.6). At moisture contents less than approximately 30%, transmission time decreases with decreasing moisture content. Corrections for various moisture content values are summarized in Table 3.4.

At moisture content values greater than approximately 30%, little or no change in transmission time occurs. Consequently, there is no need to adjust the measured values for wood that is tested in a wet condition.

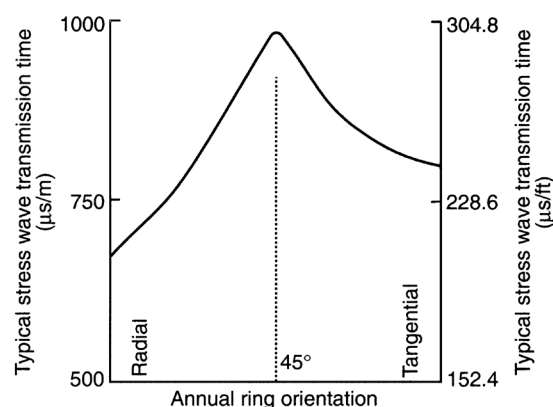


Figure 3.4—Transverse stress wave transmission time compared with annual ring orientation.

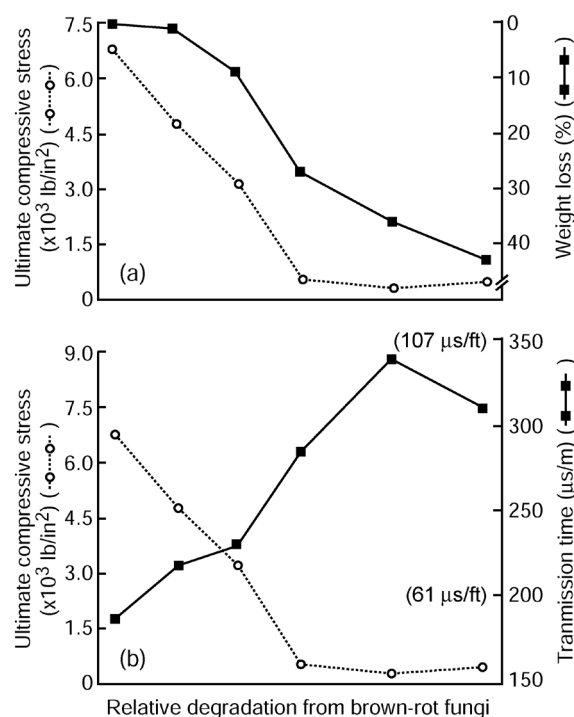



Figure 3.5—Relationship between stress wave transmission time and fungal degradation (Pellerin et al. 1985) (1 lb/in² = 6.9 kPa).

Effect of Preservative Treatment

Treatment with waterborne salts has almost no effect on stress wave transmission time. Treatment with oil-borne preservatives increases transmission time to about 40% greater than that of untreated wood. Round poles are usually penetrated to about 37 to 61 mm (1.5 to 2.5 in.), except at their ends where the treatment fully penetrates the wood. Table 3.5 was calculated to show expected travel time for round poles treated with oil-borne preservatives. Although these data illustrate the effect oil-borne treatments have on transmission time, these values should not be used to estimate level of penetration.

Table 3.3—Summary of research on use of stress waves for detecting decay in timber structures

Reference	Structure	Wood product	Test	Analysis
Volny 1992	Bridge	Douglas-fir glulam, creosote pressure treated	Stress wave transmission time perpendicular to grain, across laminations at 0.3-m (0.98-ft) intervals	Sound wood: 1,279 $\mu\text{s/m}$ (390 $\mu\text{s/ft}$) Moderate decay: 1,827 $\mu\text{s/m}$ (557 $\mu\text{s/ft}$) Severe decay: 2,430 $\mu\text{s/m}$ (741 $\mu\text{s/ft}$)
Ross 1982	Football stadium	Solid-sawn Douglas-fir, creosote pressure treated	Stress wave transmission time perpendicular to grain, near connections	Sound wood: 853 $\mu\text{s/m}$ (260 $\mu\text{s/ft}$) Incipient decay: –Center of members: 1,276 $\mu\text{s/m}$ (389 $\mu\text{s/ft}$) –38-mm-thick solid wood shell: 2,129 $\mu\text{s/m}$ (649 $\mu\text{s/ft}$) Severe decay: >3,280 $\mu\text{s/m}$ (1,000 $\mu\text{s/ft}$)
Hoyle and Pellerin 1978	School gymnasium	Douglas-fir glulam arches	Velocity of stress wave transmission time perpendicular to grain, near end supports	Sound wood: 1,073 $\mu\text{s/m}$ (327 $\mu\text{s/ft}$) Decayed wood: 1,574 $\mu\text{s/m}$ (480 $\mu\text{s/ft}$)

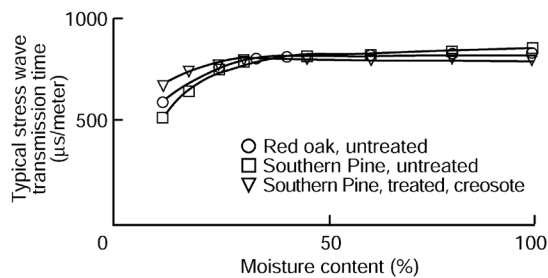**Figure 3.6—Transverse stress wave transmission times in Southern Pine and red oak piling.****Table 3.4—Stress wave transmission time adjustment factors for temperature at various moisture contents for Douglas-fir**

Moisture content (%)	Adjustment factors			
	–18 °C (0 °F)	3 °C (38 °F)	27 °C (80 °F)	49 °C (120 °F)
1.8	0.94	0.95	0.97	0.98
3.9	0.95	0.96	0.98	0.99
7.2	0.93	0.98	1.00	1.01
12.8	0.97	0.99	1.00	1.01
16.5	0.99	1.01	1.03	1.05
23.7	1.05	1.07	1.09	1.14
27.2	1.07	1.10	1.12	1.17

Interpretation of Stress Wave Velocity Readings

The guidelines in this chapter are useful in interpreting readings that are less than those for sound wood. Voids and checks will not transmit stress waves. Knots will act as parallel-to-grain wood but are usually oriented perpendicular to the long axis of timber.

Based on the direction and length of the stress wave path in the wood, moisture content of the wood, and whether preservative treatment is present, the velocity and travel time for sound wood can be determined. For the transverse direction, the annual ring orientation and the existence of seasoning checks should be recorded.

Measurement of Stress Wave Transmission Time

General Measurement

Several techniques can be used to measure stress wave transmission time in wood. The most common technique uses simple time-of-flight-type measurement systems. Two commercially available systems that use this technique are illustrated in Figures 3.7 and 3.8.

Table 3.5—Stress wave transmission times for round poles treated with oil-borne preservatives

Pole diameter (mm)	Stress wave transmission time (μs) for various levels of penetration		
	37 mm	61 mm	Full penetration
294	222	240	300
343	254	271	350
392	286	305	400
441	321	338	450
490	350	370	500
539	386	403	550
588	422	436	600

With these systems, a mechanical or ultrasonic impact is used to impart a wave into the member. Piezoelectric sensors are placed at two points on the member and used to detect passing of the wave. The time required for the wave to travel between sensors is then measured.

Commercially Available Equipment

Several equipment development firms are producing portable equipment based on this concept. Table 3.6 presents contact information for obtaining the latest information on these devices.

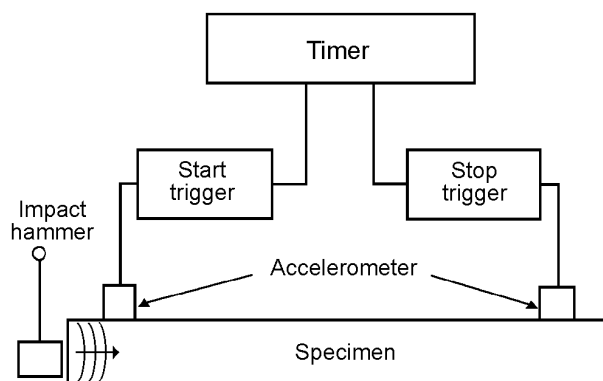


Figure 3.7—Technique used to measure impact-induced stress wave transmission times in various wood products.

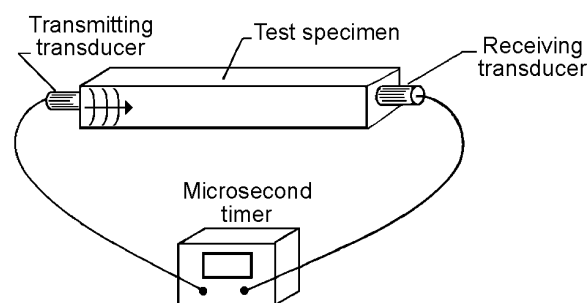


Figure 3.8—Ultrasonic measurement system used to measure stress wave transmission times in various wood products.

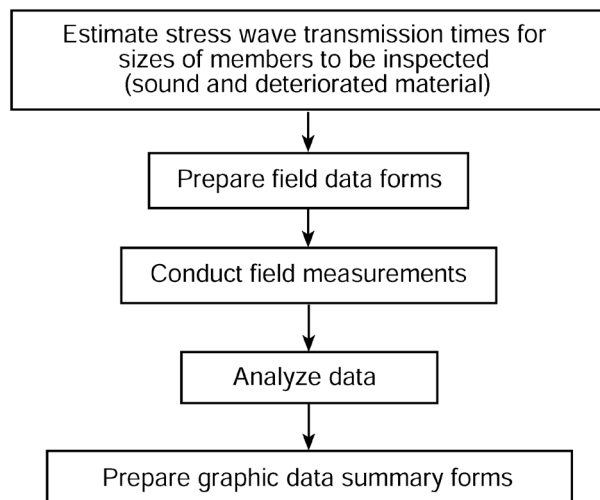


Figure 3.9—General procedures used to prepare and use stress wave timing methods for field work.

Field Considerations and Use of Stress Wave Methods

Stress Wave Transmission Time

Figure 3.9 outlines the general procedures used with stress wave nondestructive evaluation methods for field work. Before venturing into the field, it is useful to estimate stress wave transmission time for the size of the members to be inspected. Preceding sections provided information on various factors that affect transmission time in wood. As a starting point, this information can be summarized by simply using a baseline transmission time of 1,300 $\mu\text{s}/\text{m}$ (400 $\mu\text{s}/\text{ft}$). Transmission time, on a per length basis, less than this would indicate sound material. Conversely, transmission time greater than this value would indicate potentially degraded material. Using this value, you can estimate the transmission time for a member by knowing its thickness (path length) and the formula

$$T_{\text{baseline}} (\mu\text{s}) = 1,300 \times \text{WTD}$$

where T_{baseline} is baseline transmission time (μs) and WTD is wave transmission distance (path length) (m), or

$$T_{\text{baseline}} (\mu\text{s}) = 400 \times \text{WTD}$$

where WTD is wave transmission distance (path length) (ft)

By knowing this number for various thicknesses, field work can proceed rapidly.

Field Data Form

An example of a typical field data acquisition form is shown in Figure 3.10. Key items to include on the form are structure name, location, number, inspector, and date of inspection.

Field Measurements

Field use should be conducted in accordance with instructions provided by equipment manufacturers. In the field, extra batteries, cables, and sensors are helpful. Testing should be conducted in areas of the member that are highly susceptible to degrading, especially in the vicinity of connections and bearing points.

The baseline values provided serve as a starting point in the inspection. It is important to conduct the test at several points at various distances away from the suspect area. In a sound member, little deviation is observed in transmission times. If a significant difference in values is observed, the member should be considered suspect.

Data Analysis and Summary Form

When data have been gathered, it is useful to present them in an easy-to-read manner. Figure 3.11 illustrates various data summary forms. From these, the presence and extent of degradation can readily be seen.

Table 3.6—Commercially available stress wave timing equipment

Manufacturer	Product	Website/email	Telephone	Fax	Address	Additional Information
Allison Tree, LLC	Tree Check Sonic Wave Tree Decay Detector	www.grandarborssupply.com/ info@midwestarboristsupplies.com	+1 (616) 456 8040		1730 Olson Street NE, Grand Rapids, MI 49503, USA	Distributed by Grand Arbor Supply
CBS-CBT	Sylvatest 4	www.cbs-cbt.com	+33 (015) 670 4380	+33 (047) 970 4238	404 Route des Bons Prés, P.A. du Héron, F-73110 La Rochette, France	
Fakopp Enterprise Bt.	Various models	www.fakopp.com office@fakopp.com	+36 (303) 949 562		H-9423 Agfalva, Fenyo u. 26, Hungary	Distributors and sales partners worldwide
Fibre-gen	Hitman HM220	www.fibre-gen.com/	+64 (3) 377 7316		Unit 5 Amuri Park, 404 Barbadoes St, Christchurch, New Zealand	
IML North America, LLC	IML Micro Hammer	www.imlusa.com info@iml-na.com	+1 (603) 253 4600		5 Water Street Meredith, NH 03253, USA	Distributors and sales partners worldwide
James Instruments, Inc.	V-Meter MK IV	www.ndtjames.com info@ndtjames.com	+1 (773) 463 6565	+1 (773) 463 0009	3727 N. Kedzie Avenue, Chicago, IL 60618-4545, USA	Distributor in Europe
Metriguard Technologies Inc.	Models 239A Stress Wave Timer	metriguard.support@raute.com metriguard.sales@raute.com	+1 (509) 332 7526	+1 (509) 332 0485	2465 NE Hopkins Court, Pullman, WA 99163, USA	
Olson Instruments, Inc.	Various models	www.olsoninstruments.com info@olsoninstruments.com	+1 (303) 423 1212		12401 W. 49th Avenue, Wheat Ridge, CO 80033-1927, USA	
Valora Madeira Ltda.	USLab	www.valoramadeira.com contato@valoramadeira.com				

Data Log—Stress Wave Transmission Times

Structure _____

Location _____ Date _____

_____ Equipment _____

Inspector _____

[illegible]

Figure 3.10—Typical field data acquisition form.

Literature Cited

- Armstrong, J.P.; Patterson, D.W.; Sneckenberger, J.E. 1991. Comparison of three equations for predicting stress wave velocity as a function of grain angle. *Wood and Fiber Science*. 23(1): 32-43.

- Elvery, R.H.; Nwokoye, D.N. 1970. Strength assessment of timber for glued laminated beams. In: Proceedings, Paper II, Nondestructive testing of concrete and timber, organized by the Institution of Civil Engineering and the British Commission for Nondestructive Testing; 1969 June 11–12. London, BC: Institute of Civil Engineering; 105–110.

- Gerhards, C.C. 1978. Effect of earlywood and latewood on stress-wave measurements parallel to the grain. *Wood Science*. 11(2): 69-72.

- Gerhards, C.C. 1980. Effect of cross grain on stress waves in lumber. Research Paper FPL–RP–368. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. <https://doi.org/10.2737/FPL-RP-368>

- Gerhards, C.C. 1982. Effect of knots on stress waves in lumber. Research Paper FPL–RP–384. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. <https://doi.org/10.2737/FPL-RP-384>

- Hoyle, R.J.; Pellerin, R.F. 1978. Stress wave inspection of a wood structure. In: Proceedings, 4th symposium on nondestructive testing of wood; 1978 August 28–30; Vancouver, WA. Pullman, WA: Washington State University: 33–45.

- Ihlseng, M.C. 1878. The modulus of elasticity in some American woods, as determined by vibration. Van Nostrand's Engineering Magazine. Vol. XIX: 8–9.

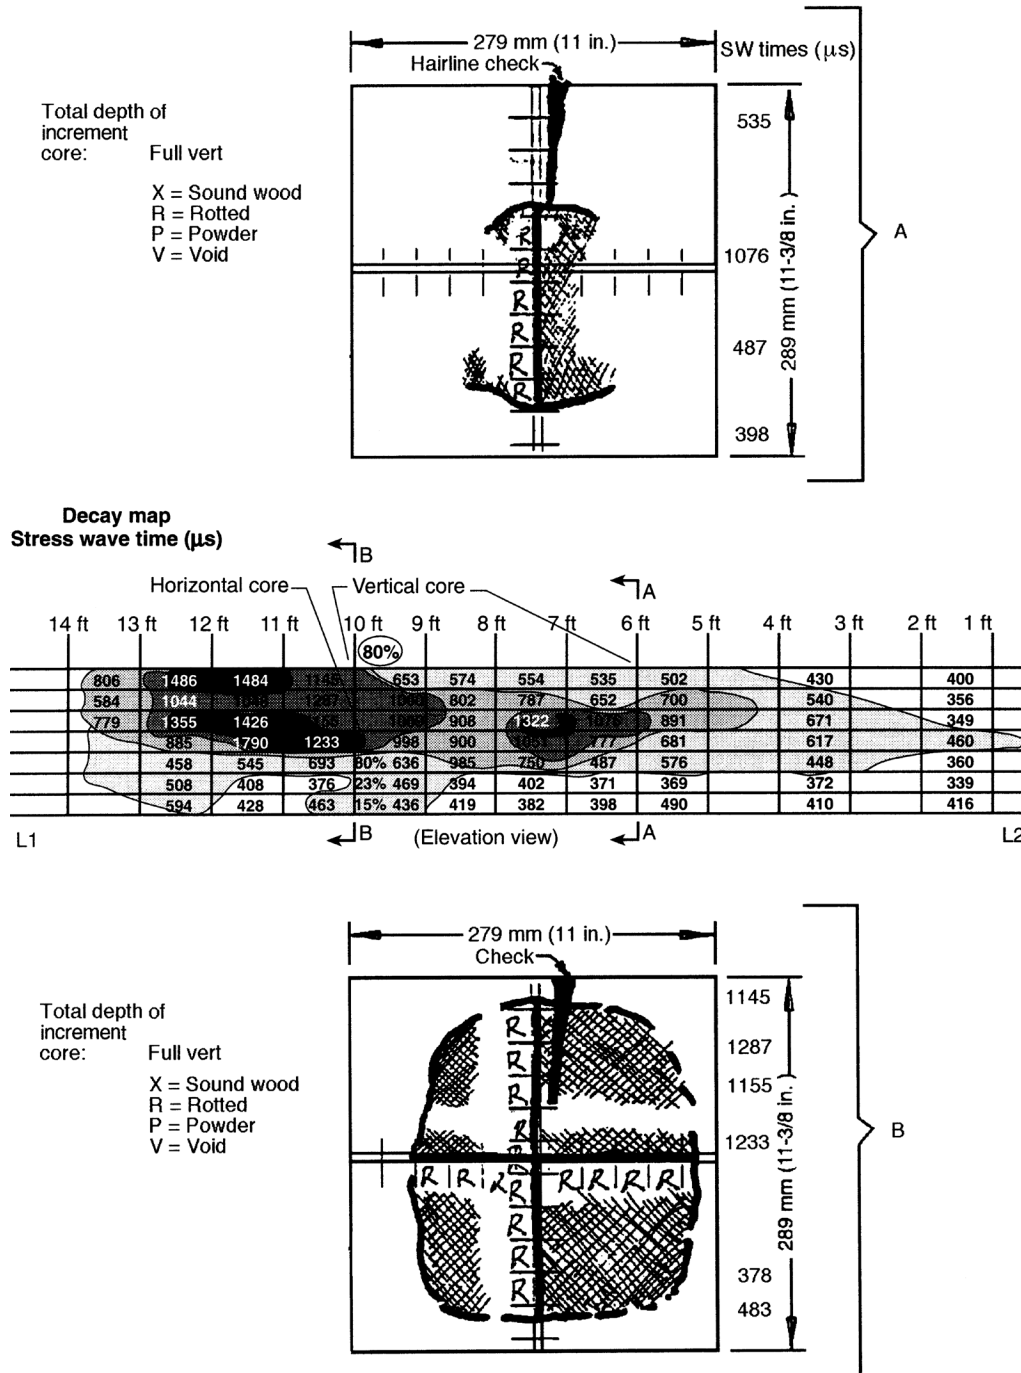


Figure 3.11—Examples of summary form (top) and data summary form.

- Ihlseng, M.C. 1879. On a mode of measuring the velocity of sound in wood. *American Journal of Science*. S3-17(98): 125–133. <https://doi.org/10.2475/ajs.s3-17.98.125>
- Jung, J. 1979. Stress wave grading techniques on veneer sheets. General Technical Report FPL–GTR–27. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.
- Pellerin, R.F.; De Groot, R.C.; Esenther, G.R. 1985. Nondestructive stress wave measurements of decay and termite attack in experimental wood units. In: *Proceedings, 5th symposium on nondestructive testing of wood*; 1985 September 9–11; Pullman, WA. Pullman, WA: Washington State University: 319–353.
- Ross, R.J. 1982. Quality assessment of the wooden beams and columns of Bay C of the east end of Washington State University's football stadium. Unpublished research. Pullman, WA: Washington State University.
- Ross, R.J.; Ward, J.C.; TenWolde, A. 1994. Stress wave nondestructive evaluation of wetwood. *Forest Products Journal*. 44(7/8): 79–83.
- Rutherford, P.S. 1987. Nondestructive stress wave measurement of incipient decay in Douglas Fir. Pullman, WA: Washington State University. M.S. thesis.
- Smulski, S.J. 1991. Relationship of stress wave and static bending determined properties of four northeastern hardwoods. *Wood and Fiber Science*. 23(1): 44–57.
- Soltis, L.; Baker, A.; Ferge, L.; [et al.]. 1992. USS Constitution—inspection and evaluation procedures for live and white oak members. Report submitted to U.S.Navy, Maintenance and Repair, USS Constitution, Boston Naval Shipyard, Charlestown, MA.
- Volny, N.J. 1992. Timber bridge inspection case studies in use of stress wave velocity equipment. In: *Proceedings, 8th symposium on nondestructive testing of wood*; 1991 September 23–25; Vancouver, WA. Pullman, WA: Washington State University.

Advanced Inspection Techniques

Xiping Wang
Zhiyong Cai
Brunela Pollastrelli Rodrigues
C. Adam Senalik

The wood products research community has invested considerable resources investigating the suitability of several techniques for assessing the condition of in-service wood. Acoustic tomography, transverse vibration, three-dimensional laser scanning, and ground penetrating radar are four techniques that have shown promise for in-place assessment of wood structures.

Recent advances in computing technologies have led to increased interest in using acoustic tomography to assess in-service timbers. Originally developed for assessing the condition of urban trees, this technique builds upon the successful use of acoustic methods to detect deterioration in wood. It provides a more detailed assessment than commonly used techniques and processes baseline results to provide a two-dimensional (2D) image of the cross section of a timber.

The methods and technologies described in the first three chapters are widely used to assess the condition of individual members or small areas within a wood member. Recently, a series of experiments were conducted to examine the feasibility of in-place testing of entire structural wood systems. Transverse vibration nondestructive testing techniques were used to estimate in-place stiffness of short-span timber bridges and building floor systems.

Use of three-dimensional (3D) laser scanning technologies to obtain as-built records for historic covered bridges has been investigated. In recent years, interest in using ground penetrating radar (GPR) to evaluate wood structures has increased. These technologies show promise as part of a comprehensive inspection approach to historic structures.

Overviews of these techniques and results obtained from their use are presented in this chapter. A list of relevant technical publications is included.

Acoustic Tomography

Stress wave timing, although widely used in building inspection, has its limitations. A single-pass stress wave measurement can detect only internal decay that is greater than 20% of total cross-sectional area (Wang et al. 2004).

To increase the reliability of the inspection and better define extent and location of any internal decay in a structural timber would require multiple acoustic measurements in different orientations at one cross section, especially in suspect areas. Two-dimensional tomographic inversions of stress wave data from multiple path measurements could allow inspectors to obtain a color map, or tomogram, of the distribution of stress wave velocity in the cross section, enabling a more direct imagery-based assessment.

Acoustic tomography is an emerging nondestructive evaluation technology for decay detection in urban trees and structural timbers. Commonly used tomographic image reconstruction is based on time of flight (TOF) data obtained through multipath measurements. It allows users to visualize the velocity distribution of acoustic waves as the waves propagate through the cross section of a wood member. Because acoustic velocity is directly related to density and modulus of elasticity of wood, acoustic velocity mapping of a cross section can be used as a diagnostic image to detect internal wood decay (Bucur 2003).

Application of this technology was initially demonstrated by Tomikawa et al. (1990) for inspecting the internal condition of wooden poles. Later, researchers investigated the applicability of the technology to detect internal decay in live trees (Divos and Szalai 2002; Gilbert and Smiley 2004; Wang et al. 2004, 2009; Wang and Allison 2007; Allison et al. 2008; Deflorio et al. 2008). Although field use of acoustic tomography is largely with urban tree inspections, the potential of this technology for assessing condition of large timber piles or columns in wood structures has been demonstrated and its application in the field of structural inspection will likely increase (Divos 2006, Wang and Wacker 2006, Yu et al. 2009, Dackermann et al. 2014).

Basics of Acoustic Tomography

Acoustic tomography is a diffraction-type tomography that utilizes acoustic impulses as an energy source. In contrast to ionizing radiation, acoustic waves do not travel along straight rays and the projections are not line integrals. The accuracy of tomography with acoustic energy is limited by the diffraction of the energy field and is affected by

frequency of the acoustic waves, number of sensors used, and the applied evaluation algorithm. The main benefits of this technique are that (1) it is a noninvasive method, (2) the equipment is safe to operate, and (3) the equipment is relatively low cost. Three main types of algorithms can be used to form tomographic images from acoustic data: transform techniques, iterative methods, and direct inversion techniques (Bucur 2003). The most commonly used parameter in acoustic imaging is TOF, which can be easily obtained through a pair of sensors.

For TOF data acquisition, multiple sensors must be attached around the circumference of a timber. Figure 4.1 shows an example of acoustic tomography measurement with a chain of sensors attached to the base of a timber post through sensor pins. Typically, 8 to 12 acoustic sensors are used in most applications, including trees and structural timbers (posts, columns, and beams), to obtain a reasonably good resolution of tomographic images. In cases where higher resolution is desired for critical structural timbers, the number of sensors can be increased to 24 or 36, depending on availability of sensors.

Coupling of the acoustic sensors to the timber under inspection is typically achieved through pins or nails when impulses are generated by a hammer impact. When ultrasonic sensors are used to test solid-sawn or glued-laminated timbers, gel-type coupling can provide good acoustic impedance. Field tomography measurement can also be expedited by using a specially designed flexible mounting frame that facilitates the sensor installation process.

Figure 4.2 illustrates the sensor arrangement and paths of acoustic waves for a tomography test on a round timber. Acoustic TOF data are obtained by sequentially tapping each pin using a steel hammer. A complete TOF data matrix can be obtained through this measurement process at each test location.

Equipment and Operating Procedures

Three commercial tools are currently available for performing TOF acoustic tomography testing on trees and structural timbers: PiCus Sonic Tomograph (Argus Electronic GmbH, Rostock, Germany), Arbotom 3D Impulse Tomograph (RinnTech, Heidelberg, Germany), and ArborSonic 3D Acoustic Tomograph (Fakop Enterprise, Sopron, Hungary). An acoustic tomography unit generally comes with a series of low-noise piezoelectric sensors, sensor attachment pins, amplifier boxes, connection cables, a rechargeable battery pack, a tape or caliper for measuring sensor positions, a steel hammer for tapping the sensors, and a software package for mapping geometry of the cross section, collecting TOF data, and generating tomograms. Total measurement time for one cross section of a timber is from 20 to 30 min, depending on the number of sensors used and ease of accessing the test location. Measurements at several heights can be assembled into a 3D model when needed.



Figure 4.1—Acoustic tomography test on a timber post.

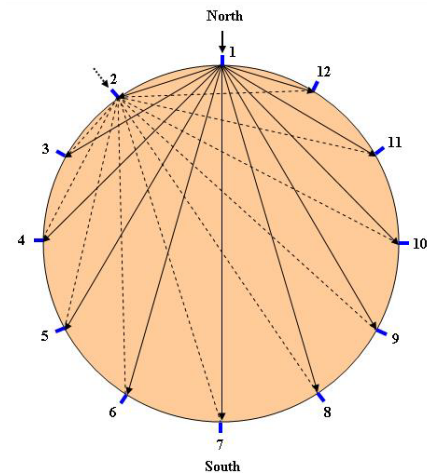


Figure 4.2—Sensor arrangement and paths of acoustic measurement on a round timber.

Acoustic tomography measurement is generally conducted based on a well-defined operating procedure:

1. Select the cross section of the timber to be tested; measure the circumference of the cross section; determine the number of sensors to be used.
2. Mark the starting point (sensor No. 1) at the cross section, place a tape measure around the cross section, and then mark the locations of the remaining sensors.
3. Drive attachment pins into the timber using a hammer and attach the piezoelectric sensors on the pins (spiked sensors can be inserted into timber directly).
4. Measure the distances between the sensors with a caliper, and enter the measured data into a computer.
5. Determine the geometry of the cross section using the software package.
6. Conduct acoustic measurements: starting with sensor No. 1 and proceeding to each sensor in turn, tap each sensor with a steel hammer to generate sound waves. The tool measures the TOF with microsecond precision to each transducer and transmits the data to the computer.
7. The software calculates the internal acoustic velocity distribution in the cross section and displays as a colored tomogram.

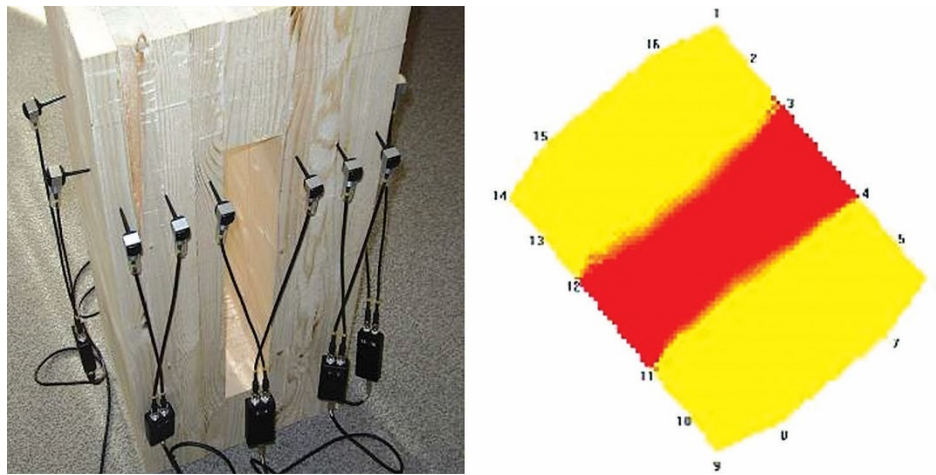


Figure 4.3—Acoustic tomography test on a glued-laminated specimen with a simulated void (Divos 2006).

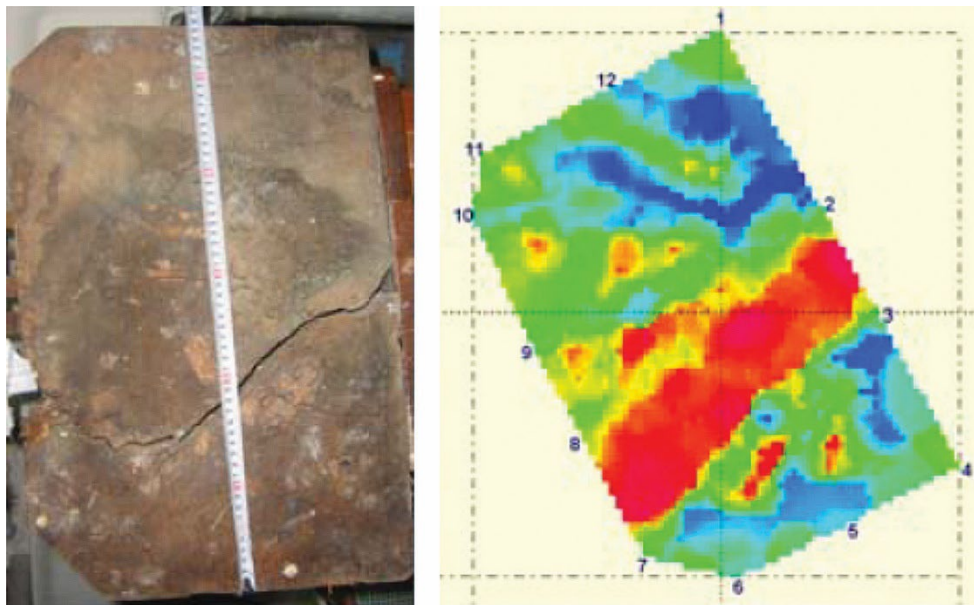


Figure 4.4—Acoustic tomogram revealed internal crack of an old timber at the Imperial Palace in Beijing (Yu et al. 2009).

Applications

Glued-laminated timber specimen: Divos (2006) demonstrated the use of acoustic tomography on a section of glued-laminated timber with a simulated void (Fig. 4.3). Sixteen sensors were strategically placed on four faces of the specimen (Fig. 4.3a). The center void can be visualized as a red color zone in the tomogram (Fig. 4.3b).

Wood structural members: Yu et al. (2009) inspected the wood structural members of the Imperial Palace, Beijing, China, using an impulse stress wave tomography tool. An internal crack in the timber was properly identified in the tomogram (Fig. 4.4). The results suggested that at least 12

sensors should be placed around a 54- by 30-cm timber to obtain a reasonably accurate tomographic image.

In-service masts of historic wooden ship: Wang and Wacker (2006) inspected the masts of the U.S. Brig Niagara, a reconstruction of an early 19th century wooden warship of the U.S. Navy, using acoustic tomography technique (Fig. 4.5). The fore mast and main mast are both fabricated from southern yellow pine glulam. Primary concerns were locations at the main deck level where water often comes in and creates moist conditions. Tomography testing on both masts indicated sound cross sections at the deck level, which were further confirmed by resistance drilling tests.



Figure 4.5—Inspection of the masts of the U.S. Brig Niagara using acoustic tomography.

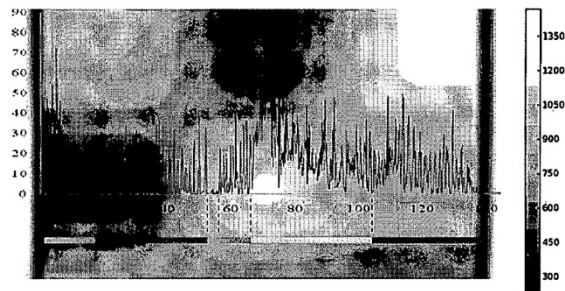


Figure 4.6—Tomogram of a timber section superimposed with the relative resistance profile (Riggio and Pizza 2011).

Tomography complemented with micro resistance drilling: Riggio and Piazza (2011) used a multi-channel device (TDAS 16–Boviar SRL) with an ultrasonic probe of 55 kHz to map decayed areas in timbers. Acoustic velocity maps were represented in a diagram by 256 levels of grey, with the white level corresponding to maximum velocity and the black level corresponding to minimum velocity. Complementary to TOF tomography, micro resistance drilling tests were carried out in portions of the sections to provide data for confirmation of the tomograms. Figure 4.6 shows the tomogram acquired from a decayed cross section superimposed with a relative resistance profile. The x axis of the plot is positioned along the corresponding drilling path. The presence of void and poor quality of the timber can be identified by low values of both acoustic velocity and relative drilling resistance. The void area in the left portion of the timber is confirmed by the almost flat resistance profile, and the sound wood in the central part is confirmed by the high resistance profiles. Results indicated that integral of relative resistance profile divided by penetration depth and average acoustic velocity values in tomograms can be used to give general interpretation of the tests.

Limitations

Although acoustic tomography has been successfully used to detect moderate to severe internal decay in structural timbers, the detection of early stage of decay using such technology still constitutes a challenge because (1) acoustic

tomography techniques currently used are largely based on TOF measurements, which limit the accuracy and resolution of the tomography images obtained; (2) the construction of tomogram from TOF data is affected by pronounced anisotropy of timber in terms of microstructures and wood properties; and (3) interpretation of tomograms is not quantitative in nature and often needs further confirmation or verification by other means. For field application, it is recommended that complementary nondestructive test methods be used to obtain local quantitative information (such as a resistance drilling test) such that the internal condition of the area can be verified.

Transverse Vibration of Structural Systems

Inspection and evaluation of existing timber structures has historically been limited to evaluating each structural member individually, which requires a time-consuming inspection. Sometimes individual members are not accessible and therefore difficult to inspect. Low-frequency transverse vibration has been studied for well over 50 years as a potential method for evaluating wood-based products. However, the nondestructive evaluation of a timber floor system using transverse vibration was researched more recently. Transverse vibration was used to evaluate properties of new and salvaged individual floor joists (Cai et al. 2000), and then these joists were used to fabricate floor systems of five joists and attached flooring deck in the laboratory. The responses of these floor systems were then evaluated in the laboratory using transverse vibration (Cai et al. 2002). These pilot studies used an impact load to initially displace the structure; the free vibration characteristics of individual joists or the whole floor system were measured. The salvaged joists tested in these studies had seasoning checks, splits, and some edge decay, which resulted in lower stiffness values than those of the new joists. Later, forced vibration was imposed by a motor with an eccentric rotating mass attached to the floor decking (Soltis et al. 2002). Motor speed could be manually changed, and the rotating mass forced the floor to vibrate at its frequency. The resonant vibration was observed by changing the speed of the rotating mass until maximum deflection was reached. The observed resonant frequency of the wood floor system should be close to its natural frequency, which is highly related to its stiffness and its supporting boundary condition. The transverse vibration technique was used later to assess single-span timber bridges (Wang et al. 2005).

Fundamentals

Jayne (1959) applied a forced transverse vibration technique for evaluating a single wood member. Pellerin (1965) significantly improved the technique by using free transverse vibration with dimension lumber. A vibrating beam can be modeled as the vibration of a mass M that is attached to a weightless spring and internal damping. The generalized equation of motion of a mass under damped forced vibration is derived from the classical spring–dash–

pot analogy. When a forcing function equaling $P_0 \sin \omega t$ (or zero) is applied for forced (or free) vibration, the equation of motion of M can be expressed as

$$M \left(\frac{d^2 x}{dt^2} \right) + D \left(\frac{dx}{dt} \right) + Kx = P_0 \sin \omega t \quad (1)$$

where K is the elastic constant of the spring and D is the damping coefficient of the dashpot.

A solution for Equation (1) is obtained as

$$x(t) = \frac{P_0}{\sqrt{(-\omega^2 m + K)^2 + (\omega C)^2}} \sin(\omega t - \phi) \quad (2)$$

where

$$\phi = \tan^{-1} \frac{\omega C}{-\omega^2 m + K} \quad (3)$$

When the beam is at resonance ($dx/d\omega = 0$), the solution for K (with correction for mass and substitutions of appropriate constants) leads to the following equation for dynamic modulus of elasticity (MOE) of the beam:

$$\text{MOE} = \frac{f_r^2 W L^3}{n^2 I g} \quad (4)$$

where f_r is resonant frequency (Hz), W is beam weight (lb or kg), L is beam span (in. or m), I is beam moment of inertia (in⁴ or m⁴); g is gravitational acceleration (386 in/s² or 9.8 m/s²), n is a constant dependent on mode of support (equal to 12.65 for freely supported at two nodal points and 2.46 for supported at the ends).

The logarithmic decrement, δ , is used as a measure of energy dissipation and can be expressed as (for free vibrations)

$$\delta = \frac{1}{n-1} \ln \frac{A_1}{A_n} \quad (5)$$

where A_1 and A_n are the amplitudes of two oscillations $n - 1$ cycles apart. For forced vibrations,

$$\delta = \frac{\pi \Delta f}{f_r} \frac{1}{\sqrt{(A_r/A)^2 - 1}}$$

Note that Equation (4) represents the relationship for a simply supported idealized beam. This formula, however, is frequently used to estimate the relationship for simply supported systems as well.

Exciting and Measuring System

Floor systems were subjected to both free and forced vibration. Free vibration was initiated by impact from a large hammer. Forced vibration was imposed by a motor

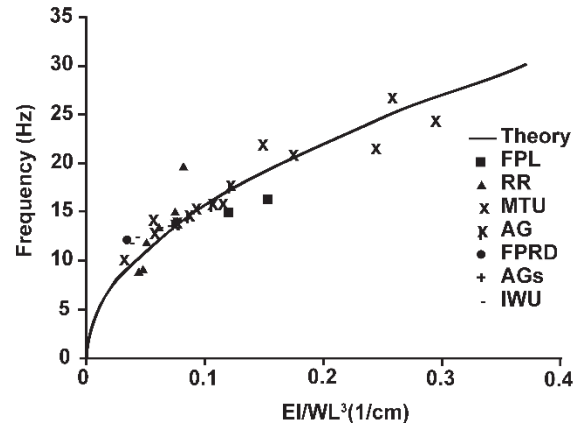


Figure 4.7—Scatter plot of in-place floor test data and previously tested lab-built floor sections.

with an eccentric rotating mass attached to the floor decking. Motor speed could be manually changed from rest up to a maximum of 2,500 rpm. The weight of the rotating mass was based on the total weight of the floor system (up to 1 kg) and the eccentricity from the rotating axis. The response to vibration was measured at the bottom of the joists using a linear variable differential transducer (LVDT). The time-deflection signal was recorded by an oscilloscope. For free vibration, the damped natural frequency was determined as the inverse of the period measured from the time-deflection signal; the damping ratio was determined from the same signal using the classic log-decrement technique. For forced vibration, the damped resonant frequency was determined by increasing motor speed until maximum deflection resonance was observed and then measuring frequency from the time deflection signal.

Results and Implementation

A total of 30 in-place floors and four configurations of two salvaged floor sections were tested both dynamically and statically (Forsman and Erickson 2001, Soltis et al. 2002, Wang et al. 2005, Hunt et al. 2007). The forced natural frequencies and configuration were measured. According to Equation (4), the square of forced damped natural frequency for each floor is correlated to the factor EI/WL^3 , where EI was determined by the static load test, W is estimated weight of the floor/section, and L is measured floor span. The solid curve in Figure 4.7 is the hypothesized response of the natural frequencies with different EI/WL^3 configurations. Data points in Figure 4.7 are measured natural frequencies of the prior tested laboratory-built floor sections. A least squares analysis yields a coefficient of determination $r^2 = 0.85$ for comparing empirical data versus theory. Based on these favorable results, the hypothesis that in-place wood floors, such as those tested in this project, can be modeled as a simply supported, one-way beam system under transverse vibration with viscous damping was not rejected.

The goal of implementing this technique was to develop a methodology of using the measured damped natural

frequency of a floor to safely predict the floor's EI . Although the theory fits experimental data extremely well, 95% confident limits could be used to account for variability. Similar to establishing allowable bending stress for lumber, the fifth percentile exclusion limit is used as the control curve to estimate allowable EI/WL^3 . In practice, a wood structural system (such as an in-place floor) would be transversely resonated to determine its damped natural frequency; the frequency value would be used to obtain the associated value of EI/WL^3 with 95% confident level for the system. The EI of the system can be isolated from this value by measuring the floor span and estimating the weight of the system. The EI will provide a good estimation of overall structural condition of the wood structural system.

Laser Scanning of Structures

Three-dimensional laser scanners are instruments that record precise and accurate surface data of objects in a nondestructive manner. These instruments use a beam of infrared light to calculate and record the distance to an object, typically as data points with spatial coordinates. These data are then analyzed using various types of computer software to generate a detailed image of coordinates and dimensions. Three-dimensional laser scanners have been used successfully to digitize objects of various sizes ranging from small diagnostic artifacts to large, complex sites of monumental architecture (FARO Technologies 2011a,b).

A number of companies manufacture various types of 3D laser scanners. Generally, these units use light detection and ranging technology (LiDAR), where laser pulses determine the distance to an object or surface. The distance to an object is determined by using time-of-flight between transmission of a pulse and detection of the reflected signal. A point cloud of data is then collected and can be converted into the true shape of the object.

Laser scanning technologies have been investigated for use in the assessment of bridges. The Pennsylvania Department of Transportation (PennDOT), for example, completed an initial study in 1999 with the goal of evaluating the technology for creating as-built drawings. A comparison of traditional and 3D scanning estimated an overall time savings of 100+ person-hours through the use of 3D scanning (Foltz 2000). Based on these results, PennDOT purchased two laser scanners in 2000. A second assessment was completed in 2003 showing that laser scanning could be used cost effectively for preliminary surveys to develop triangular network (TIN) meshes of roadway surfaces and to measure bridge beam camber more safely and quickly than with conventional approaches. Other applications noted in this publication showed potential applications for laser scanning to include developing as-built drawings of historical structures, such as the bridges of Madison County.

Laser Scanning of Historic Covered Bridges

Covered bridges are part of the fabric of American history. Although much effort is expended to preserve these structures, many are lost forever. The National Park Service's Historic American Engineering Record (HAER) has efforts under way to document historic structures. Their Level I documentation is defined in the Secretary of the Interior's Standards and Guidelines for Architectural and Engineering Documentation and consists of measured and interpretive drawings, large-format photographs, and written historical reports. To assist in this effort, newer technologies needed to be explored that can provide as-built records at a faster rate and with more accuracy.

The University of Minnesota Duluth's Natural Resources Research Institute (UMD NRRI), in cooperation with the USDA Forest Products Laboratory and Federal Highway Administration, completed a study to examine the use of laser scanning technologies for providing as-built records for historic covered timber bridges. Additional support for the study was provided by the City of Zumbrota, Minnesota, via funds from the Operational Research Program (OPERA) of the Minnesota Local Road Research Board. Following is a brief description of that study; detailed documentation is presented in Ross et al. (2012).

The bridges for scanning and assessment used in this study are located in Wisconsin, Iowa, and Minnesota. Key background information (Table 4.1), detailed descriptions, and photographs are summarized in the following paragraphs. Contact was made with the appropriate government or administrative staff for each bridge, and permission was also secured to obtain scans. Note that four of the bridges scanned included the historic Madison County, Iowa, bridges.

Laser scanning was completed by Sightline, LLC (Milwaukee, Wisconsin), a private firm that specializes in the use of laser scanning technologies with structures. A FARO LS 880 model and a Photon 120 model (FARO Technologies, Lake Mary, Florida) used similar technology to acquire the scan points. A laser beam is emitted from a rotating mirror toward the area being scanned. The laser beam is reflected back to the scanner by objects in its path. The distance to the objects defining an area is calculated, as well as their relative vertical and horizontal angles (FARO Technologies 2011a,b). Approximately 20 to 30 scans were completed for each bridge from a variety of angles using a FARO LS 880 laser scanner. Figure 4.8 shows a FARO laser scanner being used to inspect a historic covered bridge. The scanning process consisted of scans that were completed by Sightline, and data processing was completed by the UMD NRRI. The steps in the process were as follows (with an estimate of time required for each step):

1. Paper "targets" were placed in numerous locations on the bridge for use in linking up to 30 individual laser scans together. Time duration: 2 person-hours.

Table 4.1—Background information on the historic covered timber bridges used in the laser scanning study

State	City	Bridge	Built (year)	Span (ft)	Placement on National Register of Historic Places	Design
Wisconsin	Cedarburg	Red	1876	120	March 14, 1973	Lattice through truss
Iowa	Winterset	Roseman	1883	106	September 1, 1976	Lattice through truss
Iowa	St. Charles	Imes	1870	81	February 9, 1979	Lattice through truss
Iowa	Winterset	Hogback	1884	106	August 28, 1976	Lattice through truss
Iowa	Winterset	Cutler–Donahoe	1871	79	October 8, 1976	Lattice through truss
Minnesota	Zumbrota	Zumbrota	1869	120	February 20, 1975	Lattice through truss

**Figure 4.8—A FARO laser scanner used to scan a historic covered bridge.**

2. A FARO LS 880 3D laser scanner was used to conduct the scan. The scanner was placed at several vantage points inside and outside the bridge, so that all visible surfaces of the bridge could be documented. Individual scans were completed in approximately 15 to 20 min. Each completed scan was saved to a computer as an .ls file. (A computer with substantial computing power and RAM is highly recommended to process the millions of data points created during the scanning process.) Time duration: 10 person-hours.
3. After all visible portions of the bridge were scanned, the software files were linked using FARO Scene software. This software allows an individual to identify the targets placed prior to the scanning process and use them to link or attach one scan to another. It is also possible to filter, using various techniques or software, extraneous images (for instance, a vehicle traveling across the bridge or background vegetation). The process of linking two individual scans was repeated several times until all scans were compiled into one large scan depicting the entire bridge. Time duration: 9 person-hours.
4. Once a bridge was completely assembled using all the individual scans, it was exported as a point cloud, depicting all visible aspects and actual dimensions of the bridge. This cloud of data was then exported into AutoCAD software (Autodesk, Inc., San Rafael,

California) using an add-in provided by Kubit USA (Houston, Texas). This add-in allows a user to import point cloud files in addition to the ones inherently recognized by AutoCAD 2011 and has additional modeling tools for working directly with point cloud data in AutoCAD. Once a point cloud has been exported into AutoCAD, it can be divided into multiple cross sections. This is done so that specific components of the bridge can be seen more clearly. From this point, two dimensional (2D) and 3D models of the bridge were generated. Time duration: 40+ person-hours.

Results

Several types of images can be presented from processing point cloud data. These images include a point cloud image resulting from only one scan, a point cloud image created from multiple scans, a parametric picture created from a point cloud scan, a point cloud image imbedded in AutoCAD, and 2D/3D AutoCAD images. These images can be created using FARO Scene software or AutoCAD 2011 with a Kubit USA add-in. As to project activities, most of the scan processing for the Cedarburg, Wisconsin, bridge was completed by Sightline, LLC. Processing of scan data for the Madison County, Iowa, bridges and the Zumbrota, Minnesota, bridge was completed by the UMD NRRI. The project team decided that based on processing time estimates, detailed in-point cloud and 3D AutoCAD data would be provided for the Cedarburg, Imes, and Zumbrota Bridges, with only point cloud data for the Hogback, Cutler–Donahoe, and Roseman Bridges. All digital points could be further processed to develop detailed dimensional information because point cloud images are considered accurate data. Point cloud images could also be further processed using Kubit USA add-ins for AutoCAD 2011.

Cedarburg, Wisconsin, Covered Bridge

Figures 4.9 to 4.11 show various images created from 3D laser scanning conducted during the project for the Cedarburg Bridge. This includes point cloud images and AutoCAD drawings created from the point cloud images.

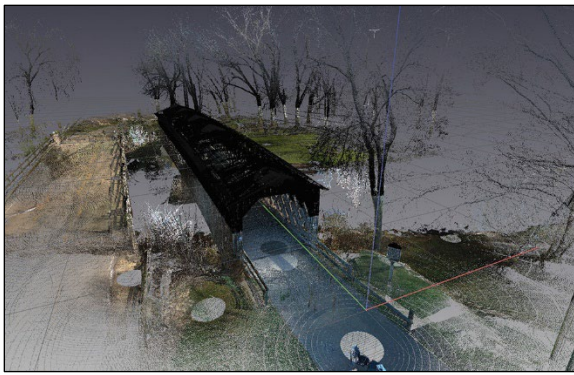


Figure 4.9—Point cloud image of the Cedarburg Bridge (SightLine, LLC).

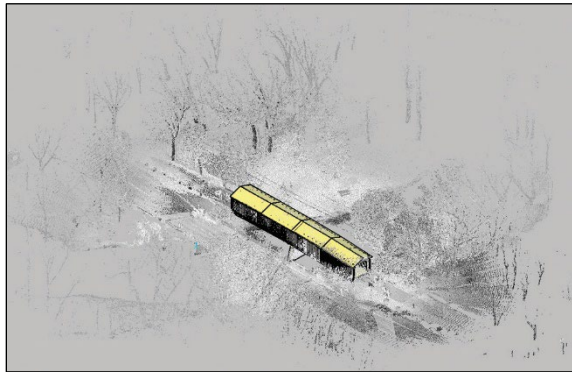


Figure 4.10—3D AutoCAD image of the Cedarburg Bridge embedded in point cloud data (SightLine, LLC).



Figure 4.11—Dimensioned point cloud image of bridge entry on Cedarburg Bridge (SightLine, LLC).

Imes Bridge, Madison County, Iowa

The Imes Bridge is the only Madison County Bridge for which the point cloud data were used to create AutoCAD drawings. For the Imes Bridge, the data show accurate dimensions and shape of the bridge at the time of scanning. No corrections were made to straighten any bridge

members, such as would be done to create new construction drawings.

Ground Penetrating Radar

Ground penetrating radar (GPR) is a nondestructive inspection tool designed based on electromagnetic (EM) theory, and it can be used to probe materials characterized by low-loss dielectric properties, such as concrete, asphalt, and wood (Annan 2009, Mai et al. 2015). GPR has gained attention over the past two decades as an inspection tool to evaluate wood structures by demonstrating its capability to detect moisture pockets, voids, and metal connectors, which are critical for assessing wood structures (Rodrigues et al. 2021).

GPR inspection has several advantages over other wood inspection techniques that make it an attractive tool. This technique is faster than point-by-point inspection methods, is available commercially, is portable, and does not require a couplant to be used (Muller 2002, 2003; Rodríguez Abad et al. 2008, Hans et al. 2015a,b). The greatest advantage is the capability to inspect large areas (such as a bridge structure (Mai et al. 2015)) in a short time. GPR is already an accepted tool for structural inspection. Inspectors familiar with GPR can be trained to adapt the already familiar tool for use on wood-based materials. Adaptation of existing tools and skills reduces both the need for companies to invest in new equipment and the training time of inspectors (Senalik et al. 2022).

Three components constitute the basic GPR unit: transmitting and receiving antennas, a generator of electromagnetic pulses, and a data acquisition system. GPR inspection can be performed either through an object or from one side of the object. In this case, an object can be anything from a small item, such as a single piece of dimension lumber, to an entire structure, like a bridge deck. For inspection through the object, the transmitting and receiving antennas are placed on opposite sides of the object; the transmitting antenna directs the radiation through the object to a receiving antenna. For single-sided inspection, the transmitting and receiving antennas are on the same side of the object; it is common for the transmitting and receiving antennas to be housed within the same device. The transmitter directs waves into the object, where wave energy is scattered or reflected toward the transmitter/receiver. The receiver records the reflected waves as raw data for processing and interpretation (Kasal and Tannert 2010).

Several wood characteristics affect radar propagation including moisture content, density, temperature, shape and size of the inspected object, and preservation treatment (Mai et al. 2015, Hans et al. 2015a, Torgovnikov 1993, Redman et al., 2016). Including information about the condition of the wood at the time of inspection will improve interpretation and analysis of GPR output. The effect of each characteristic on GPR has been examined in a variety of research studies. For additional information, Rodrigues et

al. (2021) provides an extensive review of research involving the use of GPR on wood structures.

Literature Cited

- Allison, R.B.; Wang, X.; Ross, R.J. 2008. Visual and nondestructive evaluation of red pines supporting a ropes course in the USFS Nesbit Lake Camp, Sidnaw, Michigan. In: Proceedings, 15th international symposium on nondestructive testing of wood. Madison, WI: Forest Products Society: 43–48.
- Annan, A. 2009. Electromagnetic principles of ground penetrating radar. In Ground penetrating radar theory and applications. Amsterdam, The Netherlands: Elsevier: 1–40. <https://doi.org/10.1016/B978-0-444-53348-7.00001-6>
- Bucur, V. 2003. Nondestructive characterization and imaging of wood. Berlin, Heidelberg, Germany: Springer-Verlag. 354 p. <https://doi.org/10.1007/978-3-662-08986-6>
- Cai, Z.; Hunt, M.O.; Ross, R.J.; Soltis, L.A. 2000. Static and vibration moduli of elasticity of salvaged and new joists. Forest Products Journal. 50(2): 35–40.
- Cai, Z.; Ross, R.J.; Hunt, M.O.; Soltis, L.A. 2002. Pilot study to examine use of transverse vibration nondestructive evaluation for assessing floor systems. Forest Products Journal. 52(1): 89–93.
- Dackermann, U.; Crews, K.; Kasal, B.; Li, J.; Riggio, M.; Rinn, F.; Tannert T. 2014. In situ assessment of structural timber using stress-wave measurements. Materials and Structures. 47(5): 787–803. <https://doi.org/10.1617/s11527-013-0095-4>
- Deflorio, G.; Fink, S.; Schwarze, F.W.M.R. 2008. Detection of incipient decay in tree stems with sonic tomography after wounding and fungal inoculation. Wood Science and Technology. 42:117–132. <https://doi.org/10.1007/s00226-007-0159-0>
- Divos, F. 2006. Stress wave based acoustic tomography. IUFRO workshop on nondestructive testing of wood, Harbin, China. August 7–9, 2006 (unpublished presentation, personal communication).
- Divos, F.; Szalai, L. 2002. Tree evaluation by acoustic tomography. In: Proceedings of the 13th international symposium on nondestructive testing of wood. Madison, WI: Forest Products Society: 339–349.
- FARO Technologies. 2011a. FARO laser scanner training [Print presentation]. Lake Mary, FL: FARO Technologies.
- FARO Technologies. 2011b. Measuring arms, laser tracker, laser scanner. In: FARO laser scanner focus 3D—applications. Lake Mary, FL: FARO Technologies. <http://www.faro.com/focus/applications>.
- Foltz, L. 2000. 3D laser scanner provides benefits for PennDOT bridge and rockface surveys. Professional Surveyor magazine. (May). <http://www.profsurv.com/magazine/article.aspx?i=590>.
- Forsman, J.W.; Erickson, J.R. 2001. Final report on a study of methods to determine the effect of decayed lumber in floor systems. Houghton, MI: School of Forestry and Wood Products, Michigan Technological University.
- Gilbert, E.A.; Smiley, E.T. 2004. PiCUS sonic tomography for the quantification of decay in white oak (*Quercus alba*) and hickory (*Carya* spp.). Journal of Arboriculture. 30(5):277–280. <https://doi.org/10.48044/jauf.2004.033>
- Hans G.; Redman D.; Leblon B.; Nader J.; La Rocque A. 2015a. Determination of log moisture content using early-time ground penetrating radar signal. Wood Material Science & Engineering. 10(1): 112–129. <https://doi.org/10.1080/17480272.2014.939714>
- Hans G.; Redman D.; Leblon B.; Nader J.; La Rocque A. 2015b. Determination of log moisture content using ground penetrating radar (GPR). Part 1. Partial least squares (PLS) method. Holzforschung. 69(9): 1117–1123. <https://doi.org/10.1515/hf-2014-0286>
- Hunt, M.O.; Ross, R.J.; Wang, X.; Soltis, L.A.; Leavitt, R.R.; Cai, Z. 2007. Assessment of in-place wood floor systems. Journal of Architectural Engineering. 13(1): 30–35. [https://doi.org/10.1061/\(ASCE\)1076-0431\(2007\)13:1\(30\)](https://doi.org/10.1061/(ASCE)1076-0431(2007)13:1(30))
- Jayne, B.A. 1959. Vibrational properties of wood as indices of quality. Forest Products Journal. 9(11): 413–416.
- Kasal, B.; Tannert, T. 2010. In situ assessment of structural timber. State of the art report of the RILEM technical committee 215-AST. Berlin/Heidelberg, Germany: Springer: 123. <https://doi.org/10.1007/978-94-007-0560-9>
- Mai, T.C.; Razafindratsima, S.; Sbartaï, Z.M.; Demontoux, F.; Bos, F. 2015. Non-destructive evaluation of moisture content of wood material at GPR frequency. Construction and Building Materials. 77: 213–217. <https://doi.org/10.1016/j.conbuildmat.2014.12.030>
- Muller, W. 2002. Trial of ground penetrating radar to locate defects in timber bridge girders. In: Proceedings of the riding the wave to sustainability: IPWEAQ 2002 State Conference, Nossa Lakes, Queensland, Australia, 6–10 Oct.
- Muller, W. 2003. Timber girder inspection using ground penetrating radar. Insight—Non-Destructive Testing and Condition Monitoring. 45(12): 809–812(4). <https://doi.org/10.1784/insi.45.12.809.52990>
- Pellerin, R.F. 1965. A vibrational approach to nondestructive testing of structural lumber. Forest Products Journal. 15(3): 93–101.
- Redman, J.D.; Hans, G.; Diamanti, N. 2016. Impact of wood sample shape and size on moisture content measurement using a GPR-based sensor. IEEE Journal of Selected Topics in Applied Earth Observations and Remote

- Sensing. 9(1): 221–227.
<https://doi.org/10.1109/JSTARS.2016.2517601>
- Riggio, M.; Piazza, M. 2011. Stress wave tomography for the analysis of structural timber: limits, applications, possible combinations with other analysis techniques. In: Proceedings, 17th international symposium on nondestructive testing and evaluation of wood symposium. Sopron, Hungary: University of West Hungary: 611–615.
- Rodrigues, B.P.; Senalik, C.A.; Wu, X.; Wacker, J. 2021. Use of ground penetrating radar in the evaluation of wood structures: a review. *Forests*. 12(4): 492.
<https://doi.org/10.3390/f12040492>
- Rodríguez Abad, I.; Martínez Sala, R.; García García, F.; Capuz Lladro, R.; Diez Barra, R. 2008. A non-destructive method for the evaluation of density and moisture content. In: 12th international conference on ground penetrating radar, June 16–19, Birmingham, UK.
- Ross, R.J.; Brashaw, B.K.; Anderson, S.J. 2012. Use of laser scanning technology to obtain as-built records of historic covered bridges. Research Paper FPL–RP–669. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 18 p. <https://doi.org/10.2737/FPL-RP-669>
- Senalik, C.A.; Wacker, J.; Wang, X. 2022. Evaluating the efficacy of ground-penetrating radar as an inspection tool for timber bridges. 4th international conference on timber bridges, May 9–12, Biel/ Bienne, Switzerland.
<https://doi.org/10.24451/6j5j-qw13>
- Soltis, L.A.; Wang, X.; Ross, R.J.; Hunt, M.O. 2002. Vibration testing of timber floor systems. *Forest Products Journal*. 52(10): 75–81.
- Tomikawa, Y.I.; Arita, K.; Yamada, H. 1990. Nondestructive inspection of wooden poles using ultrasonic computed tomography. *IEEE Transactions UFFC*. 33(4): 354–358. <https://doi.org/10.1109/T-UFFC.1986.26842>
- Torgovnikov G. 1993. Dielectric properties of wood and wood-based Materials. New York, NY, USA: Springer-Verlag. <https://doi.org/10.1007/978-3-642-77453-9>
- Wang, X.; Allison, R.B. 2007. Decay detection in red oak trees using a combination of visual inspection, acoustic testing, and resistance microdrilling. *Arboriculture & Urban Forestry*. 34(1):1–4. <https://doi.org/10.48044/jauf.2008.001>
- Wang, X.; Wacker, J.P. 2006. Condition assessment of main structural members of the U.S. Brig Niagara. Inspection report, NRRI/TR-2006/25. Duluth, MN: University of Minnesota: 61 p.
- Wang, X.; Divos, F.; Pilon, C.; Brashaw, B.K.; Ross, R.J.; Pellerin, R.F. 2004. Assessment of decay in standing timber using stress wave timing non-destructive evaluation tools—a guide for use and interpretation. General Technical Report FPL–GTR–147. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory: 12 p. <https://doi.org/10.2737/FPL-GTR-147>
- Wang, X.; Wacker, J.P.; Morison, A.M.; Forsman, J.W.; Erickson, J.R.; Ross, R.J. 2005. Nondestructive assessment of single-span timber bridges using a vibration-based method. Research Paper FPL–RP–627. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 15 p. <https://doi.org/10.2737/FPL-RP-627>
- Wang, X.; Wiedenbeck, J.; Liang, S. 2009. Acoustic tomography for decay detection in black cherry trees. *Wood and Fiber Science*. 41(2):127–137.
- Yu, Z.; Zhang, S.; Li, H.; Liu, X. 2009. Impulse stress wave tomography for inspecting wood components of ancient wood structures. In: Proceedings, 16th international symposium on nondestructive testing and evaluation of wood. Beijing, China: Beijing Forestry University: 169–173.

Post-Fire Assessment of Structural Wood Members

Laura E. Hasburgh
Brian M. Kukay

Because the interior of a charred wood member normally retains its structural integrity, large structural wood members may not need to be replaced after a fire. Engineering judgment is required to determine which members can remain and which members need to be replaced or repaired. The lack of established methods to directly determine residual capacity of damaged wood members dictates a systematic approach, starting with assessment of likely fire exposure. Assessment includes visual inspection of damaged members, visual inspection of connections, and visual inspection of any protective membranes (such as gypsum board). Potential methods for nondestructive evaluation of structural properties of a fire-damaged wood member are discussed after a brief review of the degradation of wood when exposed to fire.

Thermal Degradation of Wood

Wood degrades when exposed to elevated temperatures. Fire exposure causes thermal degradation or pyrolysis of wood, whereby the wood is converted to volatile gases and a char residue. The extent of any thermal degradation depends on both temperature and duration of exposure. A temperature of approximately 300 °C (550 °F) is commonly associated with the base of the char layer for wood subjected to direct fire exposure in the standard fire-resistance test (ASTM E119) (ASTM 2022b) and is considered the nominal temperature at which wood converts to char. Vigorous production of flammable volatiles occurs in the temperature range of 300 to 450 °C (550 to 842 °F). Temperatures below a threshold of 300 °C can still have a demonstrated detrimental effect on wood. The *National Design Specification for Wood Construction* indicates that properties of wood heated to 150 °F (66 °C) for brief periods will essentially return to their original levels when the wood is cooled (AWC 2018). However, prolonged exposure to temperatures above 66 °C may result in a permanent loss in properties (Kretschmann 2010). The change in residual strength properties of similarly sized individual wood members can differ at elevated temperatures, depending, in part, on how they are loaded.

For example, permanent loss in compressive strength has been shown to occur at higher temperatures than a comparative loss in tensile strength (Schaffer 1977).

Kinetic parameters are used to model rate of thermal degradation. Detailed discussions of the processes involved can be found in the literature (Browne 1958, Shafizadeh 1984, White and Dietenberger 2001, Dietenberger and Hasburgh 2016). Degradation resulting in weight loss is associated with temperatures exceeding 100 °C. For temperatures less than 200 °C (392 °F), charring of wood requires prolonged exposure. Significant degradation occurs in the temperature range of 200 to 300 °C (392 to 572 °F). Engineered wood products such as plywood, particleboard, cross-laminated timber and glued-laminated timber have ignition properties very similar to those of solid wood, so the solid wood results will generally be applicable to them. Piloted ignition at heat fluxes sufficient to cause a direct-flaming ignition normally occurs at surface temperatures of 300 to 365 °C (Babrauskas 2001). Sudden surface heating of a wood member in a fire results in surface charring and a steep temperature gradient. Thus, the stages of thermal wood degradation previously discussed become zones of degradation in a structural wood member exposed to fire. In a broad sense, there is an outer char layer, a pyrolysis zone, a zone of elevated temperatures, and the cool, unmodified interior (Fig. 5.1). These zones of degradation generally correspond to the temperature profile through the cross section.

Fire-Damaged Wood

For wood members that have charred, the char layer can be easily scrapped off. The char itself has no residual load capacity. The wood beneath the char layer has residual load capacity, but this residual capacity will be less than the load capacity prior to the fire. Members that have only visual smoke damage or slight browning of the surface will maintain a significant percentage of the original residual load capacity.

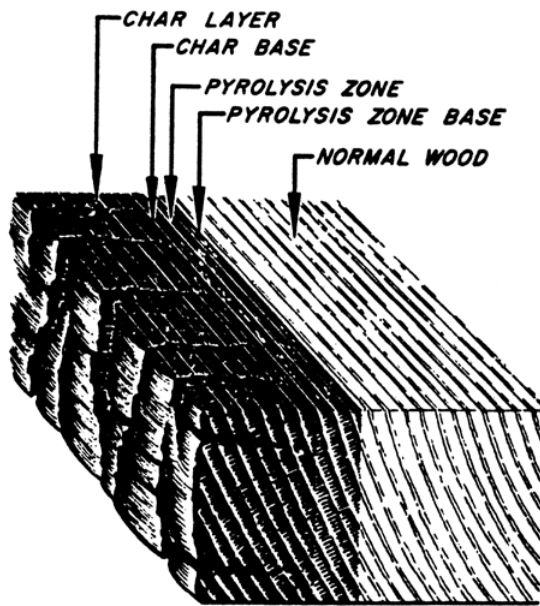


Figure 5.1—Degradation zones in a charred piece of wood.

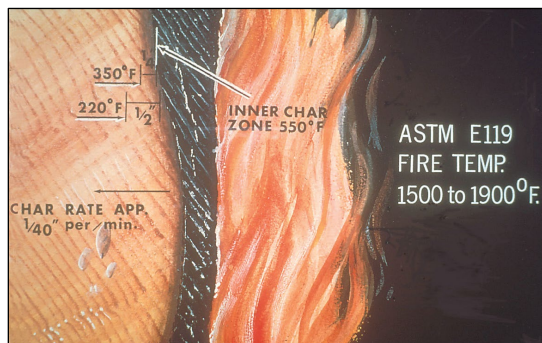


Figure 5.2—Charring wood member exposed to the standard fire exposure of 815 to 1,038 °C.

ASTM E119 (ASTM 2022b) standard test method is the test for determining the fire-resistance rating of a structural member or assemblies for building code purposes. The standard fire exposure is a specified time–temperature curve of 538 °C (1,000 °F) at 5 min, 843 °C (1,550 °F) at 30 min, 927 °C (1,700 °F) at 1 h, and 1,010 °C (1,850 °F) at 2 h. This severe and direct fire exposure results in rapid surface charring, the development of a char layer with a base temperature of approximately 300 °C (550 °F), and a steep temperature gradient of 177 °C (350 °F) at 6 mm (0.2 in.) and 104 °C (220 °F) at 13 mm (0.5 in.) beneath the char layer (Fig. 5.2). For a large wood member directly exposed to the standard fire exposure, the char rate is approximately 0.6 mm/min (38 mm/h, 1.5 in/h, 1/40 in/min). Char rate in the standard test depends on species, density, moisture content, and duration of exposure (White and Nordheim 1992). Most research on fire endurance of wood members has been directed toward predicting or understanding their

performance in this test (White 2008, Buchanan 2001). Fire endurance research on wood for other fire exposures or post-fire situations is increasing with the adoption of performance-based design methods, but it is still limited (Friquin 2010; Brandon et al. 2017, 2021a; Hasburgh et al. 2020).

Without extinguishment, a fire has three phases:

1. Growth of the fire from ignition to flashover
2. Fully developed, post-flashover fire
3. Decay period of declining temperatures as fuel is consumed

Although fire exposure transitions through three phases, the fire exposure of the standard fire-resistance test approximates only the second phase, or fully developed phase. Information gathered in a NFPA 921 *Guide for Fire and Explosion Investigations* (NFPA 2021) investigation will help establish likely maximum temperatures in various locations, whereas a standard fire exposure represents exposure of a structural member or assembly in the immediate vicinity of a fully developed, post-flashover fire. Flashover is the full involvement of combustible contents of the compartment and is associated with flames coming out the door in addition to other temperature and heat flux criteria in the standard room-corner tests, such as NFPA 286 *Standard Methods of Fire Tests for Evaluating Contribution of Wall and Ceiling Interior Finish to Room Fire Growth* and E2257 *Standard Test Method for Room Fire Test of Wall and Ceiling Materials and Assemblies* (NFPA 2019, ASTM 2022c). The following situations are all examples of fire exposures inconsistent with the standard fire exposure:

- Exposure of wood components a distance away from the fully developed post-flashover fire (such as roof rafters exposed to hot gases from a fire in a room below)
- Smoldering cellulosic insulation fire near wood rafters
- High-intensity fire that is quickly extinguished
- Prolonged heating of wood after extinguishment
- Wood behind gypsum wallboard or other protective membranes

It is advisable to first obtain an informed understanding of the fire itself and the fire exposure to the structural members being evaluated. The general rules are based on assumptions of temperature gradients within uncharred wood during the fire when reducing the cross section for a fire equivalent to the standard exposure.

Fire Investigation

As noted by Buchanan (2001), it is valuable to visit the fire scene immediately after the fire to make notes of all of the damage that occurred. The post-fire situation after the mid-1990s fire in a building at the USDA Forest Products Laboratory, is illustrated in Figure 5.3. For most fire investigations conducted by fire departments and other investigators, the intent is to establish the cause for initial ignition and fire growth. The standard guide for such investigations is NFPA 921. This guide advocates a

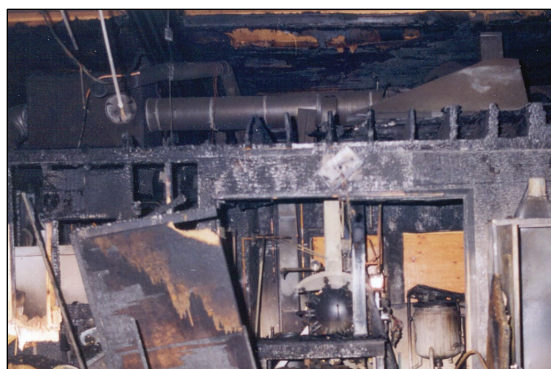


Figure 5.3—Area of fire origin in Building 2 fire at the Forest Products Laboratory.



Figure 5.4—Charred and uncharred wood members in the Building 2 fire at the Forest Products Laboratory.

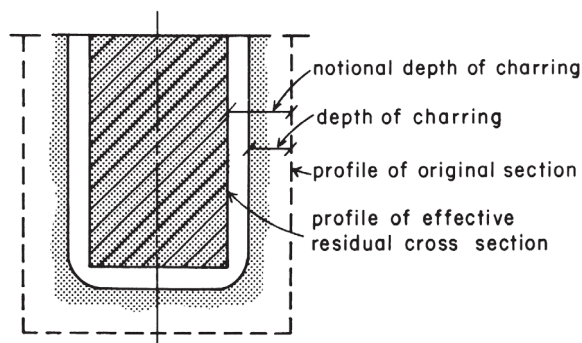


Figure 5.5—Residual cross section of a charred wood member.

methodology based on a systematic approach and attention to all relevant details. For the purpose of a post-fire assessment of structural wood members, the intent of an immediate investigation is to better estimate the intensity and duration of fire exposure to wood members during and after the fire. Such insight will be helpful in making engineering judgments on likely temperatures within the charred and uncharred wood members. NFPA 921 provides information on various observations for estimating

temperatures developed during a fire. For post-fire assessment, exposure of structural wood members to elevated temperatures during the decay period of fire development should be considered. Although temperatures are lower during the decay period, duration of exposure can be prolonged compared with the duration of the fully developed post-flashover fire phase. The steep temperature gradient near fire-exposed surfaces assumed in normal assessment of residual load capacity is based on transient heating coupled with progressive charring of the wood cross section. During prolonged cooling, surface temperatures will decline while temperatures on the cool inside portion of the cross section will increase. Tests have indicated that this temperature increase in the interior of a wood member due to redistribution of heat after fire exposure is particularly the case for wood protected with gypsum board. Because the decay or post-extinguishment period is one of reduced temperatures, many damage observations made at the fire scene will be less helpful in determining intensity and duration of the exposure. More careful and detailed inspections of structural members and connections will likely need to be done in a subsequent inspection when the general debris has been removed.

Visual Inspection of Charred Members

Wood exposed to temperatures in excess of approximately 300 °C (550 °F) will form a residual char layer on the surface (Fig. 5.4). With prolonged exposure, charring of wood can occur at lower temperatures. Although it retains the anatomical structure of uncharred wood, the char layer can be easily scraped or sand-blasted off.

In an inspection of charred members, it is important to understand that the char layer exhibits significant shrinkage, resulting in fissures in the char layer. Glowing combustion of char can also occur. As a result, the thickness of the residual char layer is less than depth of charring (Fig. 5.5). The profile of the original section will need to be determined from construction records or similar uncharred members.

Load Capacity of Damaged Members

Thermal degradation of wood results in loss of structural properties. Thermal degradation of wood is a kinetic process. Thermal properties of wood result in development of a distinct temperature gradient in a wood member when it is exposed to fire. Thus, loss of structural properties of fire-damaged wood members depends on both temperature within the wood member and duration of the elevated temperatures.

For an exposed wood member large enough that the temperature of its center or back surface has not increased, the temperature gradient within a wood beam or column for standard fire exposure has been documented. For such a fire

exposure, the base of the char layer has a clear demarcation. For standard fire exposure of a semi-infinite slab, the temperature profile beneath the base of the char layer can be approximated by

$$T = T_i + (T_p - T_i)(1 - x/a)^2 \quad (5.1)$$

where T_i is initial temperature of the wood ($^{\circ}\text{C}$), T_p is temperature of the base of the char layer (300°C), x is distance beneath the char layer (mm), and a is thickness (mm) of the layer of elevated temperatures (Fig. 5.6).

From the data of White and Nordheim (1992), the average value of a was 33 mm (1.3 in.) for the eight species tested (Janssens and White 1994). An alternative exponential model was developed by Schaffer (1965, 1982b). This temperature profile is valid after a standard fire exposure of about 20 min. The thickness of the zone of elevated temperatures decreases for increased fire exposure severity. For a char depth of 12 mm (0.5 in.), the observed depth of elevated temperatures decreased from 36 to 30 mm (1.4 to 1.2 in.) when the level of a constant heat flux exposure was increased from 15 kW/m^2 to 50 kW/m^2 (White and Tran 1996). For a char depth of 6 mm (0.2 in.), the depths of elevated temperature were 34 and 25 mm (1.3 and 1.0 in.) for heat flux levels of 15 kW/m^2 and 50 kW/m^2 , respectively.

The irreversible effects of elevated temperatures on mechanical properties depend on moisture content, heating medium, temperature, exposure period, and to some extent species and size of the piece involved (Kretschmann 2010). Over a period of months, temperatures of 66°C (150°F) can significantly reduce modulus of rupture (MOR). Graphs of the permanent effect of oven heating for periods up to 200 days on MOR and modulus of elasticity (MOE) can be found in the *Wood Handbook* (Kretschmann 2010). After 50 days of oven heating at 115°C (240°F), MOR at room temperature was approximately 90% that of unheated controls. For samples heated at 135°C (275°F), MOR at room temperature was approximately 62% that of unheated controls after 50 days. Permanent losses in strength occurred more rapidly with heating temperatures of 155°C (310°F) and 175°C (350°F). Elevated temperatures below charring temperature appear to have little effect on MOE.

Using the data of Knudson and Schniewind (1975) and Schaffer (1973), Schaffer (1977, 1982a,b) developed graphs of temperature effects on tensile (Fig. 5.7) and compressive (Fig. 5.8) strength. The data illustrate the reduced impact that temperature has on residual strength properties once the wood has cooled to room temperature and has been reconditioned back to 12% moisture content. At a depth of only 8 mm (0.3 in.) beneath the char layer, temperature has dropped to 200°C (Fig. 5.6). At 200°C , residual strength properties still exceed 80% of initial room temperature values (Figs. 5.7 and 5.8). Additional information on the effects of temperature and moisture content on strength

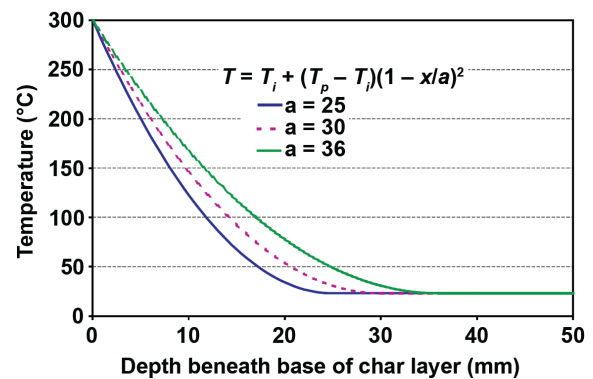


Figure 5.6—Temperature profile beneath the base of the char layer of a semi-infinite wood slab directly exposed to the ASTM E119 standard fire exposure.

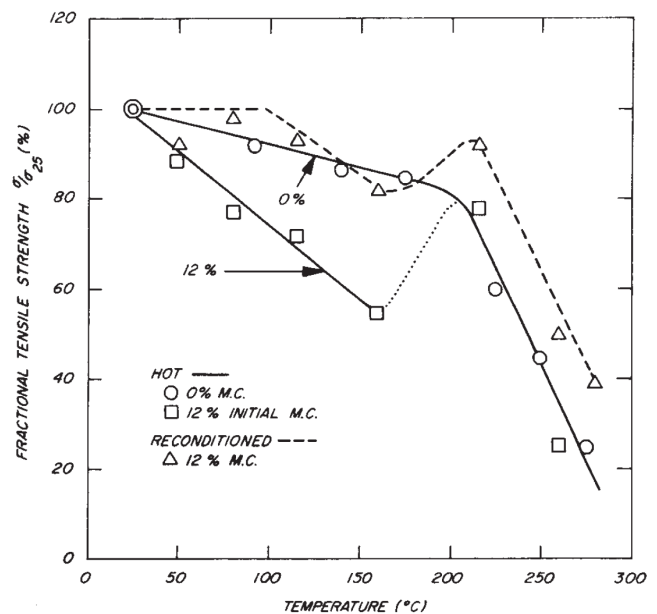


Figure 5.7—Fractional tensile strength as function of temperature (Schaffer 1977, 1982b, 1984).

properties of wood are provided by Schaffer (1982a), Gerhards (1982), Kretschmann (2010), and Buchanan (2001). During an actual fire, the residual capacity of the wood member is affected by steam generated within the member (Buchanan 2001) and zones of elevated moisture content (White and Schaffer 1980). Schaffer (1982a) concluded his discussion of properties of timbers exposed to fire by noting that because of the short time that wood just beyond the char line has been at its maximum temperature, overall strength loss in heavy sections will be small and residual load-carrying capacity will be closely approximated by using the initial strength properties of the uncharred residual cross section as a base.

Thus, the steep temperature gradient allows us to easily estimate residual load capacity of the member by reducing

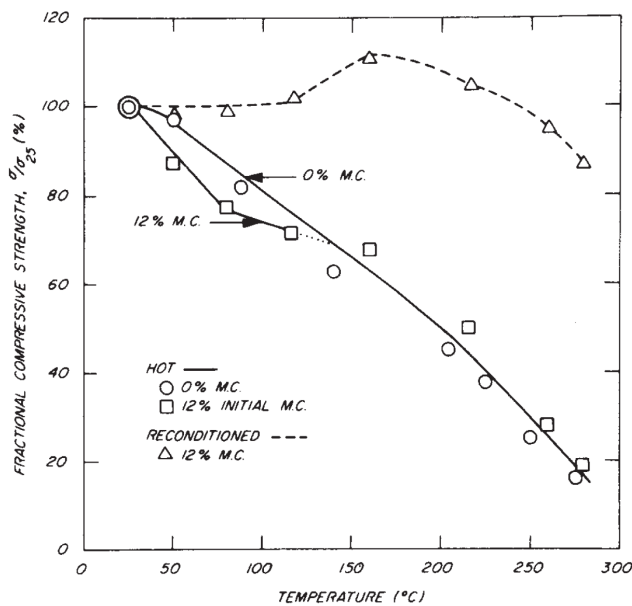


Figure 5.8—Fractional compressive strength as function of temperature (Schaffer 1982a,b).

residual cross section of the uncharred section by an additional amount to improve the safety margins of our calculations. In general, fire endurance design of wood members is referred to as the reduced or effective cross-section method (Fig. 5.5). A notional char depth defines the effective cross section for calculation purposes. Although visual char depths may provide some insight, depth of char and overall damage can make predicting a time of exposure to fire from the char characteristics difficult (Schroeder 1999). In their model of a large glued-laminated member in a fire, Schaffer et al. (1986) calculated a reduction of 8 mm (0.3 in.) for tensile strength loss. In the U.S. procedure for fire endurance design of wood members, reduction for load capacity calculations is an additional 20% of the actual depth of charring (AWC 2021). For a 1-h fire-resistance test, this calculates to 8 mm (0.3 in.) (char depth of 38 mm (1.5 in.)). Complicating factors, including grain orientation, heat flux exposure, and moisture content, can vary significantly, even within a given species. Accordingly, a uniform char rate cannot always be supported (Schroeder 1999). The AF&PA American Wood Council procedure also uses a nonlinear char rate (White and Nordheim 1992). In calculating the ability of a member to maintain a specified load in a fire test, reduced cross-sectional area is multiplied by ultimate strength properties. This procedure for calculations of fire-resistance ratings is discussed in the *National Design Specification for Wood Construction* (AWC 2018) and the *Fire Design Specification* (AWC 2023). Increasing the reduction due to charring by 20% is used in the calculations to account for rounding at the corners and reduction of strength and stiffness of the heated zone (AWC 2023).

In calculating residual load capacity of a member after a fire, the reduced cross section would however be multiplied by the allowable stresses as in normal allowable stress design (AWC 2018). Unless the fire is severe, replacing all the large members after a fire is usually not necessary. Fox (1974) conducted a study using three 50-ft 24F DF stress-grade beams that were salvaged from a warehouse after a severe fire had reduced the cross section of each member by nearly 10%. Two-point loading tests were conducted on each beam after they were cut into six 10-ft sections and three 30-ft sections. Results showed no evidence that the fire had reduced the strength of the beams beyond the reduced cross section and affected glue line (Fox 1974). According to Schaffer (1982a), because of the short time that wood just beyond the char line is at its maximum temperature, overall strength loss in heavy sections will be small and residual load-carrying capacity will be closely approximated by using the initial strength properties of the uncharred residual cross section as a base. Time of exposure and temperature gradient within fire-damaged members may, in some instances, warrant a more in-depth analysis by a qualified professional. Using the information of Kukay et al. (2013), four glued-laminated beams were exposed to a time-temperature curve intended to produce a significant zone of damaged wood due to elevated temperatures within the residual wood section. In this instance, loss in strength of the residual section was arrived at through a longer duration and lower temperature fire exposure, with a more gradual temperature gradient within the fire damaged member. Results show that relative changes in apparent MOE and MOR changed by 20% and 46%, respectively, on average after the beams had been fire damaged in comparison to a control group that was not fire damaged. This marked decrease in flexural properties goes beyond simply reducing cross section once the char layer has been removed for members that can otherwise be expected to remain in service (Kukay et al. 2013).

Any assessment of a glued-laminated beam must take into account the grade of the individual laminates. This is particularly the case for beams with a high-grade tension laminate that likely was subjected to the most charring. In his discussion of assessment and repair of fire-damaged buildings, Buchanan (2001) notes that residual wood under the charred layer of heavy timber structural members can be assumed to have full strength. He continues with the comment that the size of the residual cross section can be determined by scraping away the charred layer and any wood that is significantly discolored. Williamson (1982a) recommends that the amount of char/wood that should be removed by sandblasting or other means should be equal to the char layer plus approximately 6 mm (0.25 in.) or less of the wood below the char-wood interface. The exposed surface should then have the appearance of normal wood. Williamson (1982a) makes a distinction between design capacities controlled by compression strength or stiffness and those controlled by tensile strength. In the compression

case, the removal of the additional 6 mm (0.25 in.) of wood is sufficient to use the residual cross section in the design calculations without any additional adjustment. For the case of tensile design calculations, Williamson (1982a) recommends an additional adjustment beyond the removal of 6 mm (0.25 in.) of wood. In calculations of residual tensile strength of the member, basic allowable design stress values should be reduced by 10%. An alternative is to take a reduction of 16 mm (0.625 in.) of wood beyond the char–wood interface and use 100% of the basic allowable design stress values.

Cross-laminated timber (CLT) is a large-scale, solid engineered wood panel constructed with several layers of lumber boards stacked in alternating directions. Adoption and implementation of CLT panels as a structural material for tall or larger buildings has been increasing in recent years. Char depths and temperature profiles for CLT have been shown to be dependent on the type of adhesive used (Zelinka et al. 2018, Hasburgh et al. 2016). In the United States, CLT must be manufactured with adhesives that can withstand high temperatures ($>300\text{ }^{\circ}\text{C}$) to avoid delamination of a layer of lumber, which can lead to fire regrowth within a compartment. Further details on the standard performance requirements and calculations of fire resistance for CLT are provided by ANSI/APA (2019) and AWC (2021). A 2021 report identified six steps for post-fire rehabilitation of CLT (Brandon et al. 2021b) including details on mapping the thickness of the charred or damaged layer(s).

Removal or degradation of any wood from a structural member will likely require regrading of the member to determine the proper allowable properties to be used in calculations of residual load capacity. Wood members should be re-graded after the char is completely removed. The grade of the structural member may have changed due to loss of the outer layer of wood. Charring of the wood member is similar to ripping the wood member with a saw in terms of its impact on mechanical properties and grade of the member. Grading procedures take into account the impact of residual dimensions on applicable grading rules for the reduced dimension as well as the altered relative locations of strength-reducing characteristics (such as knots) in the cross section. Current accredited grading agencies are listed in a document of the American Lumber Standard Committee (ALSC 2019). Inherently, wood is a natural product and no two samples are exactly alike. Variability is introduced naturally as well as mechanically, and through manufacturing and construction practices (Garab et al. 2010). Calculation of residual load capacity must take into account structural grade variation of individual components within a composite structural wood member. This is very important for charred glued-laminated (glulam) structural members, because glulam members are normally manufactured with a graded lay-up that has higher grade materials at the outer laminates and lower grade materials in the core. In particular, the charred bottom laminate may

have been a high-grade tension laminate that significantly impacts the bending strength of the member. Examples of calculations for fire-damaged glulam members are provided by Williamson (1982a). Williamson (1982b) also discusses the rehabilitation of fire-damaged heavy timbers at the Filene Center for Performing Arts at Wolftrap Farm, Virginia. The structure was damaged due to a fire while the facility was under construction in 1971.

White and Woeste (2013) point out that often in older buildings, timbers are not grade marked and there are no records of any grading of timbers. The recommend steps for analysis begin with a paper study that will either warrant if further study is required or simply necessitate that a member be replaced outright. When additional study is required, calculations are further refined and incorporate a cohort of field measurements up to and including identification and documentation of the species, grade, and size of each timber. Additional considerations are presented in Kukay et al. (2012).

Light-Frame Members

Most information on fire-damaged wood focuses on evaluation of large timber members and engineered wood products because they can be exposed in a fire compartment. Evaluation of residual load capacity of structural elements in light-frame construction does not allow some of the assumptions of the previous analysis, such as direct fire exposure and semi-infinite slab.

Wood structural members in light-frame construction are generally covered by a membrane of gypsum board or other noncombustible fire protection. Gypsum board provides very effective fire protection. Gypsum is primarily hydrated calcium sulfate. Bound water within the gypsum board delays the rise in temperature at the wood–gypsum board interface above $100\text{ }^{\circ}\text{C}$ ($212\text{ }^{\circ}\text{F}$) for a significant period of time. The chemically bound water is released as steam during this calcination process. Gypsum board loses its integrity or cohesion after exposure to fire (Cramer et al. 2003). The integrity of the gypsum board can be examined by using a sharp blade or by removing samples for more careful examination. Spizman (1994) suggests grinding a sample of the gypsum (minus the paper) and moistening it with water to a paste-like material. If, after 2 h, the sample is hard, similar to plaster of Paris, it should be considered heat damaged. As with fire-damaged wood, similar materials in areas not involved in the fire provide a performance level for comparison. A rule of thumb is that gypsum board may be assumed to retain its integrity as long as the paper envelope has not charred (King 2007). The cross section of the gypsum board can be examined for visual evidence of the progression of calcination through the gypsum board. Where there is evidence of fire damage, the gypsum board may need to be removed so that structural wood members can be examined. Charring of wood is more likely to occur at the joints between sheets of gypsum board. Because of protection provided to the sides of the wood

members, damage to structural members in assemblies with cavity insulation may be limited.

In light-frame construction, significantly charred members are generally removed (Steven Winters Associates, Inc. 1999). Application of the guidelines for heavy timbers to light-frame construction results in inadequate load capacity with even a small amount of charring. However, many light-frame members in an actual fire suffer only smoke damage or very superficial charring. Given the high temperature of a fire and the low temperature for wood char (300 °C (550 °F)), superficial charring reflects very brief exposure to a fire. As previously discussed, the depth of elevated temperatures is less for initially smaller depths of charring. Charring is much more rapid during initial charring. As the thickness of the insulative char layer increases, the progression of charring is slowed. It has also been shown that as density of a wood species increases, charring rate decreases (Yang et al. 2009). Even so, once the temperature at the center of the light-frame member starts to increase, the temperature profile shown in Figure 5.6 is not valid and temperatures will increase more rapidly. King (2007) states that structural repair of fire-damaged framing is often not required if char depth is less than 6 mm (0.2 in.). He also notes that treatment of any significant loss of surface should have approval of a local building inspector or a qualified structural engineer. Other rules of thumb that have been recommended for lumber in trusses include (1) no charring, (2) charring of up to 10% of the cross section, and (3) charring depth up to 1.6 mm (1/16 in.) (Smith 2000). Engineering judgment on whether a member needs to be replaced includes considering the importance of the member to the structural integrity of the building and the need for a conservative approach.

Light-frame construction contains numerous building cavities. When fire damage is not extensive, heat, smoke, and water damage can occur within the building cavities. In a cavity, fire-generated heat damage would involve components with higher sensitivities than the surrounding materials (King 2007). In addition to the cavities of structural components, many cavities are also associated with the routing of utilities in the building.

Testing

Unlike wood damaged by decay, little work has been done on suitable methods for field testing fire-damaged wood for residual load capacity. Some potential options are those suggested for field testing fire-retardant-treated (FRT) plywood for possible thermal degradation (NAHB 1990). Prolonged elevated temperatures, associated with roof applications, have resulted in degradation of plywood treated with some formulations of fire-retardant treatments. Thermal degradation of plywood was similar to degradation of wood in a fire. The National Association of Home Builders (NAHB) identified several options for possible degraded FRT plywood:

1. Applying a concentrated proof load

2. Removing small samples for laboratory mechanical testing
3. Screw withdrawal test
4. Chemical analysis for chemical composition of the wood, such as hemicelluloses
5. Spectral analysis for end products of degradation

Options 1 and 2 are destructive if, for example, the proof load exceeds the linear elastic range for the component being tested, thereby reducing its cross-sectional integrity as a result (option 1), or if the removal of small specimens from the full-size member renders it unrepairable or otherwise requires that it be replaced (option 2). The need to classify wood by evaluating the change in physical and mechanical properties of small clear specimens can be very valuable where similar members are exposed to various degrees of degradation and are otherwise expected to remain in service. It is also noted that moisture content is an underlying factor of wood strength that can readily be verified by the use of a moisture meter during a post-fire investigation. However, immediately following a fire, moisture content of charred members is likely to fall below 6.5%, a value associated with the lower limit of most moisture meters. Generally speaking, a 1% change in moisture content can affect wood strength properties by as much as 2% to 6% (Regents of the University of Minnesota and the Forest Products Management Development Institute 1998). Typically, wood gains strength as moisture content decreases. Wood will gain back moisture and re-equilibrate after heat damage. As a result, lasting effects of this nature would occur only if the equilibrium moisture content associated with a given relative humidity changed. This type of test has been standardized and is facilitated with the use of equations presented in ASTM D4933 (ASTM 2021). For these reasons, when comparing strength properties from separate members to one another, the pretesting moisture content of each beam must be less than 16% and adjusted to a standard moisture content of 12% according to ASTM D2915 (ASTM 2022a). Additional information on temperature and moisture content effects on strength properties of wood in general are provided by Kretschmann (2010).

Research results have supported the use of Options 2 and 3 when establishing the change in residual flexural properties for fire-damaged members that are otherwise expected to remain in service (Kukay et al. 2011). Evidence of changes in flexural properties can be obtained from static bending tests that are performed on small samples or from screw withdrawal tests (along with other significant factors). Either methodology provides a more quantitative approach than simply replacing individual members, presuming that depth-wise reductions are less than 0.25 in. These methodologies are thought to be valid when similar members of like size are heat damaged in similar fashion.

Kukay and Todd (2009) developed equations including variables for moisture content (MC), specific gravity (SG), moment of inertia (I), maximum screw withdrawal load

(SW), cross-sectional orientation with respect to the pith (O), treatment group (T, charred or uncharred), and various interactions between these variables. The following reduced model was found to be adequate based on a model comparison *F*-test procedure:


$$Y = \beta_0 + \beta_1 MC + \beta_2 SG + \beta_3 I + \beta_4 SW + \beta_5 O + \beta_6 T + \beta_7 O \cdot T + \varepsilon$$

Models like this are believed to be applicable under similar field conditions and are specific to methodology, material, and grade. Rather than predicting specific values of E_f and MOR, results obtained through screw-withdrawal tests are best represented when the results are compared with those of similar members that have obvious degrees of residual load capacity. Variability of results stems from changes in predrilled pilot-hole size, screw insertion depth, screw tip to screw shank diameter, and rate of extraction. For these reasons, care was needed when interpreting and extrapolating the results from screw-withdrawal tests. General correlations are likely to lack adequate precision to establish actual property values. Results of individual research studies that incorporate screw-withdrawal tests are generally not extrapolated. Additional work is needed to expand the models to account for the effects of a wider range of species and grades of materials. Additional information can be found in Kukay and Todd (2009).

In the case of options 3 and 4, further research is needed to identify and document any appropriate correlations and methodologies for fire-damaged wood. Because general correlations are likely to lack adequate precision to establish actual property values, these options are more likely to be fruitful when they are used to compare similar members in the fire-damaged building that have obvious degrees of degradation or residual load capacity. Thus, they may be more useful in evaluating fire damage in light-frame construction.

Application of a screw-withdrawal test to the FRT plywood situation was investigated by Winandy et al. (1998). In their study, the variability and reproducibility of 8-mm (5/16-in.) screw insertion was compared with that for 16-mm (5/8-in.) screw insertion in 16-mm (5/8-in.) plywood. The shorter depth measurements were observed to have higher coefficients of variation. In many instances, load cell resolution of the apparatus exceeded 25% of the measured value compared with less than 10% for the 16-mm (5/8-in.) screw. Although there may have been some gradient in the FRT-plywood degradation through the thickness of the plywood, the application of the method to fire-damaged wood would need to be able to identify degradation primarily near the surface of the uncharred wood.

For mass timber, such as CLT, resistance drills used to measure the relative density of wood have been used to identify the char depth and, therefore, the amount of material that needs to be removed for restoration (Brandon et al. 2021b, Brandon and Dagenais 2018, Su et al. 2018).

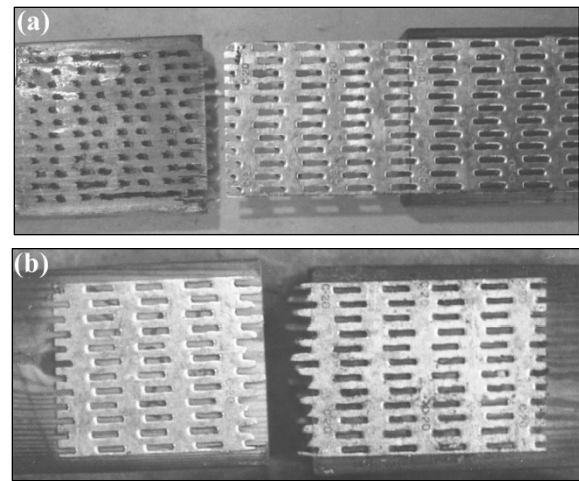

Figures 5.9—(a) Test specimens of metal plate connections illustrating charred wood failure beneath the plate, and (b) metal plate failure of plate with uncharred wood beneath the plate.

Presently, researchers at the Forest Products Laboratory are evaluating other nondestructive techniques, such as ground-penetrating radar and ultrasound to determine char depth.

Winandy and Lebow (2001) reported research on modeling strength loss in wood by chemical composition. Potentially, an increment borer could be used to extract wood samples for chemical or spectral analysis. Spectral analysis tests use infrared radiation to identify end products of chemical processes. A trained organic chemist is required to interpret the data gained from a spectrophotometer. APA (1989) provides more information pertaining to spectral analysis of FRT plywood.

Connections

All connections will require detailed inspection to assess their load-bearing capacity. In his discussion of large fire-damaged timbers, Williamson (1982a) notes that the effect of fire on the strength of any connection is very difficult to determine without a thorough investigation of the affected connection because the amount of damage is dependent on the quantity of metal and the surface contact of metal with fire, among other factors. Possible chemical damage may also result from the corrosive effects of fire residues. Metal roof supports, ceilings, and other structural members are vulnerable to long-term acid attack from fire residues (King 2007). Exposed metal connections provide a means for heat conduction into the wood (Fuller et al. 1992).

Degradation of the wood beneath a metal plate connection is what results in its failure (Fig. 5.9a). In a situation when heating is strictly via radiation, the metal plate may actually initially protect the wood beneath the plate from charring as much as the adjacent wood (Fig. 5.9b). The test specimens shown in Figure 5.9 are from a project to develop a fire endurance model for metal-plate-connected wood trusses (White et al. 1993, Shrestha et al. 1995). If there is damage

to the plate area, the plate is discolored, or there is charring under the plate, it is recommended that the connection be considered ineffective (Smith 2000).

For mass timber structures, particularly those with glulam and CLT, the variety and complexity of connections used makes analysis of these connections and their fire performance challenging. The complexity comes from the number of different joint types, geometries, thermal degradation of the wood species, applied load, the nature of fire protection (if any), the charring of wood, and heat transfer mechanisms from different materials (wood–wood–wood, wood–steel–wood, and steel–wood–steel). A review on the performance of timber connections exposed to fire was conducted and found that bending failure was common for thin connectors (such as nails or screws) and that for larger connectors (such as bolts) failure occurred in the charred region around the fasteners (Maraveas et al. 2015). These researchers also noted that, despite their high thermal conductivity, steel plates were able to maintain their yield strength at elevated temperatures and that failure was typical only for external thin plates and connectors with high load-bearing capacities.

Smoke Damage

The subjects of smoke damage and control of odor are not within the scope of this chapter. The impact of fire residues on wood framing is confined to appearance and odor (King 2007). Except for possible corrosive effects on metal fasteners, smoke and other fire residues do not affect the load capacity of the wood member. The *Guidelines for Fire & Smoke Damage Repair* (King 2007) published by the Restoration Industry Association (<https://www.restorationindustry.org/>), provides guidelines based on current practice in restoration technology. Actions for addressing smoke damage are also discussed in an article by the Chicora Foundation (2003).

Fire odors should be identified and removed before any application of sealers, paints, or other finishes because the masking effects of such products are temporary (King 2007). The presence of fire acids, visible fire residues, and odor need to be addressed. King (2007) provides information on methods for removal of fire residues, neutralizing acid residues, removing fire odors, and the use of sealing and encapsulation. Structural members restored after fire damage should retain no char or untreated fire residues even when they are covered with new framing or other interior finishes (King 2007).

Repairs

Once the load capacities of fire-damaged members are determined, potential repairs can be identified. Removal of the char layer can be accomplished with a scraper or drill with steel brush attachment. After removal of most of the char, planing equipment or blasting with various media (such as sand, ground corn cob, and baking soda) can be used to have a clean and level surface. Once char and other

fire residues have been removed, wood surfaces can be treated for residual odors and sealers can be applied.

Information on rehabilitation of damaged structures is available in the nine-volume series published by the U.S. Department of Housing and Urban Development (HUD) known as *The Rehab Guide* (https://www.huduser.gov/portal/publications/destech/rehab_gds.html). Information on moisture damage will help address water damage due to fire suppression efforts. With the high level of concern about mold, any moisture damage associated with fire suppression also needs to be addressed. Restoration of wood floors is discussed by King (2007).

In the case of partially fire-damaged wood, repairs often consist of reinforcing the original damaged member by attaching a supplemental piece of wood. This action is referred to as “sistering.” The effect of fire on epoxy-repaired timber is discussed by Avent and Issa (1984). They found the two epoxies they tested to be sensitive to heat at relatively low temperature (66 to 93 °C (150 to 200 °F)). Buchanan and Barber (1994) found the two epoxies they tested lost strength rapidly at 50 °C (122 °F). Epoxy joints should be protected by a thick outer wood layer or other protective material such as gypsum board. Available information indicates that adhesives (phenol, resorcinol, and melamine) normally used in the manufacture of structural wood composites have a fire performance equivalent of solid wood. Schaffer (1968) found that separation did not occur at either phenol-resorcinol or melamine glue lines in either charred or noncharred laminates during fire exposure. For CLT, Brandon et al. (2021b) used a PRF adhesive in addition to screws to attach a new layer of lumber to the restored surface, and the new lumber layer was finished to architectural standards.

Any repairs should also include the consideration of design changes or additional protection to reduce the likelihood of future fire damage. Schaffer (1982c) discusses designing to avoid problems with fire. Because of concerns about the fire-resistance performance of some adhesives being used to make finger-jointed lumber, the wood industry established performance qualifications, and the “HRA” markings for end-jointed lumber are interchangeable with solid-sawn lumber in 1-h fire-rated assemblies (AWC 2021). Additional information can be found in fire safety chapter of the *Wood Handbook* (Dietenberger et al. 2021). Repairs must comply with appropriate building code requirements. Conventional repair methods may increase dead loads, installation costs, and transportation expenses because of heavier reinforcement materials. Modern reinforcement methods using fiber-reinforced polymers (FRPs) have higher strength-to-weight and stiffness ratios. This allows FRPs to be used without a significant increase to the dead load of a structure.

FRP composites are usually bonded to the higher stress zone, more commonly known as the tension side of timber beams, which increases their load-carrying capabilities

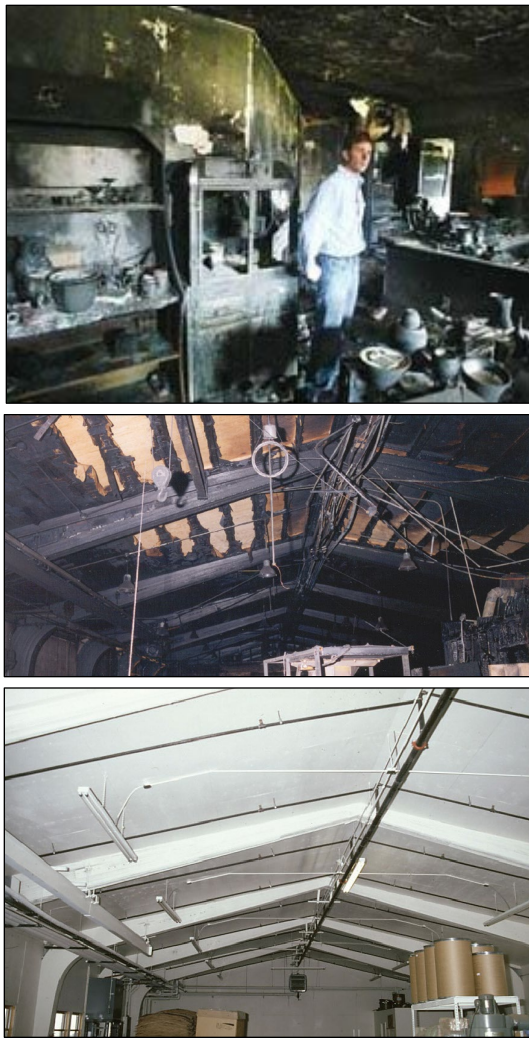


Figure 5.10—Post-fire inspection (top) of residence; post-fire (middle) and post-repair (bottom) of Building 2 at the Forest Products Laboratory.

while decreasing deflection. FRP composites bonded on the tension face are either adhered to the surface as a sheet or are inserted into a cut narrow groove and secured in place with a bonding agent. Near-surface mounting of FRP bars placed in cut grooves is a new technology designed to increase the load-carrying capacity and energy absorption capacity comparatively (Kim and Harries 2010). Installing the bars in a cut groove on the tension side of the members means that repairs will typically be hidden from view. This is very important to historic covered bridges that need to maintain their historic integrity and charm.

Glass-fiber-reinforced plastic (GFRP) bars are generally less expensive than other FRP bars, carbon fiber, and aramid fiber, but still significantly improve the load-carrying capacity and stiffness of a member (Raftery et al. 2009).

It should be mentioned that for all cases of FRP bars installed into timber, the bond shear-slip between the two

materials has a minor effect on ultimate loading capacity of the members. During analysis, a continuous bond between the two materials was observed in most of the tested cases (Valipour and Crews 2011).

Concluding Remarks

Often, the end product of the reaction of wood to fire is an outer char layer and a cooler inner core of solid wood. In many fires, there is a clear demarcation between the char layer and the relatively undamaged residual wood. With appropriate analysis, treatment, and repairs, the fire-damaged wood members can be restored instead of being replaced (Fig. 5.10).

Literature Cited

ALSC. 2019. List of grading agency names and addresses. Germantown, MD: American Lumber Standard Committee, Inc.

http://www.alsc.org/greenbook%20collection/LumberProgram_facsimile.pdf

ANSI/APA. 2019. ANSI/APA PRG 320: Standard for performance-rated cross-laminated timber. Tacoma, WA: APA–The Engineered Wood Association.

APA. 1989. Fire-retardant-treated plywood roof sheeting: in-situ testing. Tacoma, WA: American Plywood Association.

ASTM. 2021 (reapproved). Standard guide for moisture conditioning of wood and wood-based materials. Designation D4933-16(2021). West Conshohocken, PA: ASTM International.

ASTM. 2022a (reapproved). Standard practice for evaluating allowable properties for grades of structural lumber. Designation D2915-17(2022). West Conshohocken, PA: ASTM International.

ASTM. 2022b. Standard test methods for fire tests of building construction and materials. Designation E119-22. West Conshohocken, PA: ASTM International.

ASTM. 2022c. Standard test method for room fire test of wall and ceiling materials and assemblies. Designation E2257-22. West Conshohocken, PA: ASTM International.

Avent, R.R.; Issa, C.A. 1984. Effect of fire on epoxy-repaired timber. *Journal of Structural Engineering*. 110(12): 2858–2875. [https://doi.org/10.1061/\(ASCE\)0733-9445\(1984\)110:12\(2858\)](https://doi.org/10.1061/(ASCE)0733-9445(1984)110:12(2858))

AWC. 2018. Commentary: National design specification (NDS) for wood construction with commentary. ASD/LRFD, 2018 Edition. Leesburg, VA: American Wood Council.

AWC. 2023. Fire design specification for wood construction, 2019 edition. Leesburg, VA: American Wood Council.

- AWC. 2021. Calculating the fire resistance of wood members and assemblies. Technical Report No. 10. Leesburg, VA American Wood Council. https://awc.org/wp-content/uploads/2021/12/AWC_TR10_20210427_AWCWebsite.pdf
- Babrauskas, V. 2001. Ignition of wood: a review of the state of the art. London: Interflam, Interscience Communications Ltd.: 71–88.
- Brandon, D.; Dagenais, C. 2018. Fire safety challenges of tall wood buildings—phase 2: task 5—experimental study of delamination of cross laminated timber (CLT) in fire. NFPA report FPRF-2018-05. Quincy, MA: National Fire Protection Association.
- Brandon, D.; Just, A.; Tiso, M. 2017. Parametric fire design—zero-strength layers and charring rates. In: INTER International Network on Timber Engineering Research Proceedings. August 2017, Kyoto, Japan. ISSN 2199-9740.
- Brandon, D.; Sjöström, J.; Hallberg, E.; Temple, A.; Kahl, F. 2021a. Final project report—fire safe implementation of visible mass timber in tall buildings. RISE Report 2021:40. Borås, Sweden: RISE Research Institutes of Sweden. ISBN 978-91-89385-26-9.
- Brandon, D.; Sjöström, J.; Kahl, F. 2021b. Post-fire rehabilitation of CLT. RISE Report 2021:67. Borås, Sweden: RISE Research Institutes of Sweden.
- Browne, F.L. 1958. Theories of the combustion of wood and its control. FPL Report 2136. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.
- Buchanan, A.H. 2001. Structural design for fire safety. New York: John Wiley & Sons, Ltd.
- Buchanan, A.; Barber, D. 1994. Fire resistance of epoxied steel rods in glulam timber. In: Proceedings, volume 1, Pacific timber engineering conference. Queensland, Australia: Timber Research and Development Advisory Council: 590–598.
- Chicora Foundation, Inc. 2003. What is smoke? Columbia, SC: Chicora Foundation, Inc.
- Cramer, S.M.; Sripitkiat, G.; White, R.H. 2003. Engineering analysis of gypsum board ceiling membranes at elevated temperatures. In: Proceedings of designing structures for fire. Bethesda, MD: Society of Fire Protection Engineers: 173–182.
- Dietenberger, M.A.; Hasburgh, L.E. 2016. Wood products thermal degradation and fire. Reference Module in Materials Science and Materials Engineering. 8 pp. <https://doi.org/10.1016/b978-0-12-803581-8.03338-5>
- Dietenberger, M.A.; Hasburgh, L.E.; Yedinak, K.M. 2021. Fire safety of wood construction. In: Wood handbook—wood as an engineering material. General Technical Report FPL–GTR–282. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.
- Fox, S.P. 1974. Residual strength of fire-damaged laminated beams. Forest Products Journal. 24(1): 48–50.
- Friquin, K.L. 2010. Charring rates of heavy timber structures for fire safety design: a study of the charring rates under various fire exposures and the influencing factors. Doctoral theses. Norwegian University of Science and Technology.
- Fuller, J.J.; Leichti, R.J.; White, R.H. 1992. Temperature distribution in a nailed gypsum-stud joint exposed to fire. Fire and Materials. 16: 95–99. <https://doi.org/10.1002/fam.810160206>
- Garab, J.; Toth, A.; Szalai, J.; Bejo, L.; Divos, F. 2010. Evaluating glued laminated beams using a nondestructive testing technique. Transactions of FAMENA. 34(4): 33–46.
- Gerhards, C.C. 1982. Effect of moisture content and temperature on the mechanical properties of wood: An analysis of immediate effects. Wood and Fiber. 14(1): 4–36.
- Hasburgh, L.; Bourne, K.; Peralta, P.; Mitchell, P.; Schiff, S.; Pang, W. 2016. Effect of adhesives and ply configuration on the fire performance of southern pine cross-laminated timber. In: Eberhardsteiner, J.; Winter, W.; Fadaei, A.; Pöll, M. (eds.). WCTE 2016, August 22–25, Vienna, Austria. Wien: TU Verlag.
- Hasburgh, L.E.; Bourne, K.J.; Stone, D.S.; Zelinka, S.L. 2020. Simulating real compartment fire conditions in a furnace. Fire and Materials. 44(3): 333–340. <https://doi.org/10.1002/fam.2743>
- Janssens, M.L.; White, R.H. 1994. Temperatures profiles in wood members exposed to fire. Fire and Materials. 18: 263–265. <https://doi.org/10.1002/fam.810180410>
- Kim, Y.J.; Harries, K.A. 2010. Modeling of timber beams strengthened with various CFRP composites. Engineering Structures. 32(10): 3225–3234. <https://doi.org/10.1016/j.engstruct.2010.06.011>
- King, M.L. 2007. RIA guidelines for fire and smoke damage repair. Second edition. Millerville, MD: Restoration Industry Association. 153 p.
- Knudsen, R.M.; Schniewind, A.P. 1975. Performance of structural wood members exposed to fire. Forest Products Journal. 25(2): 23–32.
- Kretschmann, D.E. 2010. Mechanical properties of wood. In: Wood handbook, wood as an engineering material. General Technical Report FPL–GTR–190, Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory: 5-1–5-46.
- Kukay, B.M.; Todd, C. 2009. Determining wood's residual flexural properties using nondestructive testing. Wood Design Focus. 19(2): 8–12.

- Kukay, B.M.; White, R.H.; Woeste, F. 2011. Fire damage of wood structures. In: Inspection testing and monitoring of buildings and bridges. Washington, DC: International Code Council and National Council of Structural Engineers Associations. Chapter 6.
- Kukay, B.M.; White, R.H.; Todd, C.S.; Jahn, T. 2013. Evaluating fire damaged components of timber bridges and structures. In: Proceedings, 2013 ASCE structures congress. Reston, VA: American Society of Civil Engineers.
<https://doi.org/10.1061/9780784412848.067>
- Maraveas, C.; Miamis, K.; Matthaïou, C.E. 2015. Performance of timber connections exposed to fire: a review. *Fire Technology*. 51(6): 1401–1432.
<https://doi.org/10.1007/s10694-013-0369-y>
- NAHB. 1990. Homebuilders guide to fire retardant treated plywood: evaluation, testing and replacement. Upper Marlboro, MD: National Association of Home Builders National Research Center. 49 p.
- NFPA. 2019. Standard methods of fire tests for evaluating contribution of wall and ceiling interior finish to room fire growth. NFPA 286. Quincy, MA: National Fire Protection Association.
- NFPA. 2021. Guide for fire and explosion investigations. NFPA 921. Quincy, MA: National Fire Protection Association.
- Raftery, G.M.; Harte, A.M.; Rodd, P.D. 2009. Bond quality at the FRP wood interface using wood-laminating adhesives. *International Journal of Adhesion and Adhesives*. 29(2): 101–110.
<https://doi.org/10.1016/j.ijadhadh.2008.01.006>
- Regents of the University of Minnesota and the Forest Products Management Development Institute. 1998. The nature of wood and wood products, a self-study educational CD-ROM. Minneapolis, MN: University of Minnesota.
- Schaffer, E.L. 1965. An approach to the mathematical prediction of temperature rise within a semi-infinite wood slab subjected to high-temperature conditions. *Pyrodynamics*. 2: 117–132.
- Schaffer, E.L. 1968. A simplified test for adhesive behavior in wood sections exposed to fire. Research Note FPL–RN–0175. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.
- Schaffer, E.L. 1973. Effect of pyrolytic temperatures on the longitudinal strength of dry Douglas-fir. *ASTM Journal of Testing and Evaluation*. 1(4): 319–329.
<https://doi.org/10.1520/JTE10025J>
- Schaffer, E. 1977. State of structural timber fire endurance. *Wood and Fiber*. 9(2): 145–170.
- Schaffer, E.L. 1982a. 2.3 Temperature of Chapter 2 Factors which influence serviceability of wood structures. In: Evaluation, maintenance and upgrading of wood structures—a guide and commentary. New York: American Society of Civil Engineers: 69–92.
- Schaffer, E.L. 1982b. 2.7 Fire of Chapter 2 Factors which influence serviceability of wood structures. In: Evaluation, maintenance and upgrading of wood structures—a guide and commentary. New York: American Society of Civil Engineers: 120–126.
- Schaffer, E.L. 1982c. 7.4 Fire of Chapter 7 Designing to avoid problems. In: Evaluation, maintenance and upgrading of wood structures—a guide and commentary. New York: American Society of Civil Engineers: 319–338.
- Schaffer, E.L.; Marx, C.M.; Bender, D.A.; Woeste, F.E. 1986. Strength validation and fire endurance of glued-laminated timber beams. Research Paper FPL–RP–467. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.
- Schroeder, R.A. 1999. Post-fire analysis of construction materials. PhD dissertation. Berkeley, CA: University of California.
- Shafizadeh, F. 1984. The chemistry of pyrolysis and combustion. In: The chemistry of solid wood.
<https://doi.org/10.1021/ba-1984-0207.ch013>
- Shrestha, D.; Cramer, S.M.; White, R.H. 1995. Simplified models for the properties of dimension lumber and metal plate connections at elevated temperatures. *Forest Products Journal*. 45(7/8): 35–42.
- Smith, R. 2000. Frequently asked questions—fire damaged trusses. *Structural Building Components Magazine*. August 2000.
www.sbcmag.info/sites/sbcmag.info/files/Archive/2000/aug/0008%20FAQ.pdf
- Spizman, I. 1994. Gypsum wallboard vs. fire and smoke. *Cleaning and Restoration*. May 1994: 18.
- Steven Winter Associates, Inc. 1999. Partitions, ceilings, floors & stairs. Volume 5 of the Rehab Guide. Washington, DC: U.S. Department of Housing and Urban Development, Office of Policy Development and Research.
www.pathnet.org
- Su, J.; Leroux, P.; Lafrance, P.S.; Berzins, R.; Gratton, K.; Gibbs, E.; Weinfurter, M. 2018. Fire testing of rooms with exposed wood surfaces in encapsulated mass timber construction. Ottawa, Canada: National Research Council of Canada.
- Valipour, H.R.; Crews, K. 2011. Efficient finite element modeling of timber beams strengthened with bonded fiber reinforced polymers. *Construction and Building Materials*. 25(8): 3291–3300.
<https://doi.org/10.1016/j.conbuildmat.2011.03.017>
- White, R.H. 2008. Analytical methods for determining fire resistance of timber members. In: SFPE handbook of fire protection engineering, fourth edition, section 4, chapter 11

Quincy, MA: National Fire Protection Association: 4-346–4-366.

White, R.H.; Dietsberger, M.A. 2001. Wood products: thermal degradation and fire. In: *Encyclopedia of materials: Science and technology*. New York: Elsevier Science Ltd. <https://doi.org/10.1016/B0-08-043152-6/01763-0>

White, R.H.; Nordheim, E.V. 1992. Charring rate of wood for ASTM E119 exposure. *Fire Technology*. 28(1): 5–30. <https://doi.org/10.1007/BF01858049>

White, R.H.; Schaffer, E.L. 1980. Transient moisture gradient in fire-exposed wood slab. *Wood and Fiber*. 13(1): 17–38.

White, R.H.; Tran, H.C. 1996. Charring rate of wood exposed to a constant flux. In: *Proceedings of wood and fire safety conference*. Zvolen, Slovak Republic: Technical University Zvolen.

White, R.H.; Woeste, F. 2013. Post-fire analysis of solid-sawn heavy beams. *Structure Magazine*. November 2013.

White, R.H.; Cramer, S.M.; Shrestha, D.K. 1993. Fire endurance model for a metal-plate-connect wood truss. Research Paper FPL–RP–522. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 12 p.

Williamson, T.G. 1982a. 4.5.4 Rehabilitation of fire-damaged members. In: *Evaluation, maintenance and upgrading of wood structures—a guide and commentary*, chapter 4. New York: American Society of Civil Engineers: 172–178.

Williamson, T.G. 1982b. 8.8 Rehabilitation of fire-damaged timber—The Filene Center. In: *Evaluation, maintenance and upgrading of wood structures—a guide and commentary*, chapter 8. New York: American Society of Civil Engineers: 417–422.

Winandy, J.E.; Lebow, P.K. 2001. Modeling strength loss in wood by chemical composition: Part I, An individual component model for southern pine. *Wood and Fiber Science*. 33(2): 239–254.

Winandy, J.E.; Lebow, P.K.; Nelson, W. 1998. Predicting bending strength of fire-retardant-treated plywood from screw-withdrawal tests. Research Paper FPL–RP–568. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 20 p.

Yang, T.; Wang, S.; Tsai, M.; Lin, C. 2009. The charring depth and charring rate of glued laminated timber after a standard fire exposure test. *Building and Environment*. 44(2): 231–236. <https://doi.org/10.1016/j.buildenv.2008.02.010>

Zelinka, S.L.; Pei, S.; Bechle, N.; Sullivan, K.; Ottum, N.; Rammer, D.; Hasburgh, L.E. 2018. Performance of wood adhesive for cross laminated timber under elevated temperatures. In: *Proceedings, WCTE 2018—world conference on timber engineering*. Seoul, Republic of Korea: Korean Institute of Forest Science.

Estimation of Design Values for In-Service Solid Wood

C. Adam Senalik

When a new structure is constructed, an engineer relies on current design values for a known species and local building codes to determine the appropriate size and grade of timber required for particular service loads. The strength of timber found in historic structures can vary considerably because of age and condition. Uncertainty can also be introduced when estimating strength of members if the species and grade are unknown. Many historic wooden structures were constructed before standardized grading practices for timbers were agreed upon. For evaluation purposes, design value estimates for existing wood members must be assigned with as much accuracy as possible. This is impossible when the type, grade, and condition of the existing wood are uncertain. The current practice for wood in service in historical structures is to assign values for strength and moduli from existing specifications based on assumed species and grade, but often these assumptions are inaccurate for the specific conditions and can result in an unreliable assessment of the structure. The condition assessment of a structure can be a complicated process, and even with the best available information, estimation of allowable properties of members can require considerable engineering judgment. With accurate information, an engineer or other professional can make determinations about maintenance, repair, restoration, or decommissioning of the structure. An inspecting engineer must take three critical steps to estimate design values for wood members: (1) identify the species of wood, (2) estimate a size and grade for the member (Fig. 6.1), and (3) determine the condition of the wood in the member (described in detail in Chapters 1–5). If accurate information is not available, historic structures may be prematurely replaced.

The continued use of a structure is dependent on an affirmation that it meets appropriate strength thresholds given its intended use. Because this directly affects public safety, every step in the process of making a design value estimate must be performed with care, precision, and a robust understanding of the factors that affect it. This chapter discusses each step of the process that leads to a design value estimate—wood species identification, member grading, on-site condition assessment, and

calculating an appropriate strength—with a high degree of detail. The content will also empower the reader to make a judgment about the advisability of securing the services of a consulting engineer. It is best to engage a skilled and experienced inspector familiar with wood identification, timber grading, and condition assessment. The reader will be able to more easily communicate with them about the problems and concerns found in the structure.

Significance of Species

The first and probably most critical step to accurately assign design values to in-service members is identifying the species of wood in the member. Wood properties for clear wood vary considerably from species to species, as illustrated by selected examples in Table 6.1 (FPL 2021). Values reported in Table 6.1 are average measured properties of small clear specimens in a laboratory setting and are not design values. Proper identification of wood species is a skill that requires a considerable amount of training and experience to become proficient at sorting through wood features and characteristics. In most cases it is best if the services of a professional are utilized to identify the species of wood. The USDA Forest Products Laboratory provides wood identification for up to three specimens per year. Other private businesses also provide this service. Chapters 1 to 8 of Wiedenhoef and Kretschmann (2014) detail the features, skills, and characters used to make a field identification of wooden members. Regardless of who conducts the identification, following are some useful tips for sampling and prioritization of woods species samples.

Sampling of Members

The best advice that can be given for sampling members is “have a plan.” With photos or drawings, establish a system for identifying, cataloging, and recording property estimates for the members. Different species can be used for different sections of the structure; therefore, the ability to trace the location to positions on the structure is very important. An inspector must also consider which members should be prioritized, which can be accomplished by preliminary structural analysis to save time and effort in the field.

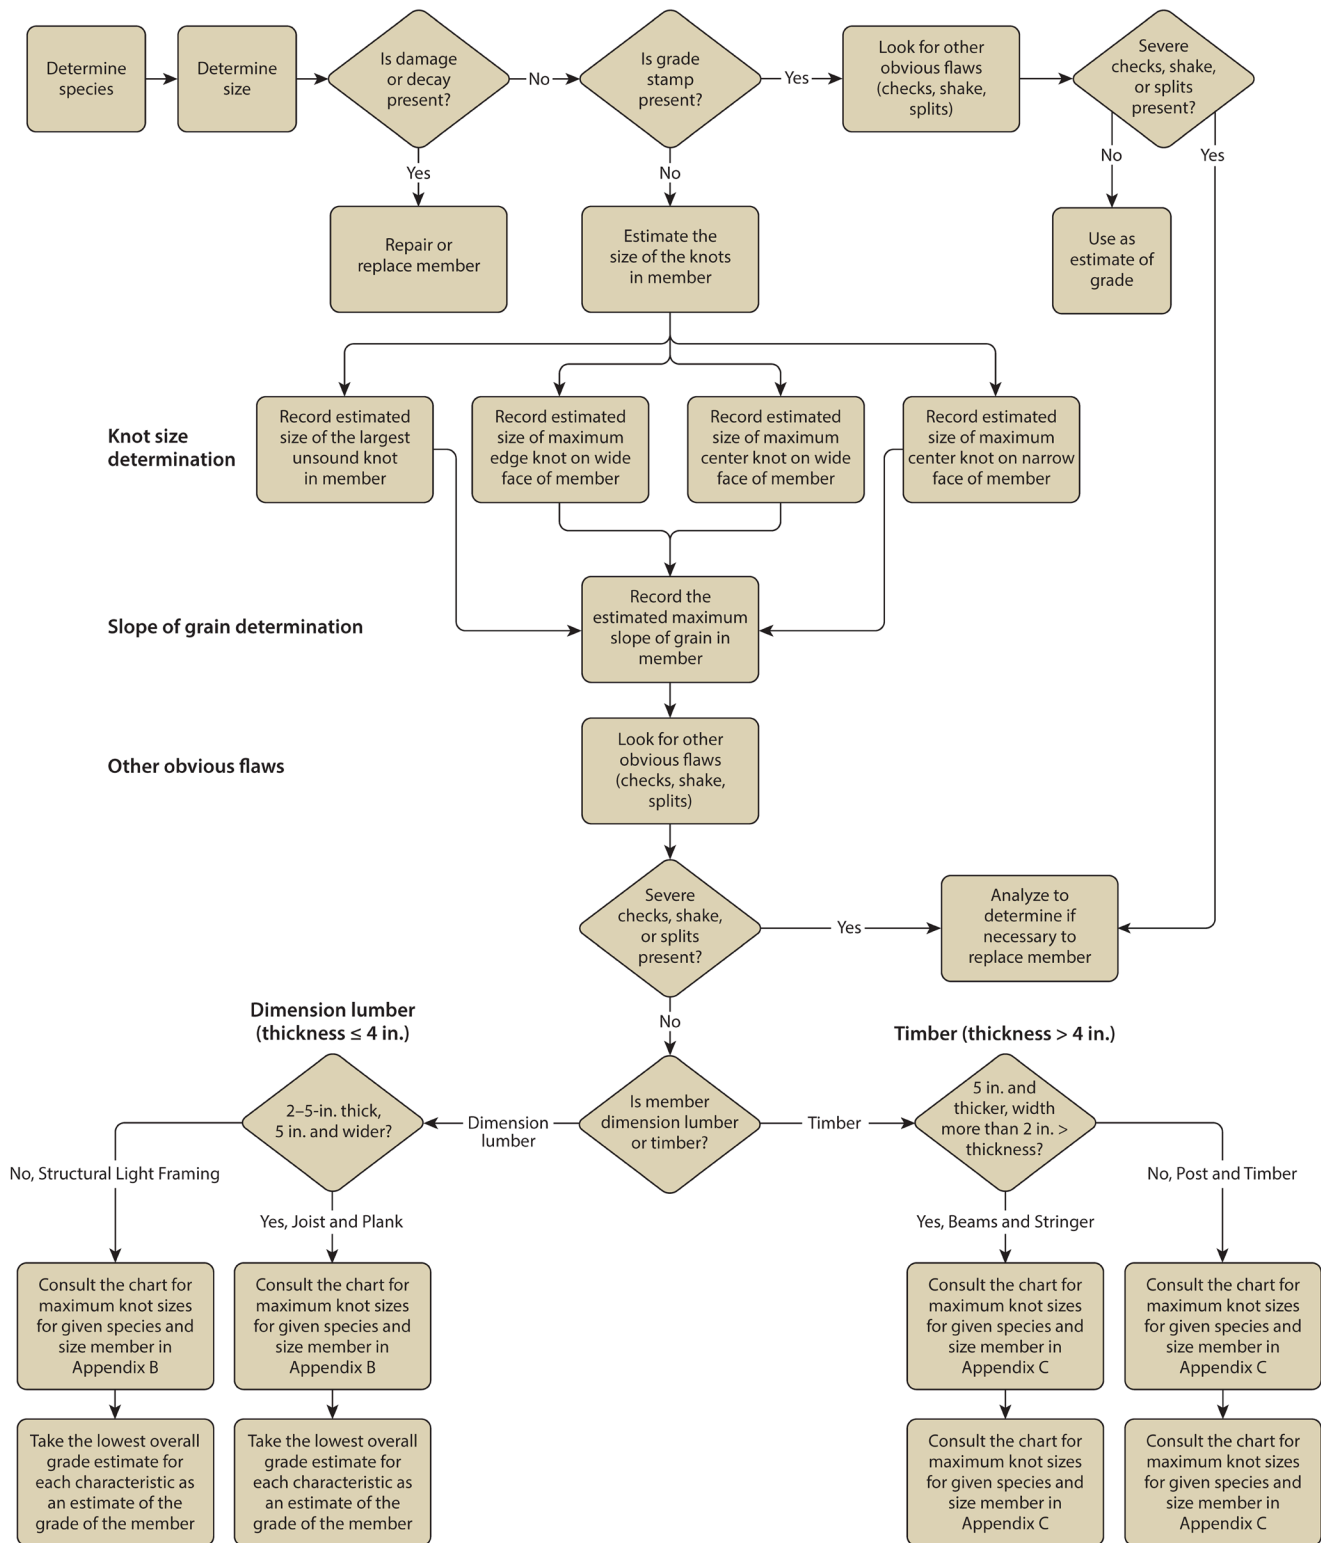


Figure 6.1—Steps for member grading.

Table 6.1—Strength properties of some commercially important woods grown in the United States^a (Values are average measured properties of small clear specimens in a laboratory setting and are not design values.)

Common species names	Moisture content	Specific gravity ^b	Static bending			Impact bending (in.)	Compression		Shear parallel to grain (lbf in ⁻²)	Tension per-pendicular to grain (lbf in ⁻²)	Side hardness (lbf)
			Modulus of rupture (lbf in ⁻²)	Modulus of elasticity ^c (×10 ⁶ lbf in ⁻²)	Work to maximum load (in-lbf in ⁻³)		Parallel to grain (lbf in ⁻²)	Per-pendicular to grain (lbf in ⁻²)			
Hardwoods											
Ash, White	Green	0.55	9500	1.44	15.7	38	3990	670	1350	590	960
	12%	0.6	15400	1.74	16.6	43	7410	1160	1910	940	1320
Aspen, Quaking	Green	0.35	5100	0.86	6.4	22	2140	180	660	230	300
	12%	0.38	8400	1.18	7.6	21	4250	370	850	260	350
Basswood, American	Green	0.32	5000	1.04	5.3	16	2220	170	600	280	250
	12%	0.37	8700	1.46	7.2	16	4730	370	990	350	410
Beech, American	Green	0.56	8600	1.38	11.9	43	3550	540	1290	720	850
	12%	0.64	14900	1.72	15.1	41	7300	1010	2010	1010	1300
Birch, Yellow	Green	0.55	8300	1.5	16.1	48	3380	430	1110	430	780
	12%	0.62	16600	2.01	20.8	55	8170	970	1880	920	1260
Chestnut, American	Green	0.4	5600	0.93	7	24	2470	310	800	440	420
	12%	0.43	8600	1.23	6.5	19	5320	620	1080	460	540
Elm, American	Green	0.46	7200	1.11	11.8	38	2910	360	1000	590	620
	12%	0.5	11800	1.34	13	39	5520	690	1510	660	830
Elm, Rock	Green	0.57	9500	1.19	19.8	54	3780	610	1270	—	—
	12%	0.63	14800	1.54	19.2	56	7050	1230	1920	—	—
Hickory, Shagbark	Green	0.64	11000	1.57	23.7	74	4580	840	1520	—	1460
	12%	0.72	20200	2.16	25.8	67	9210	1760	2430	—	1880
Maple, Red	Green	0.49	7700	1.39	11.4	32	3280	400	1150	—	700
	12%	0.54	13400	1.64	12.5	32	6540	1000	1850	—	950
Maple, Sugar	Green	0.56	9400	1.55	13.3	40	4020	640	1460	—	970
	12%	0.63	15800	1.83	16.5	39	7830	1470	2330	—	1450
Oak, Northern red	Green	0.56	8300	1.35	13.2	44	3440	610	1210	750	1000
	12%	0.63	14300	1.82	14.5	43	6760	1010	1780	800	1290
Oak, Southern red	Green	0.52	6900	1.14	8	29	3030	550	930	480	860
	12%	0.59	10900	1.49	9.4	26	6090	870	1390	510	1060
Oak, White	Green	0.6	8300	1.25	11.6	42	3560	670	1250	770	1060
	12%	0.68	15200	1.78	14.8	37	7440	1070	2000	800	1360
Sycamore, American	Green	0.46	6500	1.06	7.5	26	2920	360	1000	630	610
	12%	0.49	10000	1.42	8.5	26	5380	700	1470	720	770
Yellow-poplar	Green	0.4	6000	1.22	7.5	26	2660	270	790	510	440
	12%	0.42	10100	1.58	8.8	24	5540	500	1190	540	540

Table 6.1—Strength properties of some commercially important woods grown in the United States^a—cont. (Values are average measured properties of small clear specimens in a laboratory setting and are not design values.)

		Static bending					Compression				
Common species names	Moisture content	Specific gravity ^b	Modulus of rupture	Modulus of elasticity ^c	Work to maximum load	Impact bending (in.)	Parallel to grain (lbf in ⁻²)	Per-pendicular to grain (lbf in ⁻²)	Shear parallel to grain (lbf in ⁻²)	Tension per-pendicular to grain (lbf in ⁻²)	Side hardness (lbf)
			(lbf in ⁻²)	(×10 ⁶ lbf in ⁻²)	(in-lbf in ⁻³)						
Softwoods											
Baldecypress	Green	0.42	6600	1.18	6.6	25	3580	400	810	300	390
	12%	0.46	10600	1.44	8.2	24	6360	730	1000	270	510
Cedar, Western	Green	0.31	5200	0.94	5	17	2770	240	770	230	260
	12%	0.32	7500	1.11	5.8	17	4560	460	990	220	350
Douglas-fir, Coast	Green	0.45	7700	1.56	7.6	26	3780	380	900	300	500
	12%	0.48	12400	1.95	9.9	31	7230	800	1130	340	710
Fir, Balsam	Green	0.33	5500	1.25	4.7	16	2630	190	660	180	290
	12%	0.35	9200	1.45	5.1	20	5280	400	940	180	380
Fir, Noble	Green	0.37	6200	1.38	6	19	3010	270	800	230	290
	12%	0.39	10700	1.72	8.8	23	6100	520	1050	220	410
Hemlock, Eastern	Green	0.38	6400	1.07	6.7	21	3080	360	850	230	400
	12%	0.4	8900	1.2	6.8	21	5410	650	1060	—	500
Hemlock, Western	Green	0.42	6600	1.31	6.9	22	3360	280	860	290	410
	12%	0.45	11300	1.63	8.3	23	7200	550	1290	340	540
Larch, Western	Green	0.48	7700	1.46	10.3	29	3760	400	870	330	510
	12%	0.52	13000	1.87	12.6	35	7620	930	1360	430	830
Pine, Eastern White	Green	0.34	4900	0.99	5.2	17	2440	220	680	250	290
	12%	0.35	8600	1.24	6.8	18	4800	440	900	310	380
Pine, Jack	Green	0.4	6000	1.07	7.2	26	2950	300	750	360	400
	12%	0.43	9900	1.35	8.3	27	5660	580	1170	420	570
Pine, Loblolly	Green	0.47	7300	1.4	8.2	30	3510	390	860	260	450
	12%	0.51	12800	1.79	10.4	30	7130	790	1390	470	690
Pine, Lodgepole	Green	0.38	5500	1.08	5.6	20	2610	250	680	220	330
	12%	0.41	9400	1.34	6.8	20	5370	610	880	290	480
Pine, Longleaf	Green	0.54	8500	1.59	8.9	35	4320	480	1040	330	590
	12%	0.59	14500	1.98	11.8	34	8470	960	1510	470	870
Pine, Ponderosa	Green	0.38	5100	1	5.2	21	2450	280	700	310	320
	12%	0.4	9400	1.29	7.1	19	5320	580	1130	420	460
Pine, Red	Green	0.41	5800	1.28	6.1	26	2730	260	690	300	340
	12%	0.46	11000	1.63	9.9	26	6070	600	1210	460	560
Spruce, Red	Green	0.37	6000	1.33	6.9	18	2720	260	750	220	340
	12%	0.4	10800	1.66	8.4	25	5540	550	1290	350	530
Spruce, Sitka	Green	0.37	5700	1.23	6.3	24	2670	280	760	250	350
	12%	0.4	10200	1.57	9.4	25	5610	580	1150	370	510

^a Results of tests on clear specimens in the green and air-dried conditions. Definition of properties: impact bending is height of drop that causes complete failure, using 0.71-kg (50-lb) hammer; compression parallel to grain is also called maximum crushing strength; compression perpendicular to grain is fiber stress at proportional limit; shear is maximum shearing strength; tension is maximum tensile strength; and side hardness is hardness measured when load is perpendicular to grain.

^b Specific gravity is based on weight when oven-dry and volume when green or at 12% moisture content.

^c Modulus of elasticity measured from a simply supported, center-loaded beam, on a span depth ratio of 14/1. To correct for shear deflection, the modulus can be increased by 10%.

What to Prioritize in Sampling for Wood Identification

As is often the case with inspections, limited time and resources are available. The inspector should prioritize the members that are most critical to structural performance. The species of wood in these members should be the first to be identified.

How to Collect Samples for Wood Identification

Samples can be obtained by coring a member, drilling with a hole saw, or collecting broken splinters. Each sample should be gathered in individual containers and labeled so that samples can be traced back to the members they came from. A large enough sample must be taken so that sample preparation techniques can be safely applied, but it should not be taken in a way that affects structural integrity of the member.

How Many Samples to Take

It may be likely that the same species would be used for most members. However, a sufficient number of samples should be taken to ensure that species involved in the most critical structural members are thoroughly represented. A minimum of 20% of those members should be sampled for identification. Approximately 10% of the other less critical structural members should also be sampled for identification.

Size of Member

Before an estimated grade can be assigned to a particular member, the size of that member must be accurately estimated. If you are inspecting a structure that was built or refurbished since 1970, you will be able to directly use much of the information tabulated in the current NIST Product Standard PS 20 and the *National Design Specification (NDS) Supplement: Design Values for Wood Construction* related to size (Table 6.2, DOC [current edition], Smith and Wood 1964). Wood members are divided into three categories: boards, dimension lumber, and timbers. Structural members are classified as either dimension lumber or timbers. Most historic structures, however, were built before current methods assigning design values to structural wood members were standardized. Sizes of members likely will not be the standard sizes you are accustomed to today.

A piece of “dimension lumber” is any structural lumber that has a nominal thickness of 2 to 4 in. (actual thickness of 38 to 114 mm (1.5 to 4.5 in.)). A piece of “timber” is a structural member that has a nominal thickness greater than 5 in. (actual thickness greater than 114 mm (4.5 in.)).

Timbers are further subdivided, based on use, into subcategories of “Beam and Stringer” (timbers used as bending members) and “Post and Timber” (timbers used more as compression and tension members). The size of a member directly influences the capacity of the member and will help determine which design values for “dimension lumber or timbers” should be associated with it.

All three dimensions of a lumber member need to be determined (Fig. 6.2). The thickness of a member is the measured dimension of the narrower face of a rectangular piece of lumber. The width of the member is the measured dimension of the larger face of a rectangular piece of lumber. The length of the member is the measured dimension of the largest dimension of the member. Measurement is best accomplished using digital calipers and measuring tapes on exposed cross sections of members. Some more creative means are often required to determine sizes of less accessible members.

Grade of Member

An estimate of grade will be required for an inspector to initially estimate design values for a member.

Unfortunately, estimating grade for an inspector is an imprecise business that requires a great deal of judgment. The information in this section is meant to provide a very basic overview of grading and allow crude judgments on the grade of members. Becoming proficient in visual grading requires many hours of experience. Some basic understanding of the grading process will allow an inspector to judge whether a more thorough grading of members is advised. Experienced certified graders should be hired to provide the truest estimate of grade for members.

Purpose of Grading

To more efficiently and economically use wood from logs, pieces of wood of similar mechanical properties are placed in categories called stress grades, which are characterized by (a) one or more sorting criteria, (b) a set of properties for engineering design, and (c) a unique grade name. With new material, a grade stamp on a piece of lumber tells architects, engineers, builders, and building officials the quality of a piece of lumber. A typical grade stamp for dimension lumber is shown in Figure 6.3. A grade stamp provides information on the supervising grading agency (WWPA 2021), the wood species or species combination (Douglas-fir–Larch), the mill number or brand of the firm that produced the board (12), the grade requirements the piece meets (No. 1 and better), and the target moisture content to which the wood was dried or the moisture content at which it was surfaced (surfaced-green). If a grade stamp is present, the inspector’s job is immediately made easier. A certified grader has already judged the grade of the member based on the most severe defects present. If the inspector determines that the member is still undamaged and undecayed, this grade can be used to determine the design values. If not, additional judgments on the quality of the member must be made.

Brief History of Visual Grading

For many years, lumber has demonstrated the versatility of wood by serving as a primary raw material for construction and manufacture in the United States. In this role, lumber has been produced in a wide variety of products from many different species. The first industry-sponsored grading rules

Table 6.2—Specifications for dimension of structural members (DOC PS 20)

Thicknesses					Widths				
Nominal in.	Minimum dressed				Nominal in.	Minimum dressed			
	Dry mm	Dry in.	Green mm	Green in.		Dry mm	Dry in.	Green mm	Green in.
Board									
					2	38	1-1/2	40	1-9/16
					3	64	2-1/2	65	2-9/16
					4	89	3-1/2	90	3-9/16
3/8	8	5/16	9	11/32	5	114	4-1/2	117	4-5/8
1/2	11	7/16	12	15/32	6	140	5-1/2	143	5-5/8
5/8	14	9/16	15	19/32	7	165	6-1/2	168	6-5/8
3/4	16	5/8	17	11/16	8	184	7-1/4	190	7-1/2
1	19	3/4	20	25/32	9	210	8-1/4	216	8-1/2
1-1/4	25	1	26	1-1/32	10	235	9-1/4	241	9-1/2
1-1/2	32	1-1/4	33	1-9/32	11	260	10-1/4	267	10-1/2
					12	286	11-1/4	292	11-1/2
					14	337	13-1/4	343	13-1/2
					16	387	15-1/4	394	15-1/2
Dimension									
					2	38	1-1/2	40	1-9/16
					2-1/2	51	2	52	2-1/16
					3	64	2-1/2	65	2-9/16
2	38	1-1/2	40	1-9/16	3-1/2	76	3	78	3-1/16
2-1/2	51	2	52	2-1/16	4	89	3-1/2	90	3-9/16
3	64	2-1/2	65	2-9/16	4-1/2	102	4	103	4-1/16
3-1/2	76	3	78	3-1/16	5	114	4-1/2	117	4-5/8
4	89	3-1/2	90	3-9/16	6	140	5-1/2	143	5-5/8
4-1/2	102	4	103	4-1/16	8	184	7-1/4	190	7-1/2
					10	235	9-1/4	241	9-1/2
					12	286	11-1/4	292	11-1/2
					14	337	13-1/4	343	13-1/2
					16	387	15-1/4	394	15-1/2
Timbers									
5 & 6 thick	13 off	1/2 off	13 off	1/2 off	5 & 6 wide	13 off	1/2 off	13 off	1/2 off
7–15 thick	19 off	3/4 off	13 off	1/2 off	7–15 wide	19 off	3/4 off	13 off	1/2 off
≥ 16 thick	25 off	1 off	13 off	1/2 off	≥ 16 wide	25 off	1 off	13 off	1/2 off

(product descriptions) for softwoods, which were established before 1900, were comparatively simple because sawmills marketed their lumber locally and grades had only local significance. As new timber sources across the United States were developed and lumber was transported to distant points, each producing region continued to establish its own grading rules. Lumber from various regions differed in size, grade name, and allowable grade characteristics. When

different species were graded under different rules and competed in the same markets, confusion and dissatisfaction were inevitable.

Research conducted on wood properties in the early 1900s had two distinct camps: full-size testing and small clear wood testing. The full-size testing group felt that testing programs and any subsequent grading standards should be

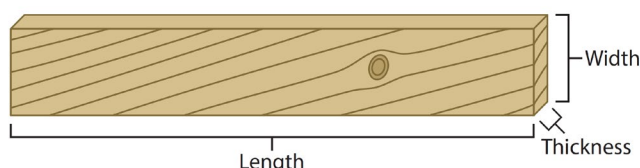


Figure 6.2—Definition of length, width, and thickness in a lumber member.



Figure 6.3—Grade stamp from WWP No. 1 & Better dimension lumber. Moisture content is surfaced green (unseasoned) condition, over 19% (WWPA 2021).

done on full-size members available to consumers. This group argued that this approach would reduce the waste involved in overbuilt structures and ensure minimum standards for integrity and safety. The small clear wood group, primarily foresters, felt that timber tests should focus on the qualities of trees rather than the potential design uses for lumber. Their group argued that tests of multiple small samples of clear wood should be conducted to provide strength averages without incurring the expenses and waste that full-size testing would generate (Green and Evans 2001). This debate continues to this day.

As grading rules began to develop, a number of conferences were sponsored by the U.S. Department of Commerce from 1919 to 1925 to minimize unnecessary differences in grading rules and to improve and simplify these rules. These conferences were attended by representatives of lumber manufacturers, distributors, wholesalers, retailers, engineers, architects, and contractors. The result of these conferences was a relative standardization of sizes, definitions, and procedures for deriving allowable design properties and a voluntary American Lumber Standard. Two Circulars, Circular 295, “Basic Grading Rules and Working Stresses for Structural Timbers,” and Circular 296, “Standard Grading Specifications for Yard Lumber,” involving allowable design values published by USDA Forest Products Laboratory in 1923 served as the basis for the grading rules we see in the United States today (Newlin and Johnson 1923, Ivory et al. 1923). In the years that followed initial acceptance of the first grading rules, these rules have been modified as more information was gathered on the influence of knots, slope of grain, growth characteristics, and sawing practices.

An orderly, voluntary, but circuitous system of responsibilities has evolved in the United States for the development, manufacture, and merchandizing of most

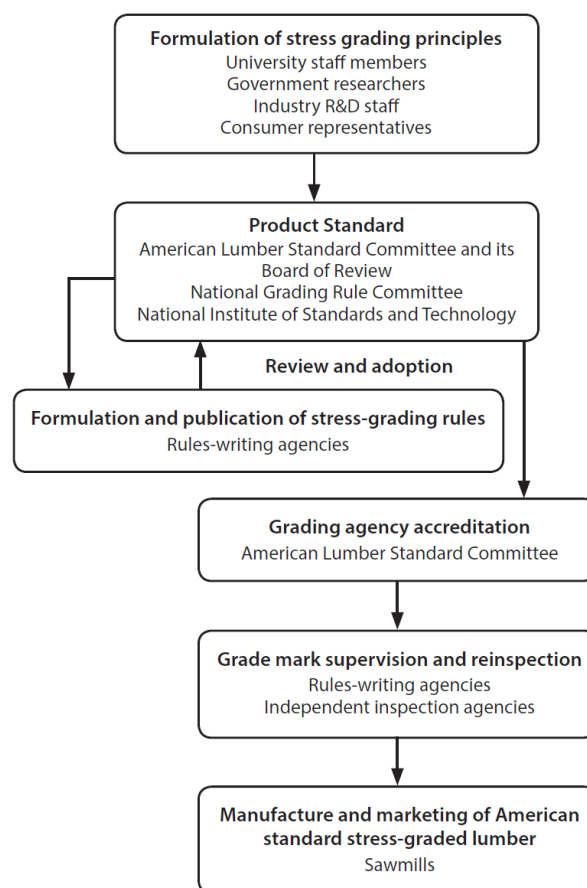


Figure 6.4—Voluntary system of responsibilities for stress grading under the American Softwood Lumber Standard.

stress-graded lumber (Fig. 6.4). Stress-grading principles are developed from research findings and engineering concepts, often within committees and subcommittees of ASTM International (formerly the American Society for Testing and Materials), and then applied to product classes. Lumber cannot be graded as American Standard lumber unless the grade rules have been approved by the American Lumber Standard Committee (ALSC), Inc., Board of Review. Virtually all commercial softwood and hardwood lumber used for structural purposes that is manufactured in the United States is stress graded under American Lumber Standard practice and is called American Lumber Standard program lumber. The American Lumber Standard has been modified several times, including the addition of hardwood species to the standard beginning in 1970. The current edition is the American Softwood Lumber Standard PS 20–20 (DOC [current edition]). Distinctive grade marks for each species or species grouping are provided by accredited agencies. The principles of stress grading are also applied to several hardwood species under provisions of the American Softwood Lumber Standard, ASTM International, and then applied to product classes. The allowable design properties are tabulated in the Supplement to the National Design Specification (AWC 2024).

Responsibilities and Standards for Stress Grading

Organizations that write and publish grading rule books containing stress-grade descriptions are called rules-writing agencies. Grading rules that specify American Softwood Lumber Standard (ALSC) PS 20 must be certified by the ALSC Board of Review for conformance with this standard. Organizations that write grading rules, as well as independent agencies, can be accredited by the ALSC Board of Review to provide grading and grade-marking supervision and re-inspection services to individual lumber manufacturers. Accredited rules-writing and independent agencies are listed below. These agencies are in the business of grading and have a wealth of experience of determining grades of lumber. The continued accreditation of these organizations is under the scrutiny of the ALSC Board of Review. For the most accurate assessment of grade of a member, an accredited grader from one of these organizations should be used. (For updated information, contact American Lumber Standard Committee, Inc., 7470 New Technology Way, Suite F, Frederick, MD 21703; alsc@alsc.org; www.alsc.org.)

Rules-writing agencies

Northeastern Lumber Manufacturers Association (NeLMA)
Pacific Lumber Inspection Bureau, Inc. (PLIB/WCLIB)
Redwood Inspection Service (RIS)
Southern Pine Inspection Bureau (SPIB)
Western Wood Products Association (WWPA)
National Lumber Grades Authority (NLGA)

Independent agencies

Renewable Resource Associates, Inc. (RRA)
Timber Products Inspection (TP)
Alberta Forest Products Association (AFPA)
Canadian Mill Services Association (CMSA)
Canadian Softwood Inspection Agency, Inc. (CSI)
Central Forest Products Association (CFPA)
Continental Inspection Agency
Maritime Lumber Bureau (MLB)
Newfoundland and Labrador Lumber Producers Association (NLLPA)
Ontario Forest Industries Association (OFIA)
Ontario Lumber Manufacturers Agency (OLMA)
Quebec Forest Industry Council (CIFQ, QFIC)
Stafford Inspection and Consulting

Tables 6.3 to 6.5 provide example grading rules for various grades at the time of this publication. The most current rules for visually grading lumber and timber members can be obtained from various rules-writing agencies that are responsible for supervising lumber mill grading operations. The most up-to-date set of rules can be obtained from the rules-writing agencies. These rules can provide an inspector with a clear guide as to what is acceptable under current visual grading rules.

Current Visual Grading System

The grading rules in use today, like those discussed in 1923, are based on the premise that mechanical properties of

lumber and timbers differ from mechanical properties of clear wood because many growth characteristics affect properties and these characteristics can be seen and judged by eye. The typical visual sorting criteria used in grading are size of member, knots, slope of grain, checks and splits, shake, density, decay, heartwood and sapwood, pitch pockets, and wane.

For dimension lumber (lumber less than 90 mm (nominal 4 in.)), a single set of grade names and descriptions is used throughout the United States, although the design values vary with species. The current National Grading Rule restrictions for dimension lumber are given in Table 6.3.

Timbers (lumber standard 114 mm (nominal 5 in.) or more in least dimension) are also structurally graded under ALSC procedures. Unlike grade descriptions for dimension lumber, grade descriptions for structural timbers are not standardized across species. Structural timbers of Southern Pine are graded without regard to anticipated use (Table 6.4). For most species, however, timber grades are classified according to intended use (Table 6.5).

Influence of Visual Grading Characteristics on Grade

Visual grading characteristics influence wood properties and performance, and as such are used as sorting criteria. Such characteristics include knots, slope of grain, checks and splits, shake, density, decay, heartwood and sapwood, pitch pockets, and wane. To make the most exact estimate of a structural member's grade, all these characteristics should be considered, but the grade of the member will be determined by the most severe of the defects. Not all these member characteristics will be easy or possible to measure in place, but their influence on properties is discussed for completeness. The most critical of these characteristics for inspections are highlighted in a later section ("What to prioritize in field estimation grading"). With some experience, an inspector will be able identify which of the features explained below represent the most significant or severe defect in the member and only measure that feature.

Knots

Knots are branches or portions of branches embedded in a piece of wood and cause localized cross grain with steep slopes within the timber. A very damaging aspect of knots in sawn lumber is that the continuity of the grain around the knot is interrupted by the sawing process. The location of a knot influences its effect on strength. Centerline knots on the wide face have the least effect on strength grade; edge knots on the wide or narrow face have the most effect on strength and grade.

In general, knots have greater effect on strength in tension than compression; in bending, the effect depends on whether a knot is in the tension or compression side of a beam (knots along the centerline have little or no effect). Intergrown (or live) knots resist (or transmit) some kinds of stress, but encased knots (unless very tight) or knotholes resist (or

Table 6.3—National grading rule specifications for dimension lumber (SPIB 2021a; used by permission of Southern Pine Inspection Bureau)

Characteristics	Select Structural			No. 1			No. 2			No. 3		
Compression wood	Not allowed in damaging form for the grade considered											
Slope of grain	1 in 12			1 in 10			1 in 8			1 in 4		
Decay	Not permitted			Not permitted			Heart center, 1/3 thickness × 1/3 width			Heart center, 1/3 cross section. Must not destroy nailing edge. See para. 710(e).		
Holes	Same as unsound knots			Same as unsound knots			Same as unsound knots			Same as unsound knots		
Knots	Sound, firm, encased, pith, tight and well spaced. One hole or equivalent smaller holes per 4 lin. ft.			Sound, firm, encased, pith, tight and well spaced. One hole or equivalent smaller holes per 3 lin. ft.			Well spaced knots of any quality. One hole or equivalent smaller holes per 2 lin. ft.			Well spaced knots of any quality one hole or equivalent smaller holes per 1 lin. ft		
Allowable knot sizes by nominal face width												
Nominal board size (in.)	Edge (in.)	Center -line (in.)	Unsound knots (in.)	Edge (in.)	Center- line (in.)	Unsound knots (in.)	Edge (in.)	Center- line (in.)	Holes (in.)	Edge (in.)	Center- line (in.)	Holes (in.)
2×4	3/4	7/8	3/4	1	1-1/2	1	1-1/4	2	1-1/4	1-3/4	2-1/2	1-3/4
2×5	1	1-1/2	7/8	1-1/4	1-7/8	1-1/8	1-5/8	2-3/8	1-3/8	2-1/4	3	1-7/8
2×6	1-1/8	1-7/8	1	1-1/2	2-1/4	1-1/4	1-7/8	2-7/8	1-1/2	2-3/4	3-3/4	2
2×8	1-1/2	2-1/4	1-1/4	2	2-3/4	1-1/2	2-1/2	3-1/2	2	3-1/2	4-1/2	2-1/2
2×10	1-7/8	2-5/8	1-1/4	2-1/2	3-1/4	1-1/2	3-1/4	4-1/4	2-1/2	4-1/2	5-1/2	3
2×12	2-1/4	3	1-1/4	3	3-3/4	1-1/2	3-3/4	4-3/4	3	5-1/2	6-1/2	3-1/2
Shakes	← Ends: Same as splits. Elsewhere: 2 ft surface; none through. →						Ends: Same as splits. Elsewhere: Surface 3 ft or 1/4 length; 2 ft through.			1/6 length if through at edges or ends; elsewhere through shakes 1/3 length.		
Checks	← Surface seasoning checks not limited. Through checks at ends limited as splits. →											
Skips	← Hit and miss in 10% of the pieces. See para. 720(f). →						Hit and miss. 5% of pieces may be hit or miss or heavy skip for 2 ft. See para. 720(e,f,g).			Hit or miss. 10% of pieces may have heavy skip. See para. 720(e,g).		
Splits	← Equal to the width →						Equal to 1-1/2 times the width			Equal to 1/6 length		
Wane	← 1/4 thickness × 1/4 width × full length or equivalent; must not exceed 1/2 thickness × 1/3 width for up to 1/4 length. Also see para. 750. →						1/3 thickness × 1/3 width × full length or equivalent; must not exceed 2/3 thickness × 1/2 width for up to 1/4 length. Also see para. 750.			1/2 thickness × 1/2 width × full length or equivalent; must not exceed 7/8 thickness or 3/4 width for up to 1/4 length. Also see para. 750.		
Bow	← 10 ft/1-3/8 in.; 12 ft/1-1/2 in.; 14 ft/2 in.; 16 ft/2-1/2 in. →						10 ft/1-1/2 in.; 12 ft/2 in.; 14 ft/2-1/2 in.; 16 ft/3-1/4 in.			10 ft/2-3/4 in.; 12 ft/3 in.; 14 ft/4 in.; 16 ft/5 in.		
Crook	10 ft	12 ft	14 ft	16 ft	10 ft	12 ft	14 ft	16 ft	10 ft	12 ft	14 ft	16 ft
2×4	3/8 in.	1/2 in.	5/8 in.	3/4 in.	1/2 in.	11/16 in.	7/8 in.	1 in.	3/4 in.	1 in.	1-1/4 in.	1-1/2 in.
2×6	5/16 in.	7/16 in.	9/16 in.	11/16 in.	7/16 in.	5/8 in.	3/4 in.	7/8 in.	5/8 in.	7/8 in.	1-1/8 in.	1-3/8 in.
2×8	← 1/4 in.	13/32 in.	1/2 in.	9/16 in.	→ 3/8 in.	1/2 in.	5/8 in.	3/4 in.	1/2 in.	13/16 in.	1 in.	1-1/8 in.
2×10	7/32 in.	3/8 in.	7/16 in.	1/2 in.	1/4 in.	7/16 in.	1/2 in.	5/8 in.	7/16 in.	3/4 in.	7/8 in.	1 in.
2×12	3/16 in.	9/32 in.	3/8 in.	7/16 in.	3/16 in.	3/8 in.	3/8 in.	1/2 in.	3/8 in.	9/16 in.	3/4 in.	7/8 in.

Dense grain: Requires 6 rings/in. and 1/3 summerwood or 4 rings/in. and 1/2 summerwood.

Exceptionally light weight pieces: Should not be placed in No. 2 and higher grades (exceptionally light weight pieces have less than 15% summerwood).

Table 6.4—Grading rule specifications for Southern Pine timber (SPIB 2021b; used by permission of Southern Pine Inspection Bureau)

Grading rules for timber								
Characteristics	Select Structural			No. 1			No. 2	
Compression wood	No changes							
Slope of grain	No changes							
Decay	No changes							
Holes	No changes							
Knots	Sound, firm, encased and pith knots			Sound, firm, encased and pith knots			Sound, firm, encased and pith knots	
Allowable knot sizes by nominal face width								
Nominal face width (in.)	Narrow face and at edge of wide face (in.) ²	Centerline wide face (in.)	Unsound knots (in.) ¹	Narrow face and at edge of wide face (in.) ²	Centerline wide face (in.)	Unsound knots (in.) ¹	Narrow face and at edge of wide face (in.)	Unsound knots (in.) ¹
5	1-3/8	—	1	1-3/4	—	1-3/8	2-1/2	2
6	1-5/8	1-5/8	1-1/4	2-1/8	2-1/8	1-5/8	3	2-1/4
8	1-7/8	2-1/4	1-1/2	2-1/2	2-3/4	2	4-1/2	2-3/4
10	2-1/8	2-3/4	2	2-3/4	3-1/2	2-1/2	5-1/2	3
12	2-3/8	3-1/4	2-1/8	3-1/8	4-1/4	2-7/8	6-1/2	3-1/2
14	2-1/2	3-5/8	2-1/4	3-3/8	4-3/4	3-1/8	7-1/2	3-3/4
16	2-3/4	3-7/8	2-1/2	3-1/2	5	3-3/8	8	4
18	2-7/8	4-1/8	2-1/2	3-1/2	5-1/4	3-1/2	8-1/2	4
20	3	4-3/8	3	3-1/2	5-1/2	3-1/2	9	4
Notes	¹ In unsound knots as allowed, decay must be confined to the knot itself and not be in surrounding wood and not penetrated deeper than 1-1/2 in. ² In timbers of equal face, knots are permitted throughout as specified for narrow faces regardless of location.						¹ In unsound knots as allowed, decay must not penetrate deeper than 2 in.	
Shakes, checks, splits	Splits not longer than thickness of piece; shakes and surface checks not deeper than 1/3 thickness if not dry and 3/8 thickness if dry			Splits not longer than thickness of piece; shakes and surface checks not deeper than 1/3 thickness if not dry and 3/8 thickness if dry			Splits not longer than 1.25 × thickness of piece; shakes and surface checks not deeper than 1/2 thickness	
Skips	Hit and Miss in 10% of pieces. See para. 720(f)			Hit or Miss dressing			Hit or Miss dressing except occasional scant width and thickness from full length skip limited to 1/8 in., must be No. 1 otherwise throughout any portion scant over 1/16 in.	
Stain	No changes							
Wane	No changes							
Warp	Very light. See para. 752			Very light. See para. 752			Light. See para. 752	

Table 6.5—Grading rules specifications for NELMA (WWPA) timbers

Beams and stringers								
Characteristics		Select Structural		No. 1			No. 2	
Slope of grain		1 in 14		1 in 10			1 in 6	
Decay		None		None			Small spots of unsound wood well scattered, 1/6 the face width	
Holes		None		In Cedar species, holes from any cause 1/2 the size of allowable knots are permitted.			Same as unsound knots	
Knots		Sound, tight and well-spaced		Sound, tight and well-spaced			Sound, not firmly fixed or holes, well spaced	
Allowable knot sizes by nominal face width								
Nominal face width (in.)	Edge wide face (in.)	Centerline wide face (in.)	Unsound knots (in.)	Edge wide face (in.)	Centerline wide face (in.)	Unsound knots (in.)	Edge of wide face and centerline of wide face (in.)	Unsound knots (in.)
8	1-7/8	2	—	2-5/8	3	—	4-1/2	2-1/4
10	2	2-5/8	—	2-7/8	3-3/4	—	5-5/8	2-13/16
12	2-1/8	3-1/8	—	3-1/4	4-1/2	—	6-7/8	3-7/16
14	2-3/8	3-3/8	—	3-1/2	5	—	7-1/2	3-3/4
16	2-1/2	3-5/8	—	3-3/4	5-1/4	—	8-1/8	4-1/16
18	2-3/4	3-5/8	—	3-7/8	5-5/8	—	8-5/8	4-5/16
20	2-7/8	3-7/8	—	4-1/8	5-7/8	—	9-1/8	4-9/16
22	3	4	—	4-3/8	6-1/4	—	9-1/2	4-3/4
24	3-1/8	4-1/4	—	4-1/2	6-1/2	—	10	5
Shakes	1/6 the thickness on end			1/6 the thickness on end			1/2 length, 1/2 thickness. If through at ends, limited as splits.	
Splits	Splits equal in length to 1/2 the width of the piece or equivalent of end checks			Splits equal in length to width of the piece or equivalent of end checks			Medium or equivalent end checks	
Checks	Seasoning checks, single or opposite each other with a sum total equal to 1/4 the thickness of the piece			Seasoning checks, single or opposite each other with a sum total equal to 1/4 the thickness of the piece			Seasoning checks	
Skips	Occasional skips 1/16 in. deep, 2 ft in length			Occasional skips 1/8 in. deep, 2 ft in length			1/8 in. deep, 2 ft in length, or 1/16 in. skip full length	
Stain	Stained sapwood. Firm heart stain, 10% of width or equivalent.			Stained sapwood. Firm stained heartwood.			Stained wood	
Wane	1/8 of any face, or equivalent slightly more for a short distance			1/4 of any face or equivalent slightly more for a short distance			1/3 of any face, or equivalent slightly more for a short distance	

Table 6.5—Grading rules specifications for NELMA (WWPA) timbers—cont.

Posts and timbers							
Characteristics	Select Structural		No. 1			No. 2	
Slope of grain	No changes						
Decay	No changes						
Holes	None	In Cedar species, holes from any cause 1/2 the size of allowable knots are permitted.				Same as unsound knots	
Knots	Sound, tight and well-spaced		Sound, tight and well-spaced			Sound, not firmly fixed or holes, well spaced	
Allowable knot sizes by nominal face width							
Nominal face width (in.)	Anywhere on wide face (in.)	Unsound knots (in.)	Edge wide face (in.)	Centerline wide face (in.)	Unsound knots (in.)	Edge of wide face and centerline of wide face (in.)	Unsound knots (in.)
5	1	—	1-1/2	—	—	2-1/2	1-1/4
6	1-1/4	—	1-7/8	—	—	3	1-1/2
8	1-5/8	—	2-1/2	—	—	3-3/4	1-7/8
10	2	—	3-1/8	—	—	5	2-1/2
12	2-3/8	—	3-3/4	—	—	6	3
14	2-1/2	—	4	—	—	6-1/2	3-1/4
16	2-3/4	—	4-1/4	—	—	7	3-1/2
18	3	—	4-1/2	—	—	7-1/2	3-3/4
Shakes	1/3 the thickness on end		1/3 the thickness on end		1/2 length, 1/2 thickness. If through at ends, limited as splits.		
Splits	Splits equal in length to 3/4 the thickness of the piece or equivalent of end checks		Splits equal in length to width of the piece or equivalent of end checks		Medium or equivalent end checks		
Checks	Seasoning checks, single or opposite each other with a sum total equal to 1/2 the thickness of the piece		Seasoning checks, single or opposite each other with a sum total equal to 1/2 the thickness of the piece		Seasoning checks		
Skips	Occasional skips 1/16 in. deep, 2 ft in length		Occasional skips 1/8 in. deep, 2 ft in length		1/8 in. deep, 2 ft in length, or 1/16 in. skip full length		
Stain	Stained sapwood. Firm heart stain, 10% of width or equivalent.		Stained sapwood. Firm stained heartwood.		Stained wood		
Wane	1/8 of any face, or equivalent slightly more for a short distance		1/4 of any face, or equivalent slightly more for a short distance		1/3 of any face, or equivalent slightly more for a short distance		

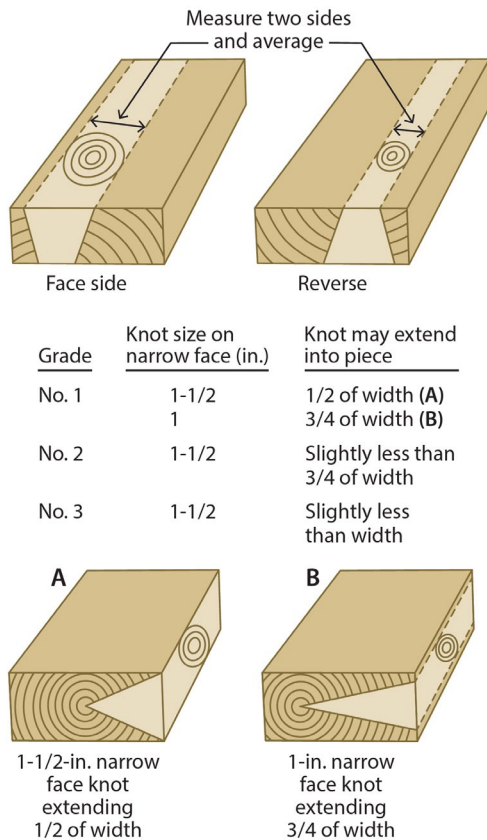


Figure 6.5—Diagram from a pocket guide showing measurement of knots on 2- to 4-in. lumber that included structural joists and planks (SPIB 2021a). Used by permission of Southern Pine Inspection Bureau.

transmit) little or no stress. On the other hand, distortion of grain is greater around an intergrown knot than around an encased (or dead) knot of equivalent size. As a result, overall strength effects are roughly equalized, and often no distinction is made in stress grading between intergrown knots, dead knots, and knotholes.

The presence of a knot has a greater effect on most strength properties than on stiffness. The zone of distorted grain (cross grain) around a knot has less “parallel to piece” stiffness than does straight-grained wood; thus, localized areas of low stiffness are often associated with knots. However, such zones generally constitute only a minor part of the total volume of a piece of lumber. Because overall stiffness of a piece reflects the character of all parts, stiffness is not greatly influenced by knots.

It is important to know the size and location of knots in wood members of a structure. The effect of knots on strength depends approximately on the proportion of the cross section of the piece of lumber occupied by the knot, knot location, and distribution of stress in the member. Grading criteria thus place limits on knot sizes in relation to the width of the face and location on the face in which the knot appears (Fig. 6.5), and the influence of the worst or



Figure 6.6—Example of using grid to establish the size of knot in bridge member. The measured knot in the example is 1-1/2 in.

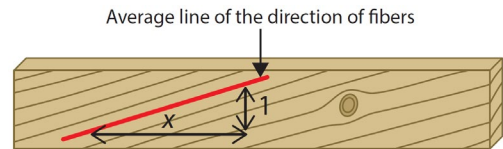


Figure 6.7—Definition of slope of grain is the ratio of rise to run (1:x).

most severe knot determines whether the knot is the limiting factor for determining the grade estimate. Compression members are stressed about equally throughout, and no limitation related to location of knots is imposed. In tension, knots along the edge of a member cause an eccentricity that induces bending stresses, and they should therefore be more restricted than knots away from the edge. In simply supported structural members subjected to bending, stresses are greater in the middle of the length and at the top and bottom edges than at mid-height. These facts are recognized in some grades by different limitations on the sizes of knots in different locations.

Knot sizes are likely to be difficult to assess on many members in structures. A scale is often used for quick estimates of knot size. Anthony et al. (2009) discuss another useful technique (a grid on a clear film) for estimating knots in dimension lumber. When properly aligned, the grid allows you to make a good estimate of knot size to the closest 1/4 in. (Fig. 6.6). Accurately capturing maximum knot size for the centerline and edge of the member is highly important; these are usually the controlling features for establishing grade.

Slope of Grain

Slope of grain is a ratio expressing the amount the grain slopes up or down within a set distance along the long axis of the member (Fig. 6.7). A nonzero slope of grain (cross grain) reduces mechanical properties of lumber. Severely cross-grained pieces are also undesirable because they tend to warp with changes in moisture content. Stresses caused by shrinkage during drying are greater in structural lumber than in small, clear, straight-grained specimens and are increased in zones of sloping or distorted grain. To provide



Figure 6.8—Example of using checking in a member to measuring the slope of grain in bridge. The end of the scale points to the start of one check.



Figure 6.9—Use of grid to easily estimate the slope of grain. The 2:18 grids above implies 1 in 9 slope of grain. The black line shows the direction of slope of grain.

a margin of safety, the reduction in design properties resulting from cross grain in visually graded structural lumber is considerably greater than that observed in small, clear specimens that contain similar cross grain.

Drying checks in timber generally follow the slope of grain and can be used to determine the slope of grain on painted timbers. Figure 6.8 shows an example of how checks indicate the slope of grain of a member. Other times the grain will be obvious on the unfinished surfaces of a member.

To measure slope of grain, the clear sheet with a printed 1/2-in. grid can once again be put to use (Fig. 6.9). In this example, the area that appears to have significant slope of grain should be measured from an axis parallel to the long axis of the member. The grid can be used to establish the rise-over-run ratio. To do so, the total number of inches for the rise can be determined along the vertical axis by counting from the lowest point of the rise to the highest point of the rise (or wherever the grain crosses the edge of the acetate sheet). The total number of inches in the run can be determined along the horizontal axis by counting across from the lowest point of the rise to the highest point of the rise (or wherever the grain crosses the edge of the acetate sheet). These measurements can then be used to represent the actual slope of grain over a given length to determine the appropriate grade. As with knots, the most severe slope of

grain in a member should be identified and, depending on its severity, may be the limiting factor for grade.

Decay

Decay in most forms should be prohibited or severely restricted in stress grades because the extent of decay is difficult to determine and its effect on strength is often greater than visual observation would indicate (Gonzalez and Morrell 2012). Decay of the pocket type (for example, *Fomes pini*) can be permitted to some extent in stress grades, as can decay that occurs in knots but does not extend into the surrounding wood. If evidence of extensive decay is present, replacing the member is the best option.

In a field inspection, decay can be detected by a close examination of texture and color of the wood. Decay can be indicated by color or texture changes such as brown, cubical, friable wood, or by soft, white, brittle wood. Decay would also clearly be suggested by the presence of mushrooms or other fruiting bodies. Also, the absence of wood can be suggestive of decay. Decay is often more severe where moisture collects or is trapped, such as where two pieces of wood overlap, or where fasteners penetrate the wood. A probe can be used to determine if wood structure is weakened (Chapter 2).

Checks, Splits, and Shake

Checks and splits have little influence on Post and Timber members but can affect the behavior of Beam and Stringer members. Shake in a Beam and Stringer is measured between lines enclosing the shake and parallel to the wide face.

Checks are separations on the surface of the wood that normally occur as a result of drying wood. Splits are a separation of the wood through the piece to the opposite surface or to an adjoining face. Checks and splits are rated by only the area of actual opening. An end-split is considered equal to an end-check that extends through the full thickness of the piece. The effects of checks and splits on strength and the principles of their limitation are the same as those for shake (below).

Shake (or “ring-shake”) is the separation of annual rings caused by weak or absent bonds between them and is presumed to extend lengthwise within a member without limit. Because shake reduces resistance to shear in members subjected to bending, grading rules therefore restrict shake most closely in those parts of a bending member (Beam and Stringer) where shear stresses are highest. In members with limited cross-grain, which are subjected only to tension or compression (Post and Timber), shake does not affect strength greatly. Shake may also be limited in a grade because of appearance and because it permits entrance of moisture, which can result in decay.

How checks, splits, and shake are measured depends on the intended use of the member. For all grades of members intended to be used as Beam and Stringer, checks, splits, and shake are measured in the middle half of the width.

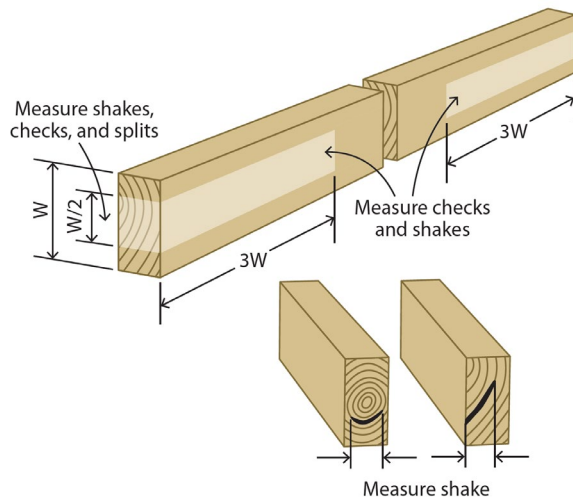


Figure 6.10—Beams and stringer checks, shake, and split measurement.

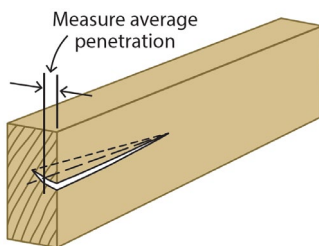


Figure 6.11—Checks in post and timber.

Restrictions on checks apply for a distance from the ends equal to three times the width of the wide face. Shake is measured from the end grain of the member between lines enclosing the shake and parallel to the wide face (Fig. 6.10). Checks are measured as an average of the penetration perpendicular to the wide face (Fig. 6.11). Where two or more checks appear on the same face, only the deepest one is measured. Where two checks are directly opposite each other, the sum of their deepest penetration is considered.

Splits are measured as the penetration of a split from the end of the piece and parallel to the edges of the piece (Fig. 6.12).

In Post and Timber, shake is measured at the ends of pieces, between lines parallel with the two faces that give the least dimension (Fig. 6.13). If the member is below 16% moisture content, the size of the shake may be 1.5 times the size permitted in the grade.

Density, Rate of Growth, and Percentage of Latewood

The strength and stiffness of clear wood are related to its density, with denser wood generally being stronger and stiffer than less dense wood. In some species, based on the structure of the wood, rate of growth (rings per inch) and percentage of latewood can give an indication of the density of the wood. Strength is related to mass per unit volume

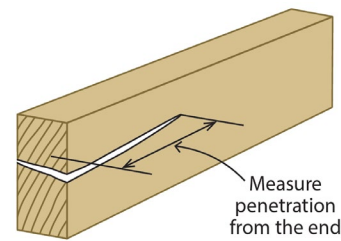


Figure 6.12—Split measurement.

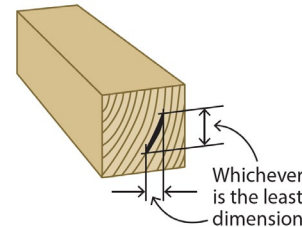


Figure 6.13—Shake in post and timber.

(density) of clear wood. Properties assigned to lumber are sometimes modified by using rate of growth and percentage of latewood as measures of density. Typically, selection for density requires that rings per unit length and percentage of latewood be within a specified range. Some very low strength pieces can be eliminated from a grade by excluding those that are exceptionally low in density.

Heartwood and Sapwood

Heartwood or sapwood is often not taken into account in structural grading because heartwood and sapwood are assumed erroneously to have essentially equal mechanical properties. However, heartwood is sometimes specified in a visual grade because heartwood of some species is more resistant to decay than is sapwood. If heartwood of a particular species is decay resistant, heartwood may be specified for replacement members if the wood is to be untreated and will be exposed to a decay hazard. On the other hand, sapwood takes preservative treatment more readily than does heartwood and is preferable for lumber that will be treated with preservatives.

Pitch Pockets

Pitch pockets ordinarily have so little effect on structural lumber that they can be disregarded in stress grading if they are small and limited in number. The presence of a large number of pitch pockets, however, may indicate shake or weakness of bond between annual rings, and extremely large pitch pockets may function as areas of ring shake and thus can be treated as such for grading purposes.

Wane

Wane refers to bark or lack of wood on the edge or corner of a piece of lumber. Requirements of appearance, fabrication, or ample bearing or nailing surfaces generally impose

stricter limitations on wane than does strength. Wane is therefore limited in structural lumber on those bases rather than for its influence on timber strength.

What to Prioritize in Field Estimation Grading

When inspecting a structure, not all properties discussed above will be easily measured. Fortunately, the most significant strength-reducing factors in structural members of wooden structures (size and location of the largest knots, slope of grain, and presence of decay) are some of the most easily field-assessable characteristics. The most time and greatest care should be taken to measure these properties on the critical members. Next in importance would be determining rings per inch, if possible, to give an indication of relative density of the member. If these properties are available, an approximation of grade can be established and thereby a reasonable first estimate of design values for the member should be attainable.

Condition Assessment

The principal reason for most inspections of a wooden structure is to determine the condition of the wood components so that a judgment can be made on the capacity of the structure. Helpful tips and methods for conducting condition assessments of wood structures have been described in detail in Chapters 1 to 5. These chapters emphasize where problems are most likely to occur in wooden structures. Missing or failed components, wood in ground contact, wood with moisture stains, wood with the presence of fungal fruiting bodies, decayed wood at material interfaces, wood with insect bore holes and mud tubes, sill beams and plates in contact with masonry, burned or charred wood, and corroded or damaged fasteners or connections are all areas that are referred to as needing close inspection. If extensive decay or evidence of large-scale insect attack are present, the member is most likely compromised and should be replaced. Decay and insect attack can result in severe reduction in strength of the members (Gonzalez and Morrell 2012). Also, structurally damaged members (members that have already failed) need to be replaced. Choices of members to inspect depend on the goal of the inspection. Regardless, the condition of the member needs to be considered when establishing an estimate of grade.

Examples of Grade Estimation

Nine example members from different structures are tabulated in Table 6.6 to illustrate estimation of grade for a member. Entries 1 to 6 look at dimension lumber members; entries 7 to 9 look at the grade of timber size members.

Dimension Lumber Grading Examples

Six dimension lumber member grade estimation examples are presented in Table 6.6. Member 1 was identified as a piece of red oak and had a measured dimension of a full 3

by 8 in., making it a structural joist and plank. No grade stamp was present. There was, however, considerable decay present in this member. Even though the knot sizes and slope of grain for a 3 by 8 member, based on the criteria in Table 6.3, would have allowed for an estimated grade of No. 1, the presence of severe decay made this member a candidate for replacement.

Member 2 was identified as Douglas-fir, with measured dimensions of 1.5 by 5.5 in. It was in good shape with a clearly marked No. 1 grade stamp. Because there was no indication of decay or damage, the stamped grade will be used.

Initial inspection of member 3 indicated that the member was northern red oak and in good shape with no damage or decay present. Member 3 was a full 2 by 6 in. and can be considered a structural joist and plank. No grade stamp was present. There was good access to all sides of the member for over 70% of its length. Measured slope of grain and knot dimensions were compared with allowable knot sizes and slope of grain for a 2 by 6 shown in Table 6.3. Member 3 grades out as a Select Structural grade member according to its slope of grain, but the knot characteristics are that of a No. 2 member. The grade level that a member qualifies for always takes the lowest estimated grade characteristic for the member. Therefore, the grade for member 3 is estimated to be No. 2.

Initial inspection of member 4 identified the species as cottonwood and again indicated that the member was in good shape with no damage or decay present. Member 4 had measured dimensions that were closest to the dimensions of a piece of nominal 2 by 8 dimension lumber and could be considered a structural joist and plank. There was very good access to three of the four sides for 50% of this member, with limited access to the wide face for the remaining portions of the member. Lack of access to the faces of the member makes the estimate of grade of this member more uncertain. Using the criteria detailed in Table 6.3, the tabulated knot information available suggests the grade is No. 1, whereas the slope of grain value only qualifies for No. 2. Therefore estimated grade for member 4 is No. 2.

Initial inspection identified member 5 as Southern Pine with no decay present. Member 5 had a measured dimension of a full 2 by 4 in. and can be classified as a structural light framing member. No grade stamp was present. There was very good access to all sides of the member. The knot dimensions and slope of grain were compared against the criteria found in Table 6.3. One large edge knot on the wide face forced a reduction in the estimated grade for member 5 to No. 2.

Initial inspection identified member 6 as American chestnut. Member 6 had a measured cross-sectional dimension of 2 by 6 in. There was good access to all sides of the member for 80% of its length. A probe test revealed no severe decay, and no other damage was observed. Applying the criteria in the national grading rule in Table 6.3 for dimension lumber,

Table 6.6—Examples for estimation of member grade (members are not all from same bridge)

	Member and species	Member size (in.)	Use	Percent access to the member and sides	Damage or decay present	Grade stamp	Largest unsound knot (in.)	Largest edge knot on wide face (in.)	Largest center-line knot on wide face (in.)	Largest narrow face knot (in.)	Slope of grain (1:x)	Final estimated grade/recommendations
1	Red Oak	3 by 8	Str. J&P	60% 3 of 4	Yes	No	N/A	N/A	N/A	N/A	N/A	
				Grade estimate								Replace
2	Douglas-fir	1.5 by 5.5	Str. J&P	70% all	No	Yes	N/A	N/A	N/A	N/A	N/A	
				Grade estimate			No. 1					No. 1
3	Northern Red Oak	2 by 6	Str. J&P	70% all	No	No	1.5	1.75	2.75	1.5	1:12	
				Grade estimate			No. 2	No. 2	No. 2	N/A	Sel. Str.	No. 2
4	Cottonwood	2 by 7.5	Str. J&P	50% 3 of 4	No	No	1.25	2.0	2.75	2.0	1:9	
				Grade estimate			Sel. Str.	No. 1	No. 1	N/A	No. 2	No. 2
5	Southern Pine	2 by 4	Str. LF	100% all	No	No	0.75	1.25	1.25	0.5	1:18	
				Grade estimate			Sel. Str.	No. 2	No. 1	N/A	Sel. Str.	No. 2
6	American Chestnut	2 by 6	Str. J&P	80% all	No	No	1.5	2.0	2.5	2.75	1:8	
				Grade estimate			No. 2	No. 1	No. 2	N/A	No. 2	No. 2
7	Southern Pine	5.5 by 7.5	P-T	50% all 3 of 4 rest	No	No	1.5	2.25	2.75	2.0	1:12	
				Grade estimate			Sel. Str.	No. 1	No. 1	No. 1	No. 1	No. 1
8	Douglas-fir	7.5 by 9.5	P-T	100% all	No	No	1	1	1.25	1	1:18	
				Grade estimate			Sel. Str.	Sel. Str.	Sel. Str.	Sel. Str.	Sel. Str.	Sel. Str.
9	White Ash	5 by 8	B-S	70% 3 of 4	No	No	1.5	3.0	3.5	2.75	1:6	
				Grade estimate			No. 1	No. 1	No. 1	No. 1	No. 2	No. 2

Str. J&P: Structural Joist and Plank (2–4 in. thick, 5 in. and wider).

Str. LF: Structural Light Framing (2–4 in. thick, 2–4 in. wide).

P-T: Post or Timber (5 by 5 in. and larger, width not more than 2 in. greater than thickness).

B-S: Beam or Stringer (5 in. and thicker, width more than 2 in. greater than thickness).

the recorded knot sizes and slope of grain suggest an approximate grade of No. 2 for member 6.

Timber Grading Example

Three timber grading examples are presented in Table 6.6. Initial inspection identified member 7 as Southern Pine. Member 7 had measured dimensions of 5.5 by 7.5 in. The dimension of this member allows it to be treated as a nominal 6 by 8 Post and Timber. Because the member is Southern Pine and Southern Pine grading rules do not distinguish between Beam and Stringer or Post and Timber, only one criterion for knots and slope of grain is given in Table 6.4. Initial inspection of the member indicated that the member was in good shape with no damage present or

obvious signs of decay. There was good access to all sides of the member for over 50% of its length and access to three sides for the remaining length of the member. The estimated slope of grain information for member 7 is No. 1.

Initial inspection identified member 8 as Douglas-fir and indicated that the member was in good shape with no damage present or obvious signs of decay. Member 8 had a measured dimension of 7.5 by 9.5 in. This member was being used as a support column and had all sides visible. The dimension and use of this timber make it a Post or Timber. The Post and Timber rules presented in Table 6.5 can be applied to Douglas-fir timbers. There were very few and quite small knots present in this member. Member 8 easily met the criteria for Select Structural.

Initial inspection identified member 9 as ash and indicated that the member was in good shape with no damage present or obvious signs of decay. Member 9 had a measured dimension of 5 by 8 in. The dimension and use of this member makes it a Beam and Stringer. The grading rules for timber Beam and Stringer are given in Table 6.5. There was good access to only three sides of the member for over 70% of its length. The member knot sizes indicated the beam could be graded out as a No. 1 but a severe slope of grain downgraded member 9 to No. 2.

Words of Advice for Size and Grade Estimation

This manual is meant to provide the reader with very basic information about how grading is conducted and a very basic method for estimating grade for members. The most accurate estimate of the in-place grade of a member would be obtained by certified graders that have extensive experience and knowledge of various structural lumber grades. The field inspector, however, should be able to get a good idea of the species of the wood and the size and quality of the members that are in the structure.

Keep good records indicating the amount of each member that was accessible and your confidence of the estimated grade. Many times it will be impossible to see a large portion of a member, and you truly will need to make an educated guess that, based on what you can see, the same knots and slope of grain conditions may extend to the rest of the member. To arrive at an estimate of the design value for the member, the condition and your confidence in the estimate of grade is important.

Estimating Design Values

Wanting to assign structural lumber values to lumber found in historic structures is certainly nothing new. A 1954 article by Lyman Wood in *Southern Lumberman* explored issues associated with assigning structural design values to old lumber (Wood 1954). Loferski and others used nondestructive evaluation and testing techniques to determine mechanical properties (Loferski et al. 1996). Falk and others looked at assigning design values to material from wood salvaged from building deconstruction projects (Falk et al. 2008, Lantz and Falk 1997). Even for newly produced lumber, a certain amount of uncertainty will always be associated with design value estimation. Assigning design values to in situ lumber and timber is more difficult because it requires judgment about the condition of members that you cannot fully access. It also requires you to judge how the prior load and environmental history has affected the member. An inspector must always be aware that judgments can be made only on what you can see and something detrimental could be lurking in the unexposed portions of the member.

Words of Caution about Estimating Design Values

Many times an inspector will not be able to see all sides of a member when trying to estimate its grade and condition. Even for very experienced certified graders, all that can

truly be said about members that are observed in place is that no defects were found for the sections observed that exclude a member from a grade. There is no guarantee that this grade estimate applies to the unreachable portions of the member. The size of defects on exposed surfaces will provide some clue as to unexposed surfaces. Some confidence in a grade assignment may be gained from the grade assessment of other more accessible members. Great care, however, should be taken when determining the design values for members in place. Reducing the design value of the member by an additional uncertainty factor (C_U) is a reasonable thing to do. The uncertainty factor can be initially estimated as the percentage of a wood member surface area accessible for evaluation. A member that can be evaluated for 70% of the surface area would have an uncertainty factor, C_U , of 0.7. The C_U may be further reduced if there are other factors (such as environmental stressors, known history of neglect). Uncertainty factors as low as 0.5 (50% reduction in strength) are not unreasonable.

Steps in Making a First Estimate of Design Values for Members

Once you have identified the species of wood involved, determined the dimension, established the condition, and estimated a grade, follow the steps (Fig. 6.14) to establish an estimate of design values for the members you have chosen. The path to assigning design values may seem confusing at first glance. Examples of each are provided to help guide the reader through the design value estimation process. Only Select Structural, No. 1, No. 2, and No. 3 grades are considered for assigning design values.

After the species, size, condition, and grade of a member is established, the next step in estimating a design value is to determine whether the species can be found in the list of species that have design values in the NDS supplement (AWC 2024). If a wood member has remained dry and does not have excessive decay, damage, splitting, or checking, one can assume that the member has equivalent properties of material produced today. A list of current species in the NDS supplement is given in Table 6.7.

Species listed in the NDS Supplement include the most common species that are present in wooden structures. Procedures for estimating design values for species that are found in the NDS Supplement are given in the following section. Note that some species listed in Table 6.7 are found as groups or individually. For example, a mixed oak group and northern red oak are both listed. If you are confident of your wood identification, use values for the individual species; otherwise, it is best to use the more conservative estimate for the species group. If the species you have is not in the list of species given in Table 6.7, then you should proceed directly to the section on “Assigning estimated design values for species not found in the NDS Supplement.” Your estimate of design values will depend on whether small clear wood property data for your species exist. Alternatively, you might use the low “sweeper group”

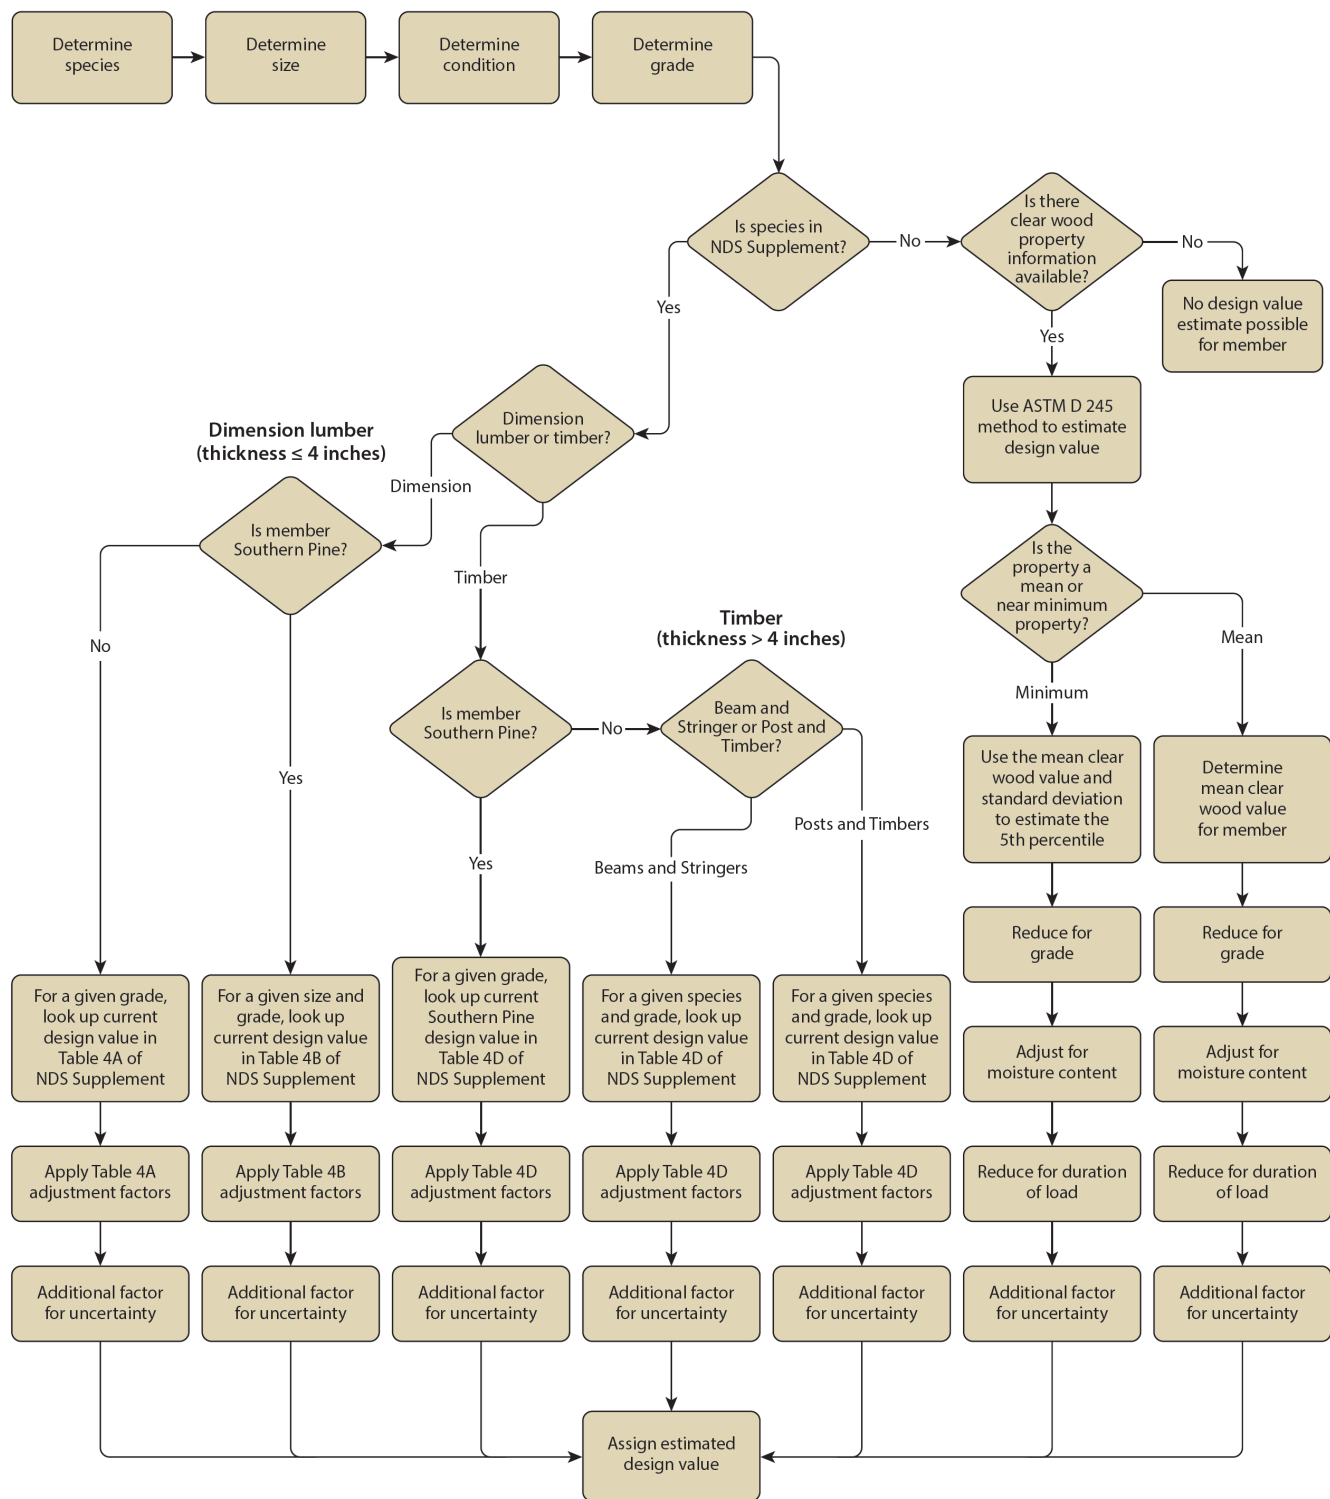


Figure 6.14—Flow chart for design value assignment.

Table 6.7—Species with design values in the NDS Supplement (AWC 2024)

NDS species or species combination	Species included in combination	Table with design value
Alaska Cedar		4A
Alaska Hemlock		4A
Alaska Spruce	Alaska Sitka Spruce Alaska White Spruce	4A
Alaska Yellow Cedar		4A
Aspen	Big Tooth Aspen Quaking Aspen	4A
Baldcypress		4A, 4D
Balsam Fir		4D, 4E
Beech-Birch-Hickory	American Beech Bitternut Hickory Mockernut Hickory Nutmeg Hickory Pecan Hickory Pignut Hickory Shagbark Hickory Shellbark Hickory Sweet Birch Water Hickory Yellow Birch	4A, 4D
Coast Species	Amabilis Fir Coast Sitka Spruce Douglas Fir Western Hemlock Western Larch	4E
Cottonwood		4A
Douglas Fir-Larch	Douglas-fir Western Larch	4A, 4C, 4D, 4E
Douglas Fir-Larch (North)	Douglas-fir Western Larch	4A, 4C, 4D, 4E
Douglas Fir-South		4A, 4C, 4D, 4E
Eastern Hemlock		4D
Eastern Hemlock-Balsam Fir	Balsam Fir Eastern Hemlock Tamarack	4A
Eastern Hemlock-Tamarack	Eastern Hemlock Tamarack	4A, 4D, 4E
Eastern Hemlock-Tamarack (North)	Eastern Hemlock Tamarack	4D, 4E
Eastern Softwoods	Balsam Fir Black Spruce Eastern Hemlock Eastern White Pine Jack Pine Norway (Red) Pine Pitch Pine Red Spruce Tamarack White Spruce	4A

Table 6.7—Species with design values in the NDS Supplement (AWC 2024)—cont.

NDS species or species combination	Species included in combination	Table with design value
Eastern Spruce	Black Spruce Red Spruce White Spruce	4D, 4E
Eastern White Pine		4A, 4D, 4E
Eastern White Pine (North)		4E
Hem-Fir	California Red Fir Grand Fir Noble Fir Pacific Silver Fir Western Hemlock White Fir	4A, 4C, 4D, 4E
Hem-Fir (North)	Amabilis Fir Western Hemlock	4A, 4C, 4D, 4E
Mixed Maple	Black Maple Red Maple Silver Maple Sugar Maple	4A, 4D
Mixed Oak	All Oak species under NeLMA rules	4A, 4D
Mixed Southern Pine	Any species in the Southern Pine species combination, plus either or both of the following: Pond Pine, Virginia Pine	4B, 4C, 4D
Mountain Hemlock		4D
Northern Pine	Jack Pine Norway (Red) Pine Pitch Pine	4D, 4E
Northern Red Oak	Black Oak Northern Red Oak Pin Oak Scarlet Oak	4A, 4D
Northern Species	Any species graded under NLGA rules except Red Alder and White Birch	4A, 4D, 4E
Norway Spruce (North)		4A, 4C
Northern White Cedar		4A, 4D, 4E
Ponderosa Pine		4D, 4E
Red Maple		4A, 4D
Red Oak	Black Oak Cherrybark Oak Laurel Oak Northern Red Oak Pin Oak Scarlet Oak Southern Red Oak Water Oak Willow Oak	4A, 4D
Red Pine		4D, 4E
Redwood		4A, 4D, 4E
Sitka Spruce		4D, 4E

Table 6.7—Species with design values in the NDS Supplement (AWC 2024)—cont.

NDS species or species combination	Species included in combination	Table with design value
Southern Pine	Loblolly Pine Longleaf Pine Shortleaf Pine Slash Pine	4B, 4C, 4D, 4E
Spruce-Pine-Fir	Alpine Fir Balsam Fir Black Spruce Engelmann Spruce Jack Pine Lodgepole Pine Red Spruce White Spruce	4A, 4C, 4D, 4E
Spruce-Pine-Fir (South)	Balsam Fir Black Spruce Engelmann Spruce Jack Pine Lodgepole Pine Norway (Red) Pine Norway Spruce Red Spruce Sitka Spruce White Spruce	4A, 4C, 4D, 4E
Western Cedars	Alaska Cedar Incense Cedar Port Orford Cedar Western Red Cedar	4A, 4C, 4D, 4E
Western Cedars (North)	Pacific Coast Yellow Cedar Western Red Cedar	4D, 4E
Western Hemlock		4D, 4E
Western Hemlock (North)		4D, 4E
Western Juniper		4A, 4D
Western White Pine		4D, 4E
Western Woods	Any species in the Douglas Fir-Larch, Douglas Fir-South, Hem-Fir, and Spruce-Pine-Fir (South) species combinations, plus any or all of the following: Idaho White Pine, Mountain Hemlock, Ponderosa Pine, Subalpine Fir, Sugar Pine	4A, 4C, 4D, 4E
White Oak	Bur Oak Chestnut Oak Live Oak Overcup Oak Post Oak Swamp Chestnut Oak Swamp White Oak White Oak	4A, 4D
Yellow Cedar		4A
Yellow Poplar		4A

Table 4A: Reference Design Values for Visually Graded Dimension Lumber (2–4 in. thick).

Table 4B: Reference Design Values for Visually Graded Southern Pine Dimension Lumber (2–4 in. thick).

Table 4C: Reference Design Values for Mechanically Graded Dimension Lumber.

Table 4D: Reference Design Values for Visually Graded timbers (5 by 5 in. and larger).

Table 4E: Reference Design Values for Visually Graded Decking.

design values (such as Northern Species or Western woods) and the methods of the following section for an initial estimate of design values.

Member grading examples in Table 6.6 are also used to illustrate design value assignment. Members 1, 2, 3, 4, 6, and 7 in Table 6.6 are all species listed in the NDS supplement. No design value need be calculated for member 1 in Table 6.6 because it was identified through close inspection to have severe decay and needs to be replaced. The other five members are assigned estimated design values in the following section. Members 5 and 8 in Table 6.6 are not in the NDS Supplement and are assigned estimated design values in the section on “Assigning estimated design values for species not found in the NDS Supplement.” All estimated design values reported below apply the rounding rules specified in ASTM D245 (ASTM 2022) (Table 6.8).

Assigning Estimated Design Values for Species Found in the NDS Supplement

If the species of the member you are interested in is in the NDS Supplement, your assignment of design values is rather straightforward. Once a grade estimate has been established, determining the design values for a member is a matter of reading the design values for that particular species from a table in the NDS supplement and applying the appropriate moisture, size, and uncertainty reduction factors.

Depending on size and grade of the member, design values for dimension lumber and timber can be found in one of three tables (4A, 4B, or 4D) in the NDS Supplement. The members in Table 6.6 provide examples that use each type of table.

Visually graded structural wood products are divided into two broad use categories—dimension lumber and timbers. If the smallest dimension of the member is less than 4.5 in. thick, the material can be considered dimension lumber. If the member is 5 in. nominal or larger in smallest dimension, it is considered a timber.

Dimension lumber properties are tabulated in two different tables depending on species. If the member is not Southern Pine, you would look up the design values in table 4A; otherwise, if the member is Southern Pine you would look up the properties in table 4B of the NDS Supplement.

For timbers, design values for all species can be found in table 4D of the NDS Supplement. Timbers, with the exception of Southern Pine timber, are further subdivided into use categories with different values for timbers that can be described as a Beam or Stringer or as Post and Timber. Southern Pine members have no distinction in design values based on use category.

Dimension Lumber Species Found in NDS Supplement

Two subcategories of dimension lumber are (1) species that are not Southern Pine and (2) species that are Southern Pine. Design value estimates for each category are determined differently.

Non-Southern Pine dimension lumber species—For members that are dimension lumber size and are not Southern Pine, design values found in table 4A in the NDS Supplement apply (AWC 2024). The values in table 4A are primarily for nominal 2- by 12-in. dimension lumber. These tabulated values must be corrected to the desired size using the size factors shown in Table 6.9. Members 2, 3, and 4 in Table 6.6 fall into this category of dimension lumber. The step-by-step estimation of design values for members 2, 3, and 4 are given in Tables 6.10, 6.11, and 6.12, respectively.

Table 6.10 shows steps for calculating estimated design values for member 2. Member 2 in Table 6.6 was identified as a piece of 2 by 6 Douglas-fir dimension lumber with a grade stamp that identified the grade of the member as No. 1. It is an example of a member that fits into the dimension lumber size category (1.5 to 4 in. thick) and is not Southern Pine. The member was in good condition, and current design values for 2 by 12 No. 1 in table 4A of the NDS Supplement apply. The appropriate size adjustments given in Table 6.9 are needed to convert these values to 2 by 6. Finally, because only 70% of the member was easily accessible, an additional uncertainty factor is applied as a precaution, giving the estimated design values listed in the far-right column of Table 6.10. The estimated F_b value, for example, is 900 lb/in².

Table 6.11 shows estimated design values for member 3 in Table 6.6, which was identified as a northern red oak 2- by 6-in. member with an approximate grade of No. 2. This is another example of a member that fits into the dimension lumber size category (1.5- to 4-in. thick) and is not Southern Pine. There was good access to 70% of the member. The baseline design values for northern red oak can be determined from table 4A of the NDS Supplement. Once again the appropriate size factors C_F shown in Table 6.9 must be applied to convert the member to a 2 by 6 size. Finally, a similar uncertainty factor of 0.7 is applied because not all the member was visible when graded. The resulting estimated design values for member is given in the far-right column of Table 6.11.

Table 6.12 shows estimated design values for member 4 in Table 6.6, which was identified as a 2- by 7.5-in. piece of cottonwood, which is closest to the current dimension of a nominal 2 by 8. The approximate grade for this member was determined to be No. 2. The baseline design values for

Table 6.8—Rounding rules (ASTM D245-22)

Bending, tension parallel, and compression parallel to grain	For design value stresses 1,000 lb/in ² (6.9 MPa) or greater, round to nearest 50 lb/in ² (340 kPa) For design value stresses less than 1,000 lb/in ² (6.9 MPa), round to nearest 25 lb/in ² (170 kPa)
Horizontal shear and compression perpendicular to grain	Round to nearest 5 lb/in ² (34 kPa)
Modulus of elasticity	Round to nearest 100,000 lb/in ² (69 GPa)

Table 6.9—Size factors, C_F (AWC 2024)

Grades	Width (in.)	F_b Thickness		F_t	$F_{c//}$
		2 and 3 in.	4 in.		
Select Structural,	2, 3, and 4	1.5	1.5	1.5	1.15
No. 1, No. 2, and No. 3	5	1.4	1.4	1.4	1.1
	6	1.3	1.3	1.3	1.1
	8	1.2	1.3	1.2	1.05
	10	1.1	1.2	1.1	1.0
	12	1.0	1.1	1.0	1.0
	14 and wider	0.9	1.0	0.9	0.9

Table 6.10—Example of design value estimation for No. 1 Douglas-fir 2 by 6

Species	Estimated member size	Estimated member grade	Purpose	Property	Table 4A baseline design value ^b	C_F Size adjustment factor	C_U ^a	Estimated design value
Douglas-fir	1.5 by 5.5 in.	No. 1	Str. J&P	F_b (lb/in ²)	1,000	1.3	0.7	900
				F_t (lb/in ²)	675	1.3	0.7	600
				F_v (lb/in ²)	180	1.0	0.7	125
				$F_{c\text{perp}}$ (lb/in ²)	625	1.0	0.7	440
				$F_{c//}$ (lb/in ²)	1,500	1.1	0.7	1,150
				E (10 ⁶ lb/in ²)	1,700,000	1.0	0.7	1,200,000
				E_{min} (10 ⁶ lb/in ²)	620,000	1.0	0.7	400,000

^a C_U , uncertainty.^bAWC (2024).

Table 6.11—Example of design value estimation for No. 2 Northern Red Oak 2 by 6

Species	Estimated member size	Estimated member grade	Purpose	Property	Table 4A baseline design value ^b	C_F Size adjustment factor	C_U ^a	Estimated design value
Northern Red Oak	2 by 6	No. 2	Str. J&P	F_b (lb/in ²)	975	1.3	0.7	890
				F_t (lb/in ²)	575	1.3	0.7	525
				F_v (lb/in ²)	220	1.0	0.7	155
				F_{cperp} (lb/in ²)	885	1.0	0.7	620
				$F_{c//}$ (lb/in ²)	725	1.1	0.7	560
				E (10 ⁶ lb/in ²)	1,300,000	1.0	0.7	910,000
				E_{min} (10 ⁶ lb/in ²)	470,000	1.0	0.7	329,000

^a C_U , uncertainty.^b AWC (2024).**Table 6.12—Example of design value estimation for No. 2 Cottonwood 2 by 8**

Species	Estimated member size	Estimated member grade	Purpose	Property	Table 4A baseline design value ^b	C_F Size adjustment factor	C_U ^a	Estimated design value
Cottonwood	2 by 8	No. 2	Str. J&P	F_b (lb/in ²)	625	1.2	0.5	375
				F_t (lb/in ²)	350	1.2	0.5	210
				F_v (lb/in ²)	125	1	0.5	65
				F_{cperp} (lb/in ²)	320	1	0.5	160
				$F_{c//}$ (lb/in ²)	475	1.05	0.5	250
				E (10 ⁶ lb/in ²)	1,100,000	1	0.5	550,000
				E_{min} (10 ⁶ lb/in ²)	400,000	1	0.5	200,000

^a C_U , uncertainty.^b AWC (2024).

cottonwood can be found in table 4A of the NDS supplement. The appropriate size factors C_F shown in Table 6.9 must be applied to convert the member to a 2 by 8 size. During inspection, notes indicated that there was not good access to this member; only 50% of the member was visible on three of the four sides. This lack of access introduces a great deal of uncertainty into the estimate of grade, so a considerable reduction ($C_U = 0.5$) in design value estimates is certainly advised. The resulting estimated design values are given in the far-right column of Table 6.12.

Southern Pine dimension lumber in the NDS

Supplement—Table 6.13 shows steps for determining an estimated design value for member 5. Member 5 in Table 6.6 was identified as a 2- by 4-in. Southern Pine member whose approximate grade was No. 2. The size-specific design values for Southern Pine dimension lumber are tabulated in table 4B of the NDS supplement. To estimate design values, the inspector needs to find the entry that corresponds to the grade and closest size of the member of interest. In this case, for example, the 2 by 4 No. 2 F_b given in table 4B is 1,100 lb/in². Because the values are size-specific, a size adjustment factor is not necessary. The inspection notes also indicated easy access to all sides, so an uncertainty reduction is not needed. Estimated design values listed in the far-right column for member 5 is, in this case,

the value given for Southern Pine 2 by 4 No. 2 of table 4B of the NDS Supplement.

Timber Values Found in NDS Supplement

Timber design values are found in table 4D of the NDS Supplement. There are again differences between how you treat Southern Pine and other species, but this time the difference is not as exaggerated. Different sets of size adjustments apply to timbers and to dimension lumber. For timbers that are subjected to loads applied to the narrow face, tabulated design values for bending are adjusted by a size adjustment found in ASTM D245 (ASTM 2022). Other properties do not receive a size adjustment. If the member depth is greater than 12 in., a new F_n can be calculated using

$$F_n = \left(\frac{12}{d} \right)^{1/9} F_o$$

where d is member depth, F_o is original bending strength, and F_n is adjusted bending strength.

Southern Pine timbers—Southern Pine timbers have no distinction between the use classes of Beams or Stringers and Post and Timbers. Therefore, you need to find only the Southern Pine timber values for the grade you are interested in and apply them to the member.

Table 6.13—Example of design value estimation for No. 2 Southern Pine 2 by 4

Species	Estimated member size	Estimated member grade	Purpose	Property	Table 4B baseline design value ^b	C_F Size adjustment factor	C_U ^a	Estimated design value
Southern Pine	2 by 4	No. 2	Str. LF	F_b (lb/in ²)	1,100	1	1.0	1,100
				F_t (lb/in ²)	675	1	1.0	675
				F_v (lb/in ²)	175	1	1.0	175
				F_{cperp} (lb/in ²)	565	1	1.0	565
				$F_{c//}$ (lb/in ²)	1,450	1	1.0	1,450
				E (10 ⁶ lb/in ²)	1,400,000	1	1.0	1,400,000
				E_{min} (10 ⁶ lb/in ²)	510,000	1	1.0	510,000

^a C_U , uncertainty.

^b AWC (2024).

Table 6.14 shows estimated design values for member 7. Member 7 in Table 6.6 was identified as a 5.5- by 7.5-in. Southern Pine member whose observable knots and slope of grain classified the member as a No. 1 timber. Design values for Southern Pine for this size and grade can be obtained directly from table 4D of the NDS Supplement. Inspection notes indicate that there was not good access to this member; only 50% of the member was visible on three of four sides. This suggests the need for a considerable uncertainty factor of 0.5. Estimated design values for member 7 are given in the far-right column of Table 6.14.

Non-Southern Pine timbers—For non-Southern Pine members, the value in the NDS Supplement that is appropriate for the member is linked to its species, dimensions, estimated grade, and use. If the member is 5 in. thick and its width is more than 2 in. greater than thickness, the member is a Beam or Stringer. If the member is 5 by 5 in. and larger with a width not more than 2 in. greater than thickness, the member is a Post and Timber.

Table 6.15 shows estimated design values for member 8. Member 8 in Table 6.6 was identified as a 7.5- by 9.5-in. Douglas-fir member that had observable knots and slope of grain that would approximate a Select Structural piece of timber. The member size means that it can be classified as a Post and Timber. The design values for Select Structural Douglas-fir Post and Timber can be obtained in table 4D of the NDS Supplement. Inspection notes indicate that there was easy access to all sides, so no uncertainty factor is applied. Estimated design values for member 8 are given in the far-right column of Table 6.15.

Assigning Estimated Design Values for Species Not Found in the NDS Supplement

If the species of the member is not in the NDS Supplement, design value estimates are even more uncertain. Strength and stiffness information on that species must be found. If small clear wood test values are available for the species you have identified, using the methods listed in ASTM D245 (ASTM 2022) as a guide, the equation

$$F_x = (\text{Property}) \cdot \frac{1}{C_{DoL}} \cdot \frac{1}{C_{Gr}} \cdot \frac{1}{C_{MC}} \cdot \frac{1}{C_d} \cdot \frac{1}{C_U}$$

will allow for a design value estimate of F_x , which is the particular member property times an adjustment for duration of load and factor of safety (C_{DoL}), grade (C_{Gr}), moisture content (C_{MC}), depth (C_d), and uncertainty (C_U).

For bending, tension, shear, and compression parallel to grain design values, the estimated 5th percentile for each property is needed to estimate the design value. The 5th percentile for the species can be estimated by the $(\text{Avg} - 1.645\sigma)$, where Avg is the average green small clear strength value for the small clear test result in Table 6.1 and σ is the standard deviation for the species. The standard deviation can be approximated by using the average coefficient of variation for most wood properties (given in Table 6.16) times the average clear wood strength. The

species' mean clear wood modulus of elasticity (MOE) and compression perpendicular to grain (C_{perp}) stress values can be used to determine an estimate of MOE and C_{perp} design values.

The adjustment factors (C_{DoL}) suggested in D245 for various clear wood properties are given in Table 6.17. This factor is meant to account for duration of load and a safety factor.

The grade adjustment, C_{Gr} , is based on the assumed strength ratio for a particular visual grade. Estimated strength ratios for cross grain and density have been obtained empirically; strength ratios for other growth characteristics have been derived theoretically. Particular grades have had approximate strength ratios associated with them. The strength ratio estimates for C_{Gr} are given in Table 6.18.

The depth adjustment factor, C_d , is applied to the bending clear wood value. This factor adjusts the small clear wood specimen test result obtained at a 2-in. dimension to the dimension of the member. The adjustment for size can be determined by using the member depth of the member d and

$$C_d = \left(\frac{2}{d}\right)^{1/9}$$

Finally, as in previous examples, an uncertainty factor (C_U) adjustment is recommended to reflect the uncertainty associated with determining the grade and condition of the member.

Most species not in the NDS Supplement but used in wooden structures can be found in Table 6.1. Two examples from Table 6.6, dimension lumber member 6 and timber member 9, are given below. Other example calculations of design values using clear wood information can be found in Bendtsen and Galligan (1978).

Member Is Dimension Lumber Size

Table 6.19 shows steps for estimating design values for member 6. Member 6 of Table 6.6 was identified as a 2- by 6-in. American chestnut Structural Joist and Plank that had observable defects and a slope of grain that classified it as a No. 2 piece of dimension lumber. The average clear wood mean values for American chestnut from Table 6.1, which have been converted to pounds per square inch, are in column 1. Where applicable, these values are adjusted to a 5th percentile estimate in column 2. The hardwood adjustment factors from Table 6.17 and the estimated grade strength ratio from Table 6.18 are in columns 3 and 4, respectively. Moisture adjustment factors for American chestnut from green to dry are available in table X1.1 of ASTM D2555 (ASTM 2017) and are listed in column 5. Only the bending stress value is adjusted for size in column 6. Inspection notes indicate that there was quite good access, resulting in an uncertainty factor of 0.8. The estimated design values for member 6 are given in the far-right column.

Table 6.14—Example of design value estimation for No. 1 Southern Pine 6 by 8

Species	Estimated member size	Estimated member grade	Purpose	Property	Table 4D baseline design value ^b	C_F Size adjustment factor	C_U^a	Estimated design value
Southern Pine	6 by 8	No. 1	P-T	F_b (lb/in ²)	1,350	1	0.5	675
				F_t (lb/in ²)	900	1	0.5	450
				F_v (lb/in ²)	165	1	0.5	85
				$F_{c\text{perp}}$ (lb/in ²)	375	1	0.5	190
				$F_{c//}$ (lb/in ²)	825	1	0.5	415
				E (10 ⁶ lb/in ²)	1,500,000	1	0.5	750,000
				E_{min} (10 ⁶ lb/in ²)	550,000	1	0.5	275,000

^a C_U , uncertainty.^bAWC (2024).**Table 6.15—Example of design value estimation for Select Structural Douglas-fir 8 by 10**

Species	Estimated member size	Estimated member grade	Purpose	Property	Table 4D baseline design value ^b	C_F Size adjustment factor	C_U^a	Estimated design value
Douglas-fir	8 by 10	Sel. Str.	P-T	F_b (lb/in ²)	1,500	1	1.0	1,500
				F_t (lb/in ²)	1,000	1	1.0	1,000
				F_v (lb/in ²)	170	1	1.0	170
				$F_{c\text{perp}}$ (lb/in ²)	625	1	1.0	625
				$F_{c//}$ (lb/in ²)	1,150	1	1.0	1,150
				E (10 ⁶ lb/in ²)	1,600,000	1	1.0	1,600,000
				E_{min} (10 ⁶ lb/in ²)	580,000	1	1.0	580,000

^a C_U , uncertainty.^bAWC (2024).

Table 6.16—Average coefficient of variation for clear wood properties (FPL 2021)

	Bending	Modulus of elasticity	Tensile strength parallel to grain	Compressive strength parallel to grain	Horizontal shear strength	Proportional limit stress at deformation in compression perpendicular to grain
Coefficient of variation	16	22	25	18	14	28

Table 6.17—Adjustment factors, C_{DoL} , applied to the clear wood properties (ASTM D245-22)

	Bending	Modulus of elasticity	Tensile strength parallel to grain	Compressive strength parallel to grain	Horizontal shear strength	Proportional limit stress at deformation in compression perpendicular to grain
Softwoods	2.1	0.94	2.1	1.9	2.1	1.67
Hardwoods	2.3	0.94	2.3	2.1	2.3	1.67

Table 6.18—Grade adjustment, C_{Gr} , from assumed strength ratio values for rough estimate of design values (Bendtsen and Galligan 1978)

Grades	C_{Gr} from assumed strength ratio					
	Bending	Tension	Shear	C_{perp}	Compression	MOE
Clear wood	100	100	100	100	100	100
Select Structural	65	65*55	50	100	69	100
No. 1	55	55*55	50	100	62	100
No. 2	45	45*55	50	100	52	90
No. 3	26	26*55	50	100	33	80

Table 6.19—Example of design value estimation for No. 2 American Chestnut 2 by 6

Species	Estimated member size	Estimated member grade	Purpose	Property	Clear wood mean (lb/in ²)	5th pctl. est.	Adjustment factors					Estimated design value (lb/in ²)
							C_{DoL}	C_{Gr}	C_{MC}	C_d	C_U	
American Chestnut	2 by 6	Sel. Str.	Str. J&P	F_b (lb/in ²)	5,655	4,170	2.3	0.45	1.53	0.894	0.8	900
				F_t (lb/in ²)	5,655	3,330	2.3	0.247	1.53	1	0.8	450
				F_v (lb/in ²)	800	615	2.3	0.5	1.36	1	0.8	145
				F_{cperp} (lb/in ²)	305	N/A	1.67	1	2.00	1	0.8	290
				$F_{c//}$ (lb/in ²)	2,465	1,735	2.1	0.50	2.15	1	0.8	650
				E (10 ⁶ lb/in ²)	930,000	N/A	0.94	0.9	1.32	1	0.8	900,000

 C_{DoL} , duration of load and factor of safety C_{Gr} , grade C_{MC} , moisture content C_d , depth C_U , uncertainly

Table 6.20—Example of design value estimation for No. 2 White Ash 5 by 8

Species	Estimated member size	Estimated member grade	Purpose	Property	Clear wood mean (lb/in ²)	5th pctl. est.	Adjustment factors					Estimated design value (lb/in ²)
							C_{DoL}	C_{Gr}	C_{MC}	C_d	C_U	
White Ash	5 by 8	No. 2	B-S	F_b (lb/in ²)	9,570	7,055	2.3	0.45	1.57	0.857	0.7	1,500
				F_t (lb/in ²)	5,265	5,635	2.3	0.247	1.57	1	0.7	650
				F_v (lb/in ²)	1,350	1,040	2.3	0.5	1.41	1	0.7	225
				F_{cperp} (lb/in ²)	665	N/A	1.67	1	1.73	1	0.7	385
				$F_{c//}$ (lb/in ²)	3,990	2,805	2.1	0.50	1.86	1	0.7	975
				E (10 ⁶ lb/in ²)	1,435,000	N/A	0.94	0.9	1.21	1	0.7	1,200,000

 C_{DoL} , duration of load and factor of safety C_{Gr} , grade C_{MC} , moisture content C_d , depth C_U , uncertainty

Member Is Timber Size

Table 6.20 shows steps for estimating design values for member 9. Member 9 of Table 6.6 was identified as a 5- by 8-in. ash Beam and Stringer that had observable defects approximating a No. 2 grade timber. The average clear wood mean values for white ash from Table 6.1, which have been converted to pounds per square inch, are tabulated in column 1. Where applicable, these values are adjusted to a 5th percentile estimate in column 2. The hardwood adjustment factors from Table 6.17 and the estimated grade strength ratio from Table 6.18 are in columns 3 and 4, respectively. Moisture adjustment factors for white ash from green to dry are available in table X1.1 of ASTM D2555 (ASTM 2017) and are listed in column 5. Only the bending stress value is adjusted for size in column 6. Inspection notes indicate that only 70% of the member was accessible, so an uncertainty factor of 0.7 is applied to the estimate. Estimated design values for member 9 are given in far-right column.

Final Words of Advice for Design Value Estimation

This manual is meant to provide the reader with basic information about design value assignment to wooden members. It gives the inspector a basic method for estimating design value for members. The most accurate estimate of the in-place design value for a member would be obtained by employing a certified grader with extensive experience and knowledge of the various structural lumber grades. The field inspector, however, should be able to get a good sense of the quality of the members that are in the structure and determine if current members are in the “ballpark” of capacity needed.

An inspector will often not be able to see a large portion of a member, and judgment will be required based on the quality of wood in members that are visible in accessible areas. Confidence in the condition of members also plays a big role. Keep good records indicating the amount of the member that was accessible and your confidence of the estimated grade. Design values for the member may require an adjustment based on your confidence in your determined grade. The uncertainty factor that has been applied in the example estimations is one such adjustment.

Decisions made by the inspector on the condition of a structure, based on the inspector’s analysis of calculations or technical data, are ultimately the responsibility of the inspector. Understanding the basis of the information or data upon which they rely is the primary responsibility of the inspector. This manual is based on publicly available information. Some of that information comes from grading rules published by various trade associations or grades identified within the *National Design Specification for Wood Construction*. The Federal Highway Administration and the USDA Forest Service, although providing financial and administrative support, are not responsible for the content or use of the information by individuals. Be aware that changes in grading rules occasionally take place, and the inspector is responsible to confirm what the current rules are.

Acknowledgment

We acknowledge and thank David Kretschmann for his contribution to this chapter in the Second Edition.

Must-Have References

There are three must-have documents for someone trying to estimate a design value. Be sure to obtain the most current editions.

- The National Design Specification (NDS) Supplement *Design Values for Wood Construction*, which lists all currently approved design values for visually graded lumber and timber
- ASTM D2555 *Standard Practice for Establishing Wood Strength Values*
- ASTM D245 *Standard Practice for Establishing Structural Grades and Related Allowable Properties for Visually Graded Lumber*

The NDS Supplement can be obtained from the American Wood Council, 50 Catocin Circle SE, Suite 201, Leesburg, VA 20176 (www.awc.org). The ASTM standards can be obtained from ASTM International, 100 Barr Harbor Drive, P.O. Box C700, West Conshohocken, PA 19428–2959 (www.ASTM.org).

Literature Cited

- Anthony, R.W.; Dugan, K.D.; Anthony, D.J. 2009. A grading protocol for structural lumber and timber in historic structures. *APT Bulletin*. 40(2): 3–9.
- ASTM. 2017. ASTM D2555–17a. Standard methods for establishing clear wood strength values. Annual book of standards, Vol. 04.10. West Conshohocken, PA: American Society for Testing and Materials.
- ASTM. 2022. ASTM D245–22. Standard methods for establishing structural grades for visually graded lumber. Annual book of standards, Vol. 04.10. West Conshohocken, PA: American Society for Testing and Materials.
- AWC. 2024. National design specification (NDS) supplement: design values for wood construction 2024 edition. Leesburg, VA: American Wood Council.
- Bendtsen, B.A.; Galligan, W.L. 1978. Deriving allowable properties of lumber (A practical guide for interpretation of ASTM standards). General Technical Report FPL–GTR–20. Madison WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 31 p.
- DOC. [Current edition]. American softwood lumber standard. Voluntary product standard PS–20. Washington, D.C.: U.S. Department of Commerce.
- Green, D.W.; Evans, J.W. 2001. Evolution of standardized procedures for adjusting lumber properties for change in moisture content. General Technical Report FPL–GTR–127. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. <https://doi.org/10.2737/FPL-GTR-127>
- Falk, R.H.; Maul, D.G.; Cramer, S.M.; Evans, J.; Herian, V. 2008. Engineering properties of Douglas-fir lumber reclaimed from deconstructed buildings. Research Paper FPL–RP–650. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 47 p. <https://doi.org/10.2737/FPL-RP-650>
- FPL. 2021. Wood handbook—wood as an engineering material. General Technical Report FPL–GTR–282. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 543 p.
- Gonzalez, J.M.; Morrell, J.J. 2012. Effects of environmental factors on decay rates of selected white- and brown-rot fungi. *Wood and Fiber Science*. 44(4): 343–356.
- Ivory, E.P.; White, D.G.; Upson, A.T. 1923. Standard grading specifications for yard lumber. Circular 296. Washington, DC: U.S. Department of Agriculture. 75 p.
- Lantz, S.F.; Falk, R.H. 1997. Feasibility of recycling timber from military industrial buildings. In: The use of recycled wood and paper in building applications. Proceedings 7286. Madison, WI: Forest Products Society: 41–48.
- Loferski, J.R.; Dolan, J.D.; Lang E. 1996. Determining mechanical properties by nondestructive evaluation and testing methods in wood buildings. In: Kelley, S.J., ed. Standards for preservation and rehabilitation. West Conshohocken, PA.: American Society for Testing and Materials: 175–185. <https://doi.org/10.1520/STP15435S>
- Newlin, J.A.; Johnson, R.P.S. 1923. Basic grading rules and working stresses for structural timbers. Circular 295. Washington, DC: U.S. Department of Agriculture.
- Smith, L.W.; Wood, L.W. 1964. History of yard lumber size standards. Madison, WI.: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.
- SPIB. 2021a. SPIB grader’s pocket guide for 2” dimension. Pensacola, FL: Southern Pine Inspection Bureau.
- SPIB. 2021b. SPIB grader’s pocket guide for timbers. Pensacola, FL: Southern Pine Inspection Bureau.
- Wiedenhoef, A.C.; Kretschmann, D.E. 2014. Species identification and design value estimation of wooden members in covered bridges. General Technical Report FPL–GTR–228. U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 94 p. <https://doi.org/10.2737/FPL-GTR-228>
- Wood, L.W. 1954. Structural values in old lumber. *Southern Lumberman*. No. 189, Dec. 15, part 2.
- WWPA. 2021. Western lumber grading rules. Portland, OR: Western Wood Products Association.

Estimating Residual Strength and Stiffness

Rubin Shmulsky
Robert J. Ross

Balancing the safety, reliability, and utility value of wood products in service often requires periodic evaluation. In some cases, inspections are required. Bridges, for example, have required inspections on the order of every 1 to 4 years. Utility pole inspections are generally performed at intervals of 8 to 10 years. Inspection frequency varies and is based on several factors. These may include, but are not limited to, safety and risk, anticipated maximum service life, product value, and replacement. In some cases, inspection criteria are well defined. In other cases, criteria may not exist, and thus the rigor of the inspection and assessment rests with the competence of the inspection.

This chapter focuses on techniques to estimate residual service life. The principles and techniques may be applied to a variety of products, members, assemblies, and structures. Similarly, the notion of reclaiming and reusing wood as structural components requires diligent assessment. Factors such as application and use, load history, species, grade, redundancy, decay and deterioration, insect damage, missing wood, splits and cracks, deflection, and microscopy all provide information and may help guide condition assessment. Finally, the importance of record keeping is discussed.

Application and Use

One of the first, and perhaps most obvious, pieces of information one gathers during a condition assessment inspection is determining the intended use of the member, assembly, or structure. Salt or other chemical storage sheds can create environments that are more prone to fastener corrosion or wood pulping. Pressure-treated marine pilings can experience salt-based pulping over time. Similarly, wood-framed natatoria with high humidity and the potential presence of chlorine can develop fastener corrosion over time. Roof and plumbing leaks in buildings are classic means by which decay and insects can deteriorate wood. When conditions are warm and humid, deterioration can occur quickly.

Along with application and usage information goes geographic location. Various geographies have different factors that can influence, often negatively, the performance of wood. High levels of wind are common across the

midwest United States. Hurricane-type loading, though uncommon, is generally associated with coastal areas. Decay and termites occur everywhere but are most prominent in warmer and wetter locales. Snow loads are typically, but not always, associated with colder areas.

When attempting to assess residual strength, stiffness, or other performance criteria, knowing how the member or structure is used and where it is located are important.

Load History

Load history is important because wood performance varies depending on load magnitude and duration. The nature of wood design values are intentionally conservative. This conservatism helps wood structures perform very well over time. When assessing condition, one needs to determine to the extent possible

- the magnitude and placements of the loads at issue,
- the duration of the loads,
- temporary overloads (wind, impact, cranes and other heavy equipment), and
- long-term overloads, such as conversion of storage space to living space.

The notion and business of reclaiming wood—deconstructing existing buildings and reusing the wood materials in newly constructed assemblies and structures—is admirable. In many cases (for example, for slow-grown, large-section timbers), accessing these highly desirable (durable, strong, stiff, and esthetically pleasing) materials is difficult. That said, when reclaimed lumber is used for structural purposes, evaluation of the load history of individual members, subassemblies, or structures in their entirety is an important feature of condition assessment. For cases in which wood members or structures are loaded at their design stress for more than 10 years, a design value reduction of 10% is advised; Senalik and Farber (2021b) includes a load duration factor of 0.9. This factor serves to derate the allowable design stresses to account for long or “indefinite” periods at design stress. Load duration considerations can be particularly important for historic structures.

Species

One of the most basic factors in residual strength and stiffness assessment is species. In-service condition assessments begin with the notion that a specimen, member, subassembly, or structure originated with basic minimum performance values. These values may range from qualitative to quantitative in nature. Then over time, as a result of various factors, the expected performance may change. For example, a water leak over time may cause decay. In that case, performance is necessarily reduced; whether the assessment is qualitative or quantitative, eventually someone needs to determine when it is appropriate to repair or replace a deteriorated member, subassembly, or structure. A necessary piece of information regarding how strong and stiff a member or structure may be is the species. In North America, there is a three-fold difference between the basic dry clear wood bending strength of the weakest species (for example, balsam poplar and several cedars) and that of the strongest species (for example, black locust or several hickories) (Senalik and Farber 2021a, table 5–3 a and b). Similarly, the difference in dry stiffness, as measured by modulus of elasticity (MOE), between the least stiff (for example, several cedars) and the most stiff (for example, some of the oaks and hickories) is on the order of 2.5- to 3-fold. As such, species determination (wood identification) is a critical piece of information regarding structural assessment. In some cases, particularly in more modern structures, lumber may be grade stamped and the stamp contains species information. In many cases, however, particularly in buildings constructed before the 1960s, grade stamps will be lacking and species must be determined by the inspector or a wood identification specialist.

Grade

Conceptually, basic lumber grading begins with the notion that relatively small pieces of straight grained clear wood have the best possible strength and stiffness properties. Then, a series of real and existing factors can be applied that reduce these optimal properties. These factors may include knots, splits, wane, size or depth, slope of grain, and others. Structural lumber from around 1970 or thereafter contains visible and indelible grade stamps which expedite an assessment of grade. Structural glued-laminated timber, laminated veneer lumber, plywood, and oriented strandboard similarly have been structurally stamped with indelible grade markings for decades. Wood utility poles are branded. These stamps and brands typically indicate species, manufacturer, and information about structural capacity. They may also indicate size, moisture content, grading agency, and other information. For members and structures built prior to universal grade stamping, one must use their best informed judgement regarding grade. In some cases, certified graders can assess timber or lumber based on what they can see. However, in many cases, not all faces of each piece, or elements, in a structure are visible. In that case,

one must use available information, focusing their assessment on the areas or regions of each member or structure that are most critical. These include but is not limited to areas or zones of highest stress or bending moment, fasteners and connections, zones of ground contact or high moisture, and structural members that seem most critical, carry the most weight, have the highest stresses, have the least redundancy, or are critical for other reasons. From there, with knowledge of how various wood characteristics (such as knots, splits, holes, slope of grain) influence strength and stiffness and with an understanding of contemporary grading rules, one can often make educated assessments regarding residual allowable properties of sawn lumber.

Also, some products have quality standards to which they are produced. For example, wood utility poles are produced under ANSI standard O5.1 (AWPA 2017). This has been the case for many decades. As such, during the course of an inspection or evaluation, one can often compare the observed measurements (such as groundline diameter, tip diameter, crook, and knot sizes and locations) of an existing pole to that of the specification.

Redundancy

Solid structural lumber lends itself to redundant or repetitive member construction. In this manner, a nontrivial amount of load sharing occurs among well fastened wall studs, floor joists, and roof rafters, for example. Bolt-laminated mat timbers and three-ply mats have repetitive or redundant members when they are well manufactured and maintained because each has three or more members in close proximity acting together. In the course of condition assessment, member redundancy is a factor of interest. For example, if one floor joist among many has a decayed end, it can often be repaired and may cause minimal imminent risk. Studs, joists, rafters, light-frame trusses, and ceiling joists all develop some level of load sharing. In this manner, colloquially, the performance of one can be aided by its proximity to its neighbors.

Of particular importance are situations with a nonredundant member. In these cases, load sharing may be minimal or nonexistent. An example of this is utility poles. Treated wood utility poles often last 60 to 80 years and have minimal redundancy. Inspections are critically important to safely and reliably reaching these service life levels. Electric power consumers benefit greatly (through minimizing electric rates) when infrastructure equipment and components achieve these service life levels. Another example is scaffold planking. When properly used, handled, and inspected, scaffold planking can last many years.

Single (nonredundant) beams or timbers that carry redundant joists may require immediate shoring to avoid failure if they are found to have decay or other damage. Singular columns carrying timbers or beams, heavy timber trusses, or bents that may be repetitive but are spaced



Figure 7.1—Wood mat composed of three pressure-treated glued-laminated timbers with a broken middle member. This mat can be disassembled, repaired, and returned to service.

relatively far apart and therefore do not develop load sharing must be evaluated carefully. Smaller in section but similarly critical are railing and guard system components and joints, particularly in outdoor situations. In cases where railing and guard system components deteriorate or decline over time, inspection and remedial attention are critical because these components, connections, and systems provide fall protection. One must exercise conservative judgement when assessing the impact of decayed or damaged portions of members and structures particularly in nonredundant situations.

Industrial timber mats are similar to utility poles to the extent that both utilize large section members. Both incorporate minimally processed tree stems; poles are peeled and graded, whereas mat timbers are squared (slabbed) and then graded and assembled. Freshly manufactured and well-maintained timber mats develop load sharing because they have multiple members acting together. However, timber mats generally achieve service lives only on the order of 3 to 10 years. The extremely heavy loading, rugged handling, and environmentally aggressive conditions (often warm and damp conditions and direct soil contact) to which timber mats are exposed wear them out quickly. To maximize their utility value and service life, they must be inspected frequently, on the order of months or before and after each job. These considerations are particularly important when mats are used under cranes or other heavy lifting situations. In many cases, if a lone timber or member in a mat breaks, the mat can be disassembled and the broken or damaged members repaired

or replaced, thereby extending the service life. Figure 7.1 illustrates a mat, made from three pressure treated glued-laminated timbers, with the middle timber broken. This mat can potentially be disassembled and the broken middle timber replaced, with the mat then returning to service.

Decay and Deterioration

Because of its major importance, biological decay is mentioned in almost every discussion about condition assessments related to wood structural performance and longevity. Assessing sound and decay-free specimens and completely rotten or decayed specimens is relatively straightforward, but there is a broad spectrum between those two extremes. It can be time consuming to objectively determine the extent of decay and its impact on performance. When decay is present, the strength properties associated with decayed wood are not reliable and are negated. When wood is partially decayed, only the sound portion is considered for structural purposes. Care should be taken in attempting to assess which portions are sound and which are not. Decay is particularly influential at connections because a small volume of decayed wood at a critical connection can often negate the structural contribution of an entire wood member, subassembly, or structure. Additionally, the nature of stress on the member should be considered. For example, a small decayed portion of a sill between floor joists, which is not supporting any load, may be of little consequence to a subassembly or structure. However, that same size member with the same level of decay, if used as the tension chord in a truss, serves to negate the structural contribution of the entire truss. Figure 7.2 shows a fractured piece of laminated veneer lumber scaffold planking. Before failure in service, cursory observation by a laborer indicated that the plank was sound. However, a closer inspection after failure indicated the presence of fungal fruiting bodies in relatively close proximity to the fracture.

In the case of heavy timber bents or trusses, the presence of fungal fruiting bodies (indicating advanced decay) can negate the structural contribution of a significant portion of a building or other structure. Figure 7.3 illustrates a knife blade inserted into the decayed end of the tension chord of a heavy timber truss. The member's cross section is approximately 4 by 14 in. The knife blade (2.5 in. long) can be inserted fully into the end of the decayed member, so the member's contribution to the truss is negated. If the decay seems dormant, one must assess whether it could become reactivated and cause further damage under favorable conditions. Also of note are whether the damage was noted by previous inspection or assessment and, if so, what steps were taken to arrest and potentially repair the damage.

Insect Damage

Similar to decay, insect damage can range from relatively obvious to well concealed. In some cases, termites can undermine a house or other structure in its entirety without



Figure 7.2—Fractured piece of laminated veneer lumber scaffold planking. Before use, cursory observation suggested that the specimen was sound. However, examination after fracture noted multiple fungal fruiting bodies, indicating advanced decay, in relatively close proximity to the fracture. Ballpoint pen cap and hand indicate the size of fungal fruiting body and its proximity to the fracture, respectively.

detection. However, with routine inspections, damage is usually minimal and confined to a few members or a relatively small area of a structure. Though less prominent, beetles and carpenter ants can excavate extensive cavities within wood members. As in the case of decay, a condition assessment should consider if the insect damage is active and, if seemingly dormant, if it could become reactivated and cause further damage under favorable conditions. Also of note is whether the damage has been noted by previous inspection or assessment and, if so, what steps were taken to arrest and potentially repair the damage. As with decay, one must assess the extent of the damage within any given member and that member's contribution to the structure.

Missing Wood

In the course of service, wood may become decayed, consumed, eroded, burned, abraded, or otherwise removed. In these cases, the cross section of a piece or assembly becomes smaller. When attempting to assess residual strength and stiffness capacity of a member or assembly, one must consider the extent of the wood removal, its

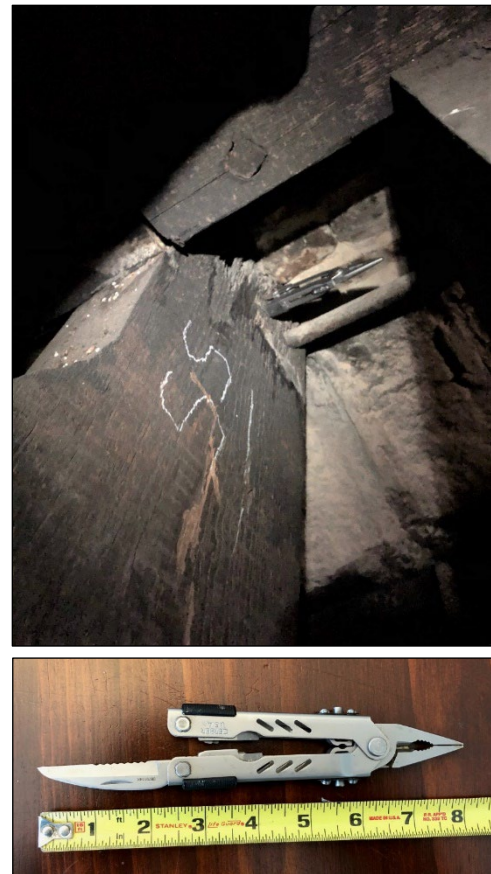


Figure 7.3—Upper frame is a knife blade inserted fully into the decayed end of the 4-by 14-in. tension chord of a heavy timber truss. Such decay necessarily negates the contribution of the member. Lower image shows the 2.5-in.-long blade.

location, and the nature of stress on the member, among other factors. In some cases, wood may be severely weathered, decayed, pulped, corroded, or otherwise changed, and although still technically “present,” its strength and stiffness values are negated. From an engineering perspective, in general and in many cases, short member compression and tension capacity can be estimated based on the percentage of wood that remains.

For example, if the 3.5- by 3.5-in. cross section (cross-sectional area of 12.3 in²) of a tension or short compression member becomes reduced because of a carpenter bee boring a 0.375-in.-diameter hole straight through its entirety, then the residual strength can often be considered as a percentage of the reduced cross section compared to the initial cross section. Given that the hole is 0.375 in. wide by 3.5 in. long, the cross-sectional area of missing wood is 1.31 in².

In this case, with an initial cross-section area of 12.3 in² and the cross-sectional area of the hole as 1.31 in², the final cross-section area is

$$12.3 \text{ in}^2 - 1.31 \text{ in}^2 = 10.9 \text{ in}^2$$

and the percentage of residual cross section is

$$(10.9 \text{ in}^2 / 12.3 \text{ in}^2) \times 100 = 89\%$$

Thus, typically the residual capacity of the tension or short compression member could be estimated as approximately 89% of its initial capacity.

In the case of bending members, one can estimate residual strength by comparing initial and final section moduli with respect to the axis about which they will be flexed. Similarly, one can estimate residual stiffness by comparing initial and final moments of inertia. Also, where applicable, such as in the case of wood utility poles, one can compare actual section properties to those in the appropriate reference standard, such as ANSI O5.1 (AWPA 2017).

Figures 7.4 and 7.5 show strength and stiffness loss resulting from reduction in cross section for round poles. Over long periods of time, often on the order of decades, poles or pilings may lose their section properties, particularly at groundline or the intertidal line, due to deterioration, weathering, or abrasion from the outside, thereby leaving a solid round core of smaller diameter than initially. Similarly poles (and in many cases trees) may develop heart rot, in which case the core of the pole becomes deteriorated while the outer shell remains sound. In that case, the section becomes ring (or doughnut) shaped. Mats often become abraded at their leading edges through use and handling. They may also become thinner over time, particularly due to abrasion by steel grousers on crawler tractors, pipelayers, and other heavy equipment. When mats become thinner, their strength decreases as a square function of thickness and their ability to resist deflection decreases as a cubic function of thickness. Figures 7.4 to 7.9 illustrate the strength and stiffness loss of these scenarios: solid round section decreasing in diameter (as a pole or piling may after decades in service), solid round section becoming hollow in the middle (as some poles or live trees may develop heart rot in their core), and flat rectangular section becoming thinner (as can happen to timber mats over time in service). As an example, Figure 7.10 shows a knife blade driven into the shell of a wood utility pole at the groundline after removal from service. The diameter of the pole at the groundline is 12.4 in. The knife penetrated to an approximate maximum depth of 3/8 in. So the effective diameter at the groundline was 11.7 in. ($12.4 \text{ in.} - (2 \times 3/8 \text{ in.})$), thus at the time of measurement, the diameter was 94% ($(11.7 \text{ in.} / 12.4 \text{ in.}) \times 100$). Thus, per Figures 7.4 and 7.5, as compared to initial, its residual strength and stiffness appear to be 83% to 85% and 78% to 80%, respectively.

Splits and Cracks

Splits, checks, cracks, shake, shelling, and other instances where woody fiber separates from itself vary with respect to condition assessment. Drying checks tend to be relatively shallow and inconsequential but can result in long deep fissures in heavy timber. These can influence the shear strength in beams. Shelling or shake occurs in some species

(such as pecan, hickory, and hemlock) more than others. Depending on the individual member being assessed, shelling or shake may or may not be consequential. Splits or cracks that appear to be the result of overloading are perhaps most important. These can appear along the grain, across the grain, or in combination. Such fiber breakage may require shoring or replacement. It is important to evaluate and assess splits and cracks conservatively because it may be challenging to distinguish those that are structurally inconsequential from those that compromise structural integrity.

Deflection

Deflection can provide important information about both the stress in a given member and its condition. With practice and experience, one can often qualitatively assess stress in a beam. Several core principles must be kept in mind when considering deflection:

- Deflection can be used qualitatively (for cursory estimates) or quantitatively.
- Qualitative measures of deflection are easier with longer beams (that is, beams with greater span-to-depth ratios) because the deflection is greater and more readily apparent.
- Time (rheology) can affect deflection, particularly at relatively high load levels.
- Over long periods, high deflection levels associated with moisture cycling (sometimes termed mechanosorptive creep (Lu and Erickson 1996)) can lead to failure at lower than anticipated stress levels.
- Higher moisture content (wetter) specimens and members have lower MOE values than dry and thus exhibit higher deflections than comparable drier members.
- Deflection is a cubic function with respect to beam length. A beam that is twice as long will exhibit eight times more (2^3) deflection.
- Basic engineering principles can be used to measure in-field or in-service deflection in bridges, mats, or other beam- or flexure-type scenarios in which boundary conditions, load magnitude and placement, and member section properties can be defined. As MOE generally correlates with modulus of rupture (MOR), this information can be used to estimate strength or potential changes in strength over time.
- Where available, microscopy can be used to investigate the presence and extent of damage to the cellular structure.

Figure 7.11 shows a sound utility pole being tested according to ASTM D1036 (ASTM 2018). Wood utility poles have relatively high span-to-depth ratios, often on the order of 40, depending on how one estimates beam depth. In this figure, the pole is approximately 40 ft long, the “groundline” is set at 6 ft from the butt, and the load is affixed 2 ft from the tip.

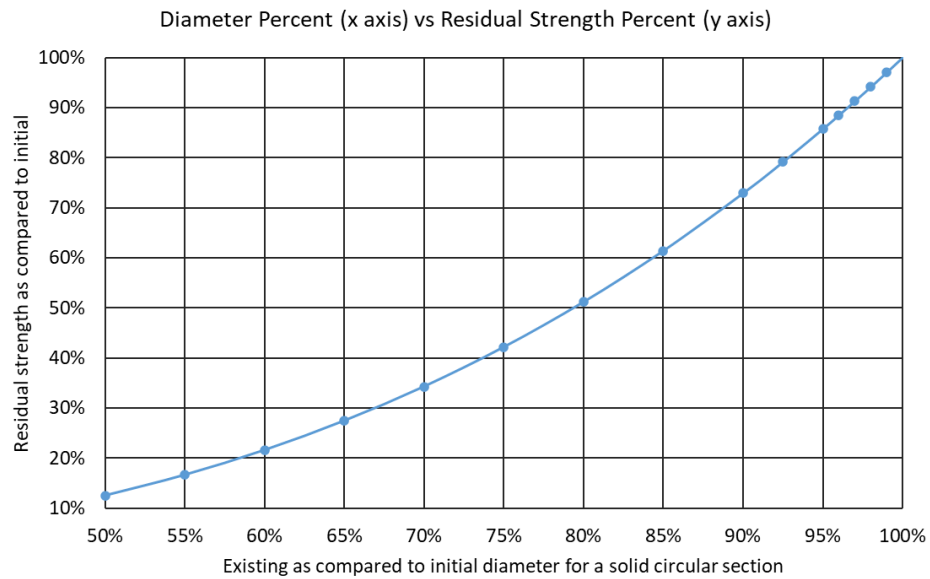


Figure 7.4—Reduction in strength of a round solid section due to reduction in overall outside circumference/diameter, using formula section modulus $Z = \pi d^3/32$.

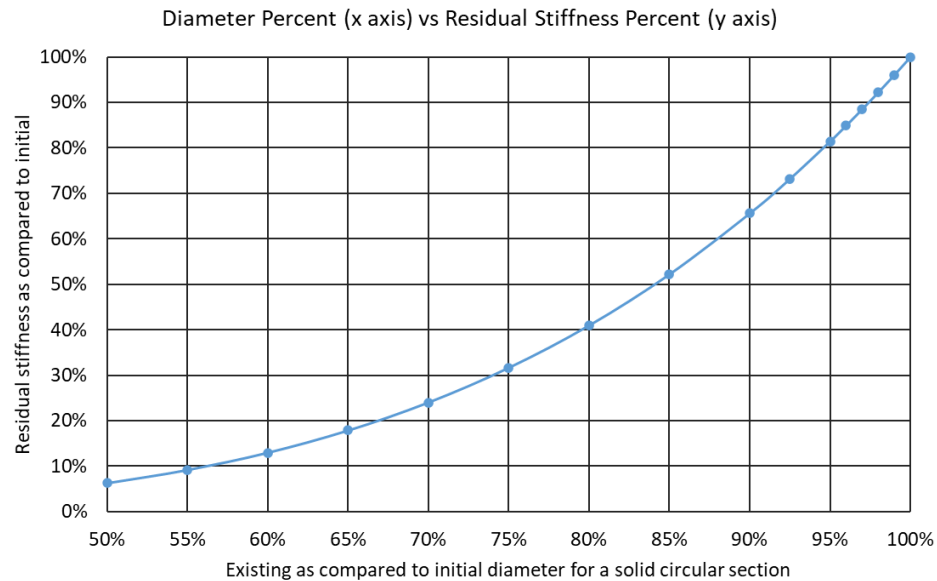


Figure 7.5—Reduction in stiffness of a round solid section due to reduction in overall outside circumference/diameter, using formula moment of inertia $I = 0.25\pi r^4$.

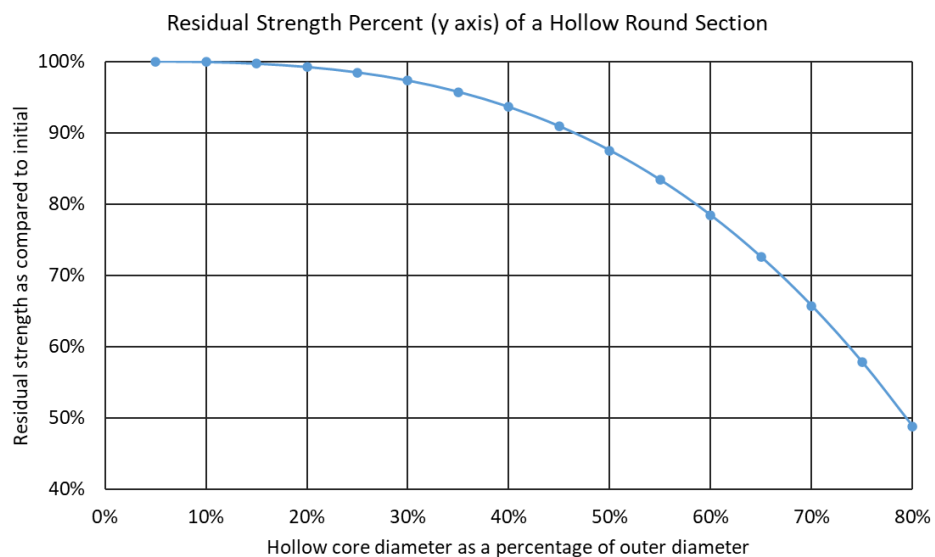


Figure 7.6—Reduction in strength of a round section due to hollowing out of the core, such as due to heart rot. This section can be considered a ring. Strength is proportional to the section modulus of the outer diameter minus the section modulus of the inner diameter.

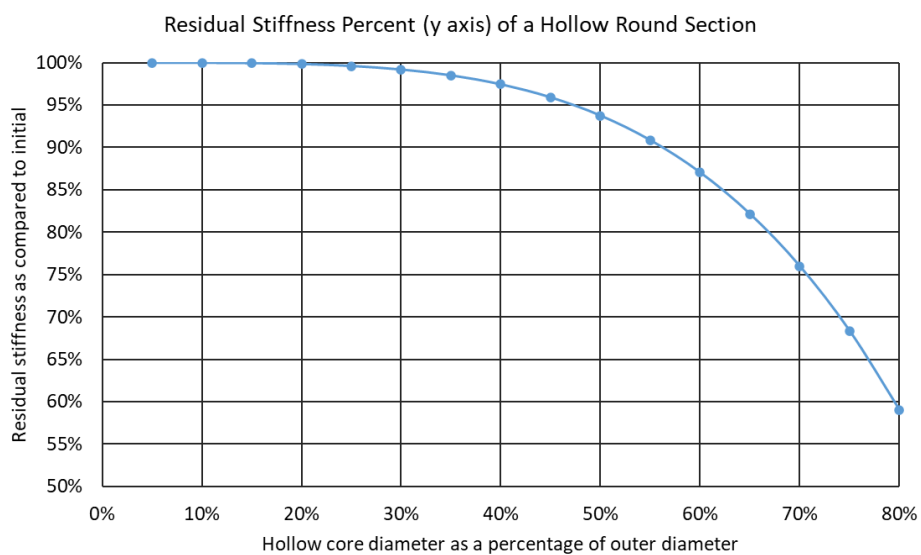


Figure 7.7—Reduction in stiffness of a round section due to hollowing out of the core, such as due to heart rot. This section can be considered a ring. Stiffness is proportional to the moment of inertia of the the outer diameter minus the moment of inertia of the inner diameter.

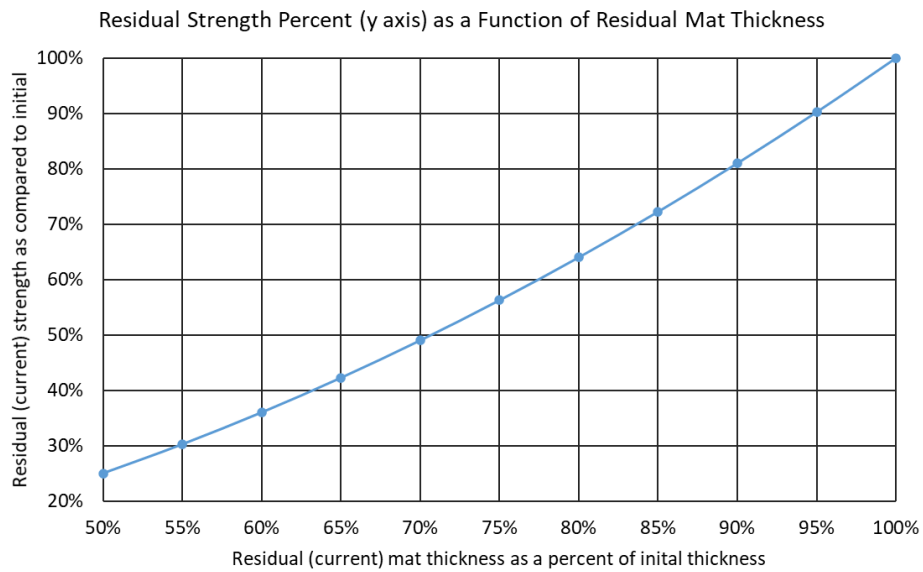


Figure 7.8—Reduction in strength of a flat section, such as a timber mat, due to decrease in overall thickness. This thickness reduction often occurs through routine use and handling. Strength is proportional to section modulus and section modulus is proportional to thickness squared: $Z = bh^2/6$.

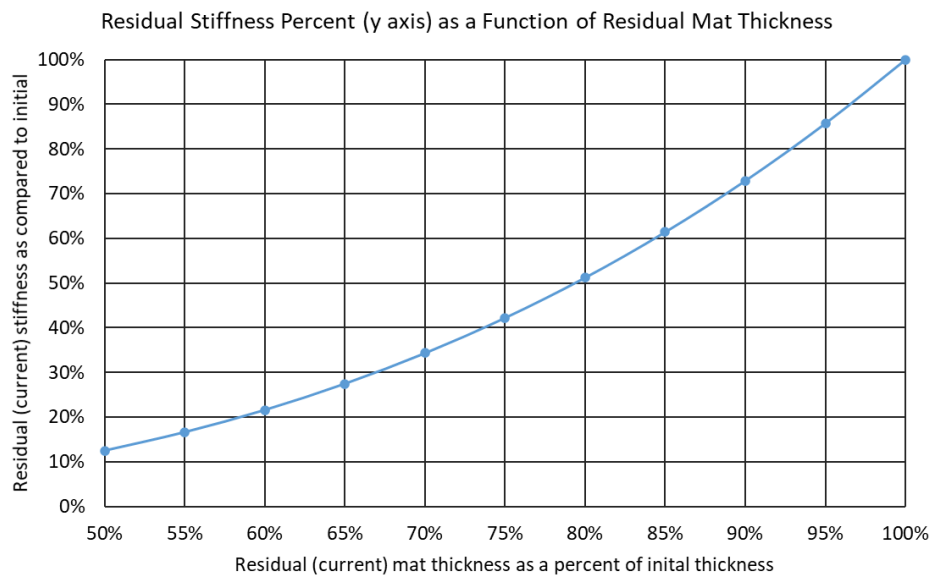


Figure 7.9—Reduction in stiffness, ability to resist deflection and deformation, of a flat section, such as a timber mat, due to decreases in overall thickness over time. This thickness reduction often occurs through routine use and handling. Stiffness is proportional to moment of inertia and moment of inertia is proportional to thickness cubed: $I = bh^3/12$.



Figure 7.10—The knife blade is driven approximately 3/8 in. into the shell of a utility pole.



Figure 7.11—A class 4, 40-ft Southern Pine utility pole during ASTM D1036-12 (ASTM 2018) flexural test. Per ANSI O5.1, Annex B (AWPA 2017), the minimum required tip load is 2,400 pounds, applied 2-ft from the end.

Thus the length of the lever arm is approximately 32 ft. In the figure, shortly before fracture, the deflection at the load point is on the order of 8 ft.

Figure 7.12 shows a new, freshly manufactured oak three-ply bolt-laminated timber mat during flexural testing. This type of bolt-laminated construction develops low stiffness and high deflection compared with adhesive-bonded cross-laminated timber. This figure illustrates that in order to use deflection as a qualitative measure of condition, one must have an appreciation of how baseline deflection of new, freshly manufactured material appears under load. The ability of mechanically fastened (bolted, nailed, or some combination of these) three-ply mats to deflect often



Figure 7.12—Freshly manufactured green oak three-ply bolt-laminated mat during flexural testing. The span to depth ratio of the composite section is approximately 28:1.

prolongs their service life because they can flex and to some degree conform to uneven terrain while in use.

Microscopy

Microscopy can be used to investigate bacterial and fungal activity. Of particular interest are determining (1) if any damage is present, (2) if it is restricted to parenchyma cells, (3) if it is through only pit membranes, (4) if boreholes are present, and (5) if the cell walls are eroded. If this technique is available, it can be very valuable in confirming or assessing the basic quality of the wood. Figures 7.13 and 7.14 illustrate 200× micrographs from plywood plugs that were installed in a grade-level foundation beam as part of a foundation. The two plugs were approximately 4 ft apart). Light microscopy was used to evaluate damage to the grade beam at the cellular level after years of service.

Record Keeping

Keeping records is highly beneficial in condition assessment, particularly when members, assemblies, or structures are in service for decades or centuries, as is often the case for utility poles and historic structures, respectively. Several types of information can help with a condition assessment:

- When the member or structure was put into service
- Codes and standards that were in place at that time
- Blueprints for the structure and any subsequent modifications
- Records from and periodic inspections
- Loading or overloading history
- Changes in intended use or loading over time
- Record of any repairs made during the service life
- Maintenance history

Inspection records are required in some cases but not in others. In all cases, they can be helpful. Make a practice of requesting access to records because the information can be important, particularly if some type of past damage, and possibly repair, has been documented.

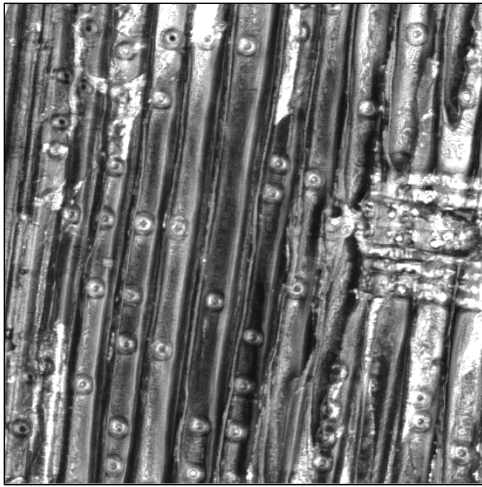


Figure 7.13—Sound, nondecayed wood cells from a plug taken as part of an in-service assessment of a foundation beam. Magnification is 200x.

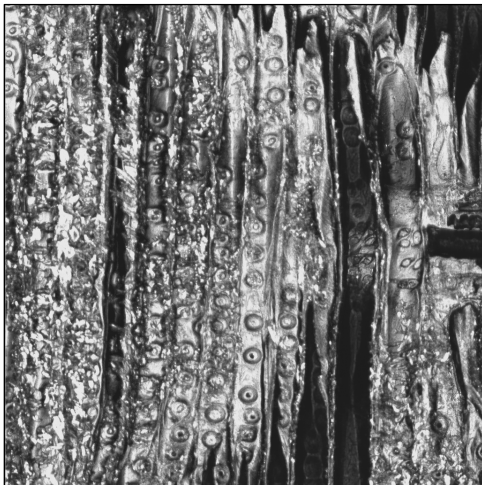


Figure 7.14—Decayed and damaged wood cells in wood plug taken as part of an in-service assessment of a foundation beam. Magnification is 200x.

Literature Cited

ASTM. 2018. ASTM D1036-12. Standard test methods of static tests of wood poles. West Conshohocken, PA: ASTM International.

AWPA. 2017. ANSI O5.1-2017. Wood poles: specifications and dimensions. American National Standard for Wood Utility Products. Birmingham, AL: American Wood Protection Association.

Lu, W.; Erickson, R.W. 1994. Mechano-sorptive behavior of solid wood stressed in compression perpendicular to the grain. *Forest Products Journal*. 46(4): 63–68.

Senalik, C.A.; Farber, B. 2021a. Chapter 5: Mechanical properties of wood. In: *Wood handbook: wood as an engineering material*. Ross, R.J., ed. General Technical Report FPL–GTR–282. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.

Senalik, C.A.; Farber, B. 2021b. Chapter 7: Stress grades and design properties for lumber, round timber, and ties. In: *Wood handbook: wood as an engineering material*. Ross, R.J., ed. General Technical Report FPL–GTR–282. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory.

Condition Assessment Report

Robert J. Ross

This chapter presents the complete condition assessment report for the Quincy Mine Blacksmith Shop in Hancock, Michigan. The assessment was conducted by Robert J. Ross, John R. Erickson, and Xiping Wang, USDA Forest Service, Forest Products Laboratory, Madison Wisconsin; and John W. Forsman, Michigan Technological University, Houghton, Michigan. The report was completed September 28, 2001. It was published in 2002 (Wang and others 2002).

Condition Assessment of Timbers from Quincy Mine Blacksmith Shop—Scanning Timbers for Deterioration

Summary

Fifteen 12- by 12-in. white pine timbers removed from the Quincy Mine Blacksmith Shop were nondestructively evaluated at the USDA Forest Service, Forest Products Laboratory, through intensive stress wave scanning. The timbers were part of the original roof truss structure in the Blacksmith Shop. Scan results indicated that some timbers or some sections of the timbers had severely deteriorated and lost structural integrity. It was also found that most of the timbers still contained a substantial amount of solid wood, and some timbers were only slightly decayed or mechanically damaged. Further data analysis indicated that 61% of the total materials could be potentially recovered from these timbers and used in the reconstruction project.

Background

The Quincy Mining Company's Drill and Blacksmith Shop, located in the Keweenaw National Historical Park, near Calumet, Michigan, was constructed in 1900 by the Quincy Mining Company. Of great interest is the preservation and use of the remaining roof trusses and floor joists. The 12- by 12-in. white pine roof truss timbers had been exposed to weather for several years. These structural members, manufactured from old-growth timber, are a tremendous resource that should be appropriately used in the renovation of the Drill and Blacksmith Shop.

Condition assessment of the heavy timbers from the Blacksmith Shop was an important first step in the



Figure 8.1—Fifteen 12- by 12-in. white pine timbers removed from the Quincy Mine Blacksmith Shop.

restoration of this structure. During an early on-site assessment, it was found that a substantial amount of timbers contained solid wood in spite of visually observed deterioration of parts of the members. The intent of this assessment was to follow up on the promising cursory assessment results and to further nondestructively evaluate the selected white pine timbers in the laboratory.

Objectives

The objectives of this assessment were to

- detect the location and severity of deterioration in 12- by 12-in. white pine timbers removed from the Quincy Mine Blacksmith Shop through intensive scanning using a stress wave transmission technique and
- determine how much of the original structural wood from these timbers could be potentially recovered and used in the reconstruction project.

Materials and Method

Fifteen 12- by 12-in. white pine timbers removed from the Quincy Mine Blacksmith Shop were transported to the USDA Forest Products Laboratory (FPL) in Madison, Wisconsin, on August 2, 2001 (Fig. 8.1). The timber specimens ranged from 25.5 to 50 ft in length; 13 of the specimens were about 50 ft long (originally used as tension members in the roof trusses) and 3 of the specimens were from 26 to 34 ft long (probably used as pitched chord or web materials). These timbers were part of the original roof structures and had been exposed to weather for several

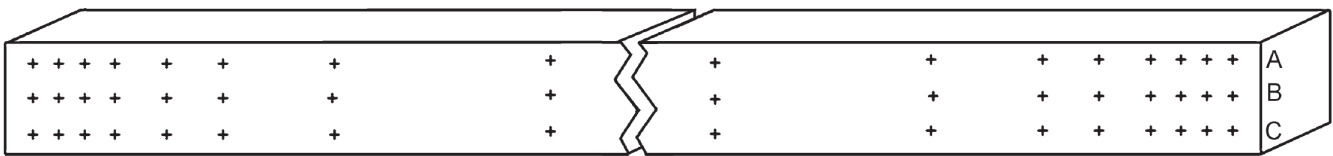


Figure 8.2—Scanning diagram for nondestructive evaluation of 12- by 12-in. white pine timbers.

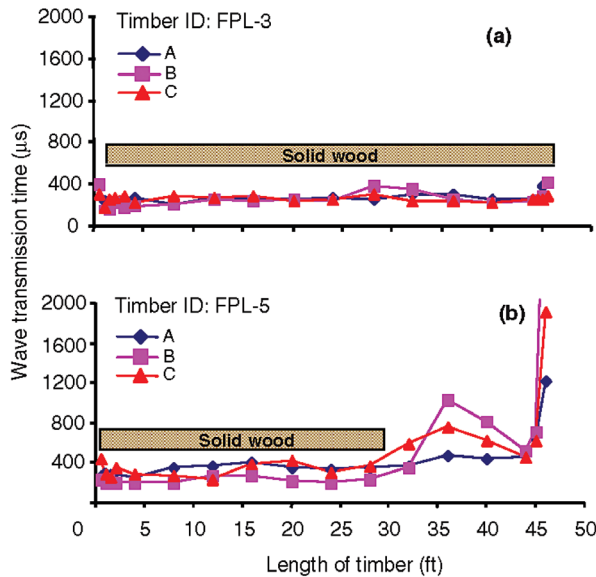


Figure 8.3.—Typical scan results from 12- by 12-in. white pine timbers.

years. Surface decay, splits, mechanical damage, and notches were the major defects observed (Appendix).

Figure 8.2 shows a typical scanning diagram used to conduct stress wave transmission tests. The timbers were supported on two beams. Each timber was stress wave scanned along three lines (A, B, and C) on the side surfaces, with A, the upper line, B, the middle line, and C, the lower line, through the height of each timber. Because the ends of the timber were usually considered to be the areas having a high risk of decay, stress wave transmission tests were more intensively performed at ends than other parts of the timber. The intervals between the two scanning points in the longitudinal direction changed from 6 in. beginning at the end of the timber to 1 ft, 2 ft, and 4 ft as the scanning position approached the middle part of the timber.

A commercially available stress wave timing unit was used to measure wave transmission time, perpendicular to grain, at a series of points as described above. The test set-up is described in detail in FPL–GTR–119 (FPL 2000). Three stress wave readings were taken at each scanning point, and the average wave transmission time for each point was used as an indicator of the soundness of wood in that area.

Results

Results obtained from stress wave scans are shown in two graphs in Figure 8.3. The stress wave transmission time measured, perpendicular to grain, was in microseconds.

Given the same width of 12 in. for all timbers, the stress wave data expressed in y-axis can also be deemed as values in a unit of microsecond per foot ($\mu\text{s}/\text{ft}$). Therefore, the scan results for all 15 timbers can be conveniently compared with the baseline data given in previous publications (Ross and Pellerin 1994; Ross et al. 1998, 2001; FPL 2000; Clausen et al. 2001).

Stress wave transmission time may vary from species to species, but it is mainly controlled by the soundness of wood in terms of deterioration detection. For most species, stress wave transmission time perpendicular to grain ranges from 180 to 400 $\mu\text{s}/\text{ft}$ for solid wood (FPL 2000). This baseline range was used as an evaluation standard to assess scan results obtained from the 15 12- by 12-in. white pine timbers.

As shown in wave transmission-time/length-of-timber graphs, these white pine timbers are in various conditions, from solid, slightly to severely deteriorated, to almost fully deteriorated. As previously mentioned, the deterioration was mainly caused by decay (surface and internal), splits, and mechanical damage. From scans shown in Figure 8.3, it is possible to distinguish whether deterioration occurs in surface areas or inside of timber as stress wave transmission times obtained from three scan lines (A, B, and C) are plotted on the same graph for each timber.

The solid wood in each timber was determined by comparing scan results with the baseline data of stress wave transmission times for solid wood. The approximate length of solid wood for each timber that could have potential structural uses was also determined and indicated below each scan graph. A summary of potential recovery of the solid wood from all tested white pine timbers is detailed in Table 8.1.

From the scans and Table 8.1, it is evident that a substantial amount of solid wood could be recovered from these timbers, except for one short timber, FPL-12, which was almost fully deteriorated. The potential recovery rate could be as low as 16% to 17% due to severe deterioration found in timbers (such as FPL-4 and FPL-8); it could also be as high as over 90% (such as timbers FPL-3 and FPL-10). Overall, an average of 61% of total materials (not including FPL-12) could be potentially recovered from these white pine timbers and used in the reconstruction project.

Conclusions and Recommendations

Fifteen 12- by 12-in. white pine timbers removed from the Quincy Mine Blacksmith Shop were nondestructively evaluated through intensive stress wave scanning. The scan

Table 8.1—Potential recovery of solid wood from 12- by 12-inch (30- by 30-cm) white pine timbers

Timber ID	Length of timber (ft) ^a	Length of solid material (ft) ^a	Potential recovery (%)	Major defects of timber
FPL-1	50	39	78	Decay on end, notch
FPL-2	48.4	28	58	Split of surface
FPL-3	45.8	45	98	—
FPL-4	50	8	16	Severe decay, split, notch
FPL-5	47.8	28	59	Decay on end, surface split, notch
FPL-6	50	42	84	Decay on end, surface split, notch
FPL-7	50	26	52	Decay, notch
FPL-8	46	8	17	Severe surface decay
FPL-9	50	42	84	Surface split, notch
FPL-10	48.3	44.5	92	Surface decay on one end
FPL-11	50	24	48	Severe decay, notch
FPL-12	25.5	0	0	Severe decay, split, notch
FPL-13	33.8	22	65	Big split on ends
FPL-14	32	16	50	Decay and split on ends, notch
FPL-15	50	24	48	Severe decay, notch

^a 1 ft = 0.3 m.

results indicated that some timbers or parts of timbers had seriously deteriorated and lost structural integrity. It was also found that most of the timbers still contain a substantial amount of solid wood, and some timbers were only slightly decayed or mechanically damaged on the ends. Further data analysis indicated that 61% of the total materials could be potentially recovered from these timbers and used or displaced in the reconstruction project.

Based on preliminary results obtained from the 15 white pine timbers, the following was recommended:

- Complete stress wave scanning tests on the remaining white pine timbers, including 12- by 12-in. roof truss timbers and 3- by 14-in. floor joists. Use the same procedure as employed in this assessment to determine the location and severity of deterioration that might occur in the rest of the structural members.
- Cut off deteriorated sections from the timbers and obtain solid material based on scan results.
- Mechanically proof load all solid wood sections to supply engineering design values for their reuse in the reconstruction project.

Literature Cited

- Clausen, C.A.; Ross, R.J.; Forsman, J.W.; Balachowski, J.D. 2001. Condition assessment of Quincy Mine Blacksmith Shop in Keweenaw National Historical Park. Research Note FPL–RN–0281. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 4 p.
- FPL. 2000. Stress wave timing nondestructive evaluation tools for inspecting historic structures. General Technical Report FPL–GTR–119. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 15 p.
- Ross, R.J.; Pellerin, R.F. 1994. Nondestructive testing for assessing wood members in structures: A review. General Technical Report FPL–GTR–70 (Rev.). Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 40 p. <https://doi.org/10.2737/fpl-gtr-70>
- Ross, R.J.; Pellerin, R.F.; Forsman, J.W.; Erickson, J.R.; Lavinder, J.A. 2001. Relationship between stress wave transmission time and compression properties of timbers removed from service. Research Note FPL–RN–280. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 4 p.
- Ross, R.J.; Soltis, L.A.; Otton, P. 1998. Assessing wood members in the USS Constitution using non-destructive evaluation methods. APT Bulletin (The Journal of Preservation Technology). 29(2): 21–25. <https://doi.org/10.2307/1504514>
- Wang, W.; Ross, R.J.; Erickson, J.R.; Forsman, J.W.; Jukuri, G.D.; Yarbrough, E.B. 2002. Timber assessment at Quincy Mine Blacksmith Shop, Keweenaw National Historical Park. APT Bulletin (The Journal of Preservation Technology). 33(2–3): 70–73. <https://doi.org/10.2307/1504759>

Appendix—Major Defects Observed in 12- by 12-in. White Pine Timbers



Surface decay



Severe decay damage



End decay



End decay



Large, deep check



Surface decay and multiple cracks



Mechanical damage

Summaries from Actual Inspections

Robert J. Ross

This chapter presents summaries of inspections from a wide range of structures, from a sports stadium to a mummy coffin. Included are a brief overview of the structure, its location, a brief history of the structure, and photographs. Note that these were selected to emphasize the broad range of structures that can be inspected using the techniques presented in earlier chapters. Most include a photo of the structure, visual observations, and equipment in use. No attempt is made to discuss repairs made or other actions taken based on inspection results. Citations for papers prepared based on the inspections are included, if available, for further details.

Washington State University Football Stadium

Structure: Martin Stadium


Location: Pullman, Washington, USA

Special Consideration: Arid environment

Brief history of structure:

- Estimated age: 50 years at time of inspection
- Inspection date: 1982
- Construction details: Heavy timber, creosote-treated Douglas-fir

Washington State University's football stadium was inspected using visual, coring, and stress wave timing techniques. This stadium was originally constructed in the 1930s; the north and south grandstands were replaced after a fire in the 1960s. In the early 1980s, the structural integrity of the horseshoe section that joined the north and south grandstands was inspected. This horseshoe section was part of the original stadium and was constructed from large solid-sawn timbers. An informal inspection revealed that the structural members in the horseshoe section were badly decayed. Further evaluation using stress wave timing equipment showed that speed-of-sound transmission was significantly lower in decayed members than in sound wood. Subsequent probing of those areas indicated that the decay was so extensive that only a thin shell of sound wood remained. These results led to the dismantling of the horseshoe section of the stadium.

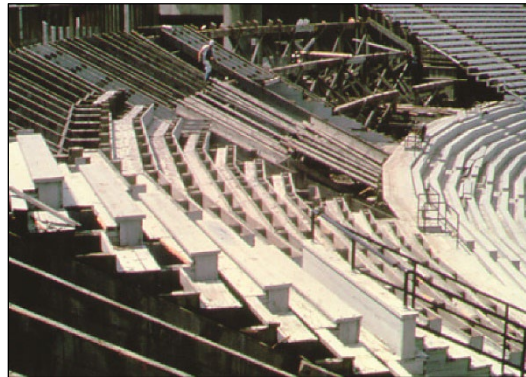



Historic Kennecott Mine Concentration Mill Building

Structure: Timber crib foundation in the Kennecott Concentration Mill Building

Location: Kennecott, Alaska, USA

Special considerations: There was uncertainty about the condition of the timber-cribbing foundation supporting the concentration mill, the largest building in the mine complex.

Brief history of structure:

- Estimated age: 74–99 years
- Inspection date: 2009
- Construction details: Heavy timber crib foundation

The National Historic Copper Mine at Kennecott, Alaska, is an abandoned copper mine within the Wrangell–St. Elias National Park and Preserve. The hallmark structure in the historic mining town is the massive Concentration Mill Building. The 14-story timber building was constructed in many phases between 1910 and 1935, with new additions built as the copper concentration process became more complex. The building foundation consists of a separate heavy timber box crib foundation for each building level that “stair-steps” up the mountainside. The U.S. National Park Service acquired the mining complex in 1998. There was uncertainty about the condition of the timber-cribbing foundation supporting the concentration mill, the largest

building in the mine complex. A comprehensive on-site evaluation of the timber cribbing foundation was performed in summer 2009. The inspection process included visual assessment, species confirmation, moisture content determination, stress wave scanning test, resistance micro-drilling, core drilling, and decay testing. Extensive deterioration was found in the timber-cribbing foundation members at the lower floors of the mill building. The upper levels of the cribbing foundation exhibited much less deterioration, especially in areas where the timber cribbing was not filled with soil. Current efforts are focusing on a comprehensive structural evaluation of the Concentration Mill Building with the goal of stabilizing and preserving this historical mining building important to the cultural heritage of early 20th-century America.

References

Wacker, J.P.; Wang, X.; Rammer, D.R.; Woodward, B.M. 2009. Field investigation of the historic Kennecott Copper Mine: Condition assessment of the heavy timber cribbing foundation walls in the Concentration Mill Building. Final Report to NPS. Anchorage, AK: U.S. Dept of Interior, National Park Service.

Wacker, J.P.; Wang, X.; Rammer, D.R.; Woodward, B.M. 2011. NDE investigation of the timber foundation in the historic Kennecott Mine Concentration Mill Building. In: Proceedings, 17th international nondestructive testing and evaluation of wood symposium, volume 2. Sopron, Hungary: University of West Hungary: 513–521.





Aerial view of the Kennecott Mine complex (left) and a northwest view of the Concentration Mill Building (right).



Stress wave measurements being conducted using a microsecond timer device.



Resistance micro-drilling being performed at a foundation member.

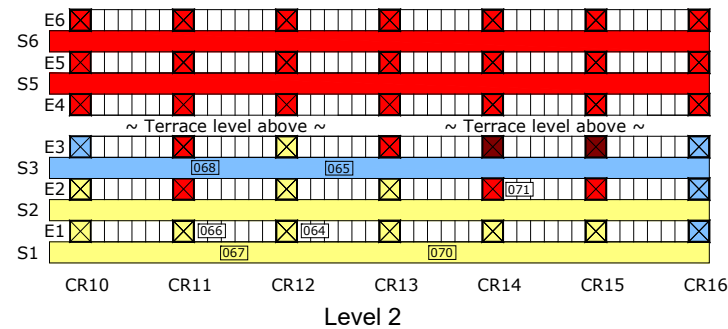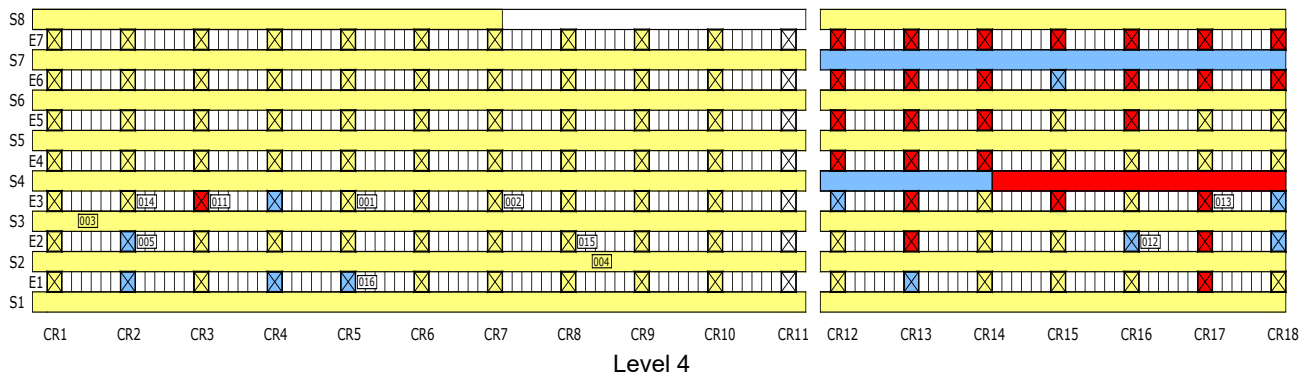

A graphical summary of stress wave scanning and resistance micro-drilling results for levels 2 and 4 of the foundation.

Century-Old Paper Mill Building

Structure: Main timber framing structure

Location: Eau Claire, Wisconsin, USA

Special consideration: The high humidity air condition resulting from the paper making process, a fire event, and water intrusions in the past contributed to the unknown degree of deterioration in the main framing structure.

Brief history of structure:

- Estimated age: 100+ years
- Inspection date: 2012
- Construction details: Heavy timber framing, white pine, red pine, Douglas-fir


A nondestructive inspection procedure was employed to evaluate the true condition of the heavy timbers that serve as the main framing structure of the building. The on-site investigation involved monitoring of the microclimate environment resulting from the paper machine operations, wood species identification, wood moisture content measurements, and internal decay detection using sounding, stress wave timing, and resistance micro-drilling methods. The testing results revealed that numerous locations were in poor condition indicated by widespread internal and external deterioration, reduced cross sections from fire damages, and multiple failed members. Many timber members in the first floor exhibited a very high moisture condition (23% to 55% moisture content) as a result of high humidity air created by the paper-making operations.

This inspection case showcased a new way of presenting the results to the structure owners by creating three-dimensional model-drawings and colored condition mappings.


References

Wang, X.; Wacker, J.P.; Teder, M. 2012. Condition assessment of the timber structures of the paper mill building in Cascade Tissue Group. Report submitted to Cascade Tissue Group. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 17 p.

Wang, X.; Teder, M.; Wacker, J.P. 2013. Condition assessment of the timber structures of a century-old industrial building using a nondestructive inspection procedure. Advanced Materials Research. 778: 840–848. <https://doi.org/10.4028/www.scientific.net/AMR.778.840>

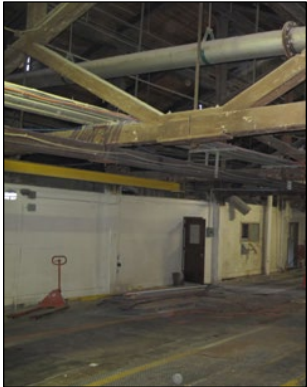

Inside views of the first floor (left) and second floor (right) in the paper mill building.

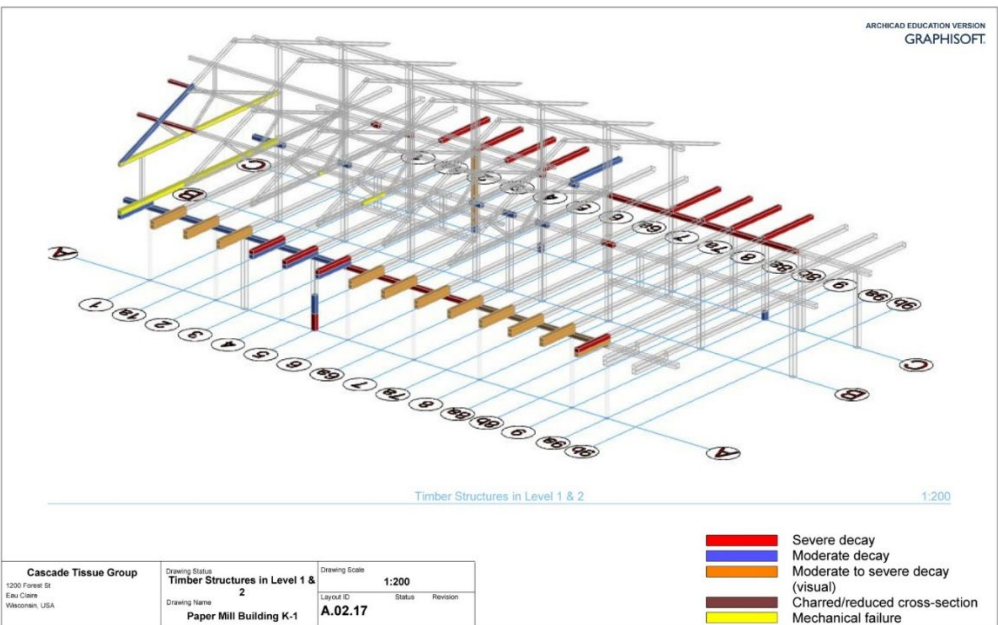

Condition map of the timber structures in levels 1 and 2 of the paper mill building.

USS Constitution

Structure: Three-masted battleship

Location: Boston, Massachusetts, USA

Special Consideration: None

Brief history of structure:






- Estimated age: 200+ years
- Inspection date: Early 1990s
- Construction details: Heavy timber, live oak

The USS Constitution, “Old Ironsides,” was launched on October 21, 1797. She is the oldest commissioned ship afloat in the world. She carries this distinction based on the fact that a significant portion of the ship’s underwater structure is original. Included in this original material are the keel, deadwood, floors, lower planking strakes, and a number of lower frame futtocks. During the 1990s, the U.S. Navy conducted an intensive assessment of the condition of the ship. The sophistication of these tests ran the gamut from signs of deterioration observed through visual inspection to instrumented probes and advanced chemical analyses (Ross et al. 1998, Witherell et al. 1992).

References

Ross, R.J.; Soltis, L.A.; Otton, P. 1998. Assessing wood members in the USS Constitution using non-destructive evaluation methods. APT Bulletin (The Journal of Preservation Technology). XXIX(2):21–25.
<https://doi.org/10.2307/1504514>

Witherell, P.W.; Ross, R.J.; Faris, W.R. 1992. Using today’s technology to help preserve USS Constitution. Naval Engineers Journal. 104(3):124–134.
<https://doi.org/10.1111/j.1559-3584.1992.tb02231.x>

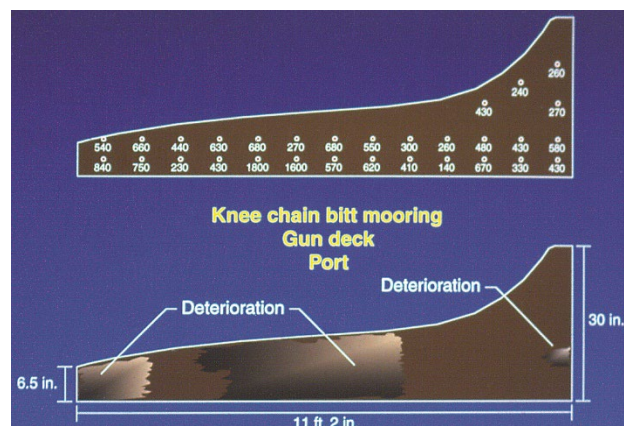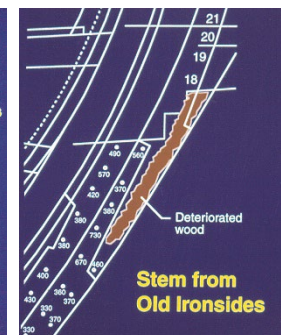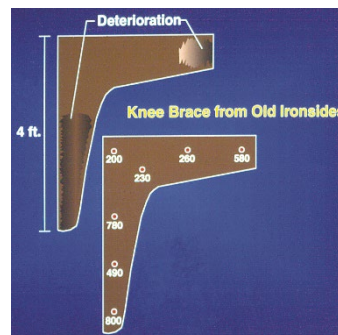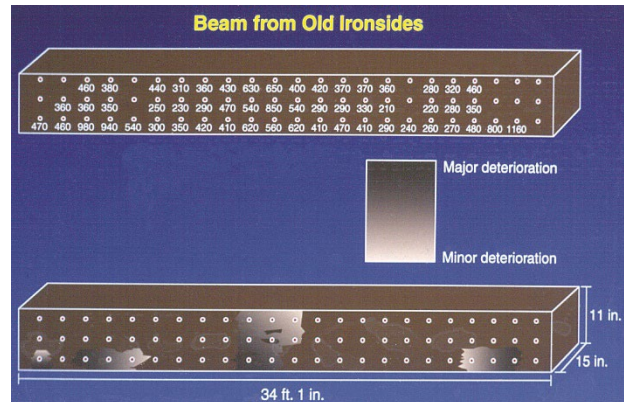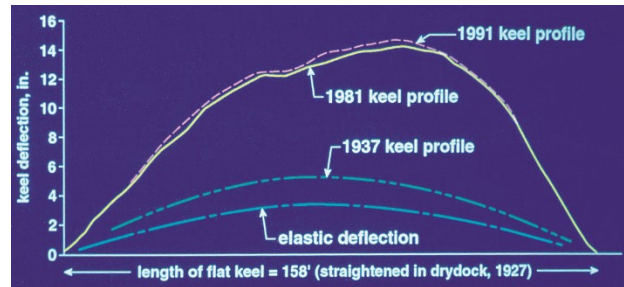

Steam Schooner WAPAMA

Structure: Wooden steam-powered schooner

Location: California State Historical Maritime Park, California, USA

Special Consideration: Last surviving example of wooden steam-powered schooners designed for the 19th- and 20th-century Pacific Coast lumber trade and coastal service

Brief history of structure:

- Estimated age: 91 years at time of inspection
- Inspection date: 2006
- Construction details: Built almost entirely of old-growth Douglas-fir timber, approximately 217 ft long and 50 ft from keel to house top, with a gross tonnage (or internal volume) of 945 GT. Its construction is unique in its use of sister frames and lack of steel strapping. The hull is single decked and characterized by a plum stem, full bows, straight keel, moderate deadrise, and an easy turn of bilge.

A variety of nondestructive test methods were employed to locate problem areas and define the severity of deterioration on key structural members such as keelsons, keel, ceiling planking, hull frames, clamps, and main deck beams.

Reference

Wang X.; Wacker, J.P.; Ross, R.J.; Brashaw, B.K. 2008. Condition assessment of the main structural members of historic steam schooner Wapama. General Technical Report FPL-GTR-177. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. <https://doi.org/10.2737/FPL-GTR-177>



Historic Viewing Towers

Location: Door County, Wisconsin, USA

Brief history of structures:


- Estimated age: 80+ years
- Inspection dates: 2016–2017, 2018
- Construction details: Heavy timber construction

The State of Wisconsin's Department of Natural Resources (WDNR) is responsible for operating one of the largest state park systems in the United States. Peninsula and Potawatomi State Parks, both located on the Door County peninsula, consist of flat to gently rolling upland terrain bordered by steep slopes and rugged limestone cliffs along Lake Michigan's shoreline. These two state parks are among the state's most visited parks and attract more than one million visitors each year. The two wooden observation towers, Eagle Tower and Potawatomi Tower, are the most recognized structures in the state parks and well-known Wisconsin landmarks. The Eagle Tower in Peninsula State Park was built in 1932. It replaced the original tower built on Eagle Bluff, which was constructed in 1914. The observation tower in the Potawatomi State Park was built in 1931. Both towers consisted of three platforms supported by four wood poles, each 75 ft in length. Because of concerns of the structural integrity, the USDA Forest Service, Forest Products Laboratory, was asked to conduct detailed inspection of the main support timbers of the towers, and the inspections using nondestructive testing techniques were summarized in two publications. The findings made from both inspections contributed to the decision by WDNR to remove Eagle Tower and close Potawatomi Tower. Eagle Tower was dismantled in 2016, and a replacement tower built using glued-laminated timber was opened in 2021.

References

Ross, R.J.; Wang, X.; Senalik, C.A.; Allison, R.B.; Zhou, L. 2017. Nondestructive assessment of wood members from a historic viewing tower. Research Note FPL–RN–0349. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 8 p. <https://doi.org/10.2737/FPL-RN-349>

Ross, R.J.; Senalik, C.A.; Wang, X. 2018. Nondestructive assessment of wood members in a viewing tower in Potawatomi State Park, Door County, Wisconsin, USA. Research Note FPL–RN–0366. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 12 p. <https://doi.org/10.2737/FPL-RN-366>

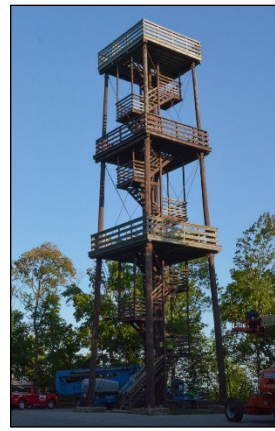

Historic Eagle Tower (left), once located in Peninsula State Park, and Potawatomi Tower (right), located in Potawatomi State Park.



The replacement of Eagle Tower, built with glued-laminated timber, was opened in 2021.

Mummy Coffin

Structure: Mummy coffin

Location: Nelson–Atkins Museum of Art, St. Louis, Missouri, USA

Special Consideration: Historically important Egyptian artifact

Brief history of structure:

- Estimated age: 2,500 years at time of inspection
- Inspection date: 2009
- Construction details: Natural paints, timber joinery

The country of Egypt provides us with some of the best-preserved wood artifacts because of several factors. First, despite the paucity of indigenous trees capable of producing wood in sufficient sizes to make large timbers, ancient Egyptians used wood extensively in a wide variety of applications. Second, the arid climate in Egypt provides an excellent environment for long-term preservation of wood. Consequently, excavations of various archeological sites in Egypt have yielded many well-preserved wood artifacts.

Mummy coffins are the best examples of Egyptian wood artifacts. As some of the most precious, ancient pieces at the largest museums in the world, mummy coffins provide

scientists very important information about social, religious, and cultural beliefs of ancient Egyptians. This wood mummiform coffin, dated to the first millennium B.C., is part of a group of funerary objects acquired by the museum in 2007, scheduled for display in 2010 in a newly designed gallery space. The assessment was conducted to provide information on the condition of the coffin to museum staff responsible for designing and constructing appropriate support mechanisms for its display.

The coffin was constructed from sycamore fig trees, *Ficus sycomorosa*. This tree species was known as the “tree of life” in ancient Egypt and was cultivated commonly. Visual inspection and stress wave techniques were used to assess the condition of the upper and lower portions of the coffin. Much of the wood was solid, with no deterioration present. Estimates of several important mechanical properties were made.

Reference

Ross, R.J.; Dunder, T. 2012. Condition assessment of a 2500-year-old mummy coffin. Research Note FPL–RN–0327. Madison, WI: U.S. Department of Agriculture, Forest Service, Forest Products Laboratory. 3 p.
<https://doi.org/10.2737/FPL-RN-327>

